

Linux

USB Deviceserver INU-100



Manufacturer & Contact

SEH Computertechnik GmbH Suedring 11 33647 Bielefeld

Germany

Phone: +49 (0)521 94226-29 Fax: +49 (0)521 94226-99 Support: +49 (0)521 94226-44

Email: info@seh.de

Web: https://www.seh-technology.com



Document

Type: User Manual

Title: INU User Manual Linux

Version: 1.2 | 2021-07

Legal Information

SEH Computertechnik GmbH has endeavored to ensure that the information in this documentation is correct. If you detect any inaccuracies please inform us at the address indicated above. SEH Computertechnik GmbH will not accept any liability for any error or omission. The information in this manual is subject to change without notification.

The original manual is the German version of this document and shall govern. All non-German versions of this document are translation of the original manual.

All rights are reserved. Copying, other reproduction, or translation without the prior written consent from SEH Computertechnik GmbH is prohibited.

© 2021 SEH Computertechnik GmbH

All trademarks, registered trademarks, logos and product names are property of their respective owners.

INU User Manual Linux

Contents

1	General Information	1
1.1	Product	
1.2	Documentation	4
1.3	Support and Service	5
1.4	Your Safety	6
1.5	First Steps	7
2	Administration Methods	8
2.1	Administration via INU Control Center	9
2.2	3	
2.3	Administration via Email	18
3	Network Settings	20
3.1	How to Configure IPv4 Parameters	21
3.2	How to Configure IPv6 Parameters	23
3.3	How to Configure the DNS	25
3.4	How to Configure SNMP	26
3.5	How to Configure Bonjour	
3.6	5 ,	
3.7	How to Use the INU Server in VLAN Environments	30
4	Device Settings	32
4.1	How to Configure the Device Time	33
4.2	How to Assign a Description	34
4.3	<i>3</i>	
4.4		
4.5		
4.6	3	
4.7	How to Use the Relay	39
5	Working with the SEH UTN Manager	41
5.1	How to Find INU Servers/USB Devices in the Network	
5.2		
5.3	How to Cut the Connection between the USB Device and the Client	
5.4	·	
5.5	5	
5.6		
5.7	3	
5.8	How to Use the SEH UTN Manager without Graphical User Interface (utnm)	52
6	Security	56
6.1	How to Encrypt the USB Connection	57
6.2	· · · · · · · · · · · · · · · · · · ·	
6.3	,, <u> </u>	
6.4		
6.5		
6.6		
6.7	How to Block USB Device Types	66

INU User Manual Linux

5.8 5.9	How to Use Certificates How to Configure Network Authentication (IEEE 802.1X)	
7	Maintenance	75
7.1	How to Restart the INU Server	76
7.2	How to Update	77
7.3	How to Backup Your Configuration	
7.4	How to Reset Parameters to their Default Values	80
8	Appendix	81
3.1	Troubleshooting	82
3.2	Parameter Lists	85
3.3	SEH UTN Manager – Feature Overview	105
3.4	Index	107

1 General Information

- Your Safety ⇒ 🖺 6
- First Steps ⇒ 🖺 7

1.1 Product

Purpose

INU servers integrate non-network-ready USB devices (e.g. USB sensors, USB cameras, etc.) into an industrial environment via TCP/IP network. For this purpose, the USB devices will be connected to the USB ports of the INU server. Then the UTN (UTN = USB to Network) functionality and the corresponding software tool 'SEH UTN Manager' establish a virtual USB connection between USB device and client. The USB device can be used as if it were connected locally.

In addition, a load can be connected to and then used via the relay of the INU server. By default, predefined events and errors switch the relay. For example, an active connection to a USB device can be visualized by a lamp or the loss of a power supply by an acoustic alarm signal. Alternatively, the relay can be switched manually or via SNMP. Thus diverse, individually adapted relay scenarios can be set up in your environment.

System Requirements

The UTN server has been designed for the use in TCP/IP networks.

The SEH UTN Manager can be used in the following systems:

- Microsoft Windows (32/64-Bit; Windows 10 or higher, Server 2012 R2 or higher)
- macOS 10.9 or higher ¹
- Linux (Debian 10, Ubuntu 20.0.4, Red Hat Enterprise Linux 8, Oracle 8, CentOS 8, SUSE Linux Enterprise 15.1, openSUSE Leap 15.1) ²
- IPv4 TCP/IP network

The SEH Product Manager can be used under the following systems:

- Microsoft Windows (32/64-Bit; Windows 10 or higher, Server 2012 R2 or higher)
- macOS 10.12.x or higher
- IPv4 TCP/IP network



The support of isocuro...
depends on

• the operating system:

- Windows

- macOS

- Linux

• the software version:

- firmware/software for UTN servers: 14.5.5 or later

SFH UTN Manager: 3.1.4 or later The support of isochronous USB devices (e.g. cameras, microphones, speakers, etc.)

This document describes the usage in Linux environments. Information about the usage in other environments can be found in the relevant system-specific User Manual. More details can be found in chapter 'Documentation' **⇒ 1**4.

^{1.} macOS 11.x (Big Sur) only limited USB device support not running on Apple Silicon (Apple M1 chip) based Macs

^{2.} A successful installation cannot be guaranteed due to the variety of Linux systems! The installation must be carried out under your own responsibility.

Combination with Associated Products

You can combine the INU server with additional SEH Computertechnik GmbH products to ideally adapt the use of your devices to your environment!

Industrial Solution 'IH-304 USB Hub'

The industrial solution IH-304 is a USB hub with four USB 3.0 ports. If it is connected to the INU server, up to four USB devices can be used per INU server USB port. This is a most efficient solution for control cabinets with little space.

The IH-304 must be purchased separately. Detailed information:

https://www.seh-technology.com/products/industrial-solutions/ih-304.html



Industrial Solution 'SU-302 Serial to USB Converter

The industrial solution SU-302 is a serial to USB converter. It can be connected to the INU server via USB and allows for the use of two serial devices via its interfaces RS-232 (for plug type D-Sub, DE-9) and RS-485 (also known as EIA-485; compatible with RS-422/EIA-422).

By combining the INU server and SU-302 you make your serial devices available via network (TCP/IP, Internet)!

https://www.seh-technology.com/products/industrial-solutions/su-302.html



Industrial Solutions 'Top-Hat Rail Power Supplies'

All Industrial Solutions are mounted on a top-hat rail in a control cabinet. The USB Deviceserver INU-100 and the USB Hub IH-304 are to be connected to a power supply. You either use your existing power supply or—if there is none or no vacancy—you can buy a new one.

Spare yourself the search and use the top-hat rail power supplies DRP-20 and DRP-75 which are specifically selected to perfectly match the industrial solutions!

https://www.seh-technology.com/products/industrial-solutions/accessories.html



1.2 Documentation



Please load all current documents from our Website: https://www.seh-technology.com

Further applicable documents

Thee INU documentation consists of the following documents:

tion and declarations of conformity

Quick Installation Guide Print, PDF Description of initial setup

User Manual PDF Detailed description of the INU server configuration,

administration and maintenance. System-specific instruc-

tions for the following systems:

- Windows- macOS- Linux

Online help HTML Information on how to use the web interface 'INU Control

Center'.

(Embedded into web interface; no download.)

Product information print, PDF Features and technical data

Brochures print, PDF

Open Source Licenses online https://www.seh-technology.com/services/licenses.html

Symbols and Legend

A variety of symbols and mark-ups are used within this document.



WARNING

Warning A warning contains important information that must be heeded. Non-

observance may lead to malfunctions.



Important:

Important information These notes contain crucial information for failure-free operation.

✓ Requirement Requirements that must be met before you can begin the action.

Numeration Listing

1. Numeration Step-by-step instructions

→ Result Outcome of a performed action

Tip
Recommendations and beneficial advice

Reference (Within the document you can use hyperlinks.)

Bold Established terms (e.g. of buttons, menu items, or selection lists)

Courier Code (e.g. for command lines or scripts), Paths
'Proper names' Single quotation marks identify proper names

1.3 Support and Service

SEH Computertechnik GmbH offers extensive Support. If you have any questions, please contact us.



Monday through Thursday 8:00 a.m. to 4:45 p.m. Friday 8:00 a.m. to 15:15 p.m.



+49 (0)521 94226-44



support@seh.de

Customers from the United States of America (USA) and Canada please contact North American Support:



Monday - Friday

9:00 am – 5:00 pm (EST/EDT)



+1-610-933-2088



support@sehtechnology.com

All information and downloads regarding your product is available on our website:



https://www.seh-technology.com



1.4 Your Safety

Read and observe all safety regulations and warnings found in the documentation, on the device and on the packaging. This will avoid potential misuse and prevent damages to people and devices.

Intended Use

The INU server is used in TCP/IP networks and has been designed for use in industrial environments. It allows network users to access non-network-ready USB devices. In addition, a load can be connected to and then used via the relay of the INU server.

Improper Use

All uses of the device that do not comply with the functionalities described in the INU documentation are regarded as improper uses.

Safety Regulations

Before starting the initial setup of the INU server, read and observe the safety regulations in the 'Hardware Installation Guide'. This document is enclosed in the packaging in printed form.

Warnings

Read and observe all warnings mentioned in this document. Warnings are found before any instructions known to be dangerous. They are presented as follows:



WARNINGWarning!

Liability and Guarantee

SEH Computertechnik GmbH will not accept any liability for personal injuries, property damages and consequential damages resulting from the non-observance of the mentioned safety regulations and warnings. Non-observance will also result in any guarantee claims becoming void.

Modifications to the Device and Repairs

It is not allowed to make modifications to the hardware and software or to try to repair the device. If your device needs to be repaired, contact our support $\Rightarrow \blacksquare 5$.

1.5 First Steps

- 1. Read and observe the security regulations in order to avoid damages to people and devices \Rightarrow \blacksquare 6.
- 2. Install the hardware. The hardware installation includes connecting the INU server to the network, USB devices, and power grid \Rightarrow \square 'Hardware Installation Guide'.
- 3. Install the software. The software installation includes installing the required software tool 'SEH UTN Manager' on your client and assigning an IP address ⇒ □ 'Software Installation Guide'.
- 4. Configure the INU server so that it is optimally embedded it into your network and sufficiently protected. All information on how to do this you will find in this document.
- 5. Use the SEH UTN Manager to establish and manage connections to the USB devices which are connected to the INU server.



You can find information on the INU documentation in chapter 'Documentation' $\Rightarrow \mathbb{B}4$.

2 Administration Methods

You can administer, configure and maintain the INU server in a number of ways:

- Administration via the SEH UTN Manager

 □ □11

2.1 Administration via INU Control Center

The INU server has a user interface, the INU Control Center which can be opened in an Internet browser (e.g. Mozilla Firefox).

The INU server can be configured, monitored and maintained via the INU Control Center.

Open INU Control Center in Browser

- ✓ The INU server is connected to the network and the power grid.
- 1. Open your browser.
- 2. Enter the IP address of the INU server as the URL.
- → The INU Control Center is displayed in the browser.



Important:

If the INU Control Center is not displayed, check if a gateway is configured (⇒ 🖺 21) and the proxy settings of your browser.

INU Open Control Center via SEH UTN Manager

- ✓ The INU server is connected to the network and the power grid.
- ✓ The SEH UTN Manager is installed on the client ⇒ 🖺 11.
- 1. Start the SEH UTN Manager.
- 2. In the selection list, select the INU server.
- 3. In the menu bar, select **UTN Server–Configure**.
- → Your browser opens and the INU Control Center is displayed.

Controls

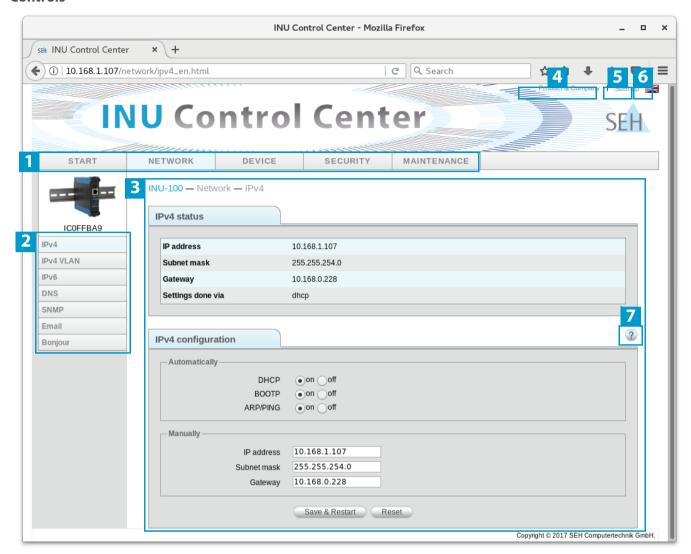


Figure 1: INU Control Center

1	Menu item	After selecting a menu item (simple mouse click), the available submenu items are displayed to the left.
2	Submenu items	After selecting a submenu item, the corresponding page with its content is displayed.
3	Page	Menu content
4	Product & Company	Manufacturer's contact details and additional product information.
5	Sitemap	Overview of and direct access to all pages of the INU Control Center.
6	Flags	Language selection
7	? icon	Online help

2.2 Administration via the SEH UTN Manager

The 'SEH UTN Manager' is a software tool developed by SEH Computertechnik GmbH. The SEH UTN Manager is used to establish and manage connections to the USB devices connected to the INU servers.

- Installation

 □ 13
- Program Start ⇒ 17

Features

The software is installed on all clients that are meant to access a USB device in the network. After the SEH UTN Manager is started, the network is scanned for connected INU servers. All INU servers found and their connected USB devices are displayed in the 'network list'. To use the USB devices connected to the INU server, you have to add the INU server to the 'selection list'. The devices shown in the selection list can be administrated and the connected USB devices can be used. Working working with the SEH UTN Manager is described in detail in the chapter 'Working with the SEH UTN Manager' \Rightarrow 141.



WARNING

UTN (\Rightarrow \blacksquare 2) and the corresponding SEH UTN Manager only work in IPv4 networks. In IPv6-only networks only the INU Control Center (\Rightarrow \blacksquare 9) can be accessed to administrate the INU server.

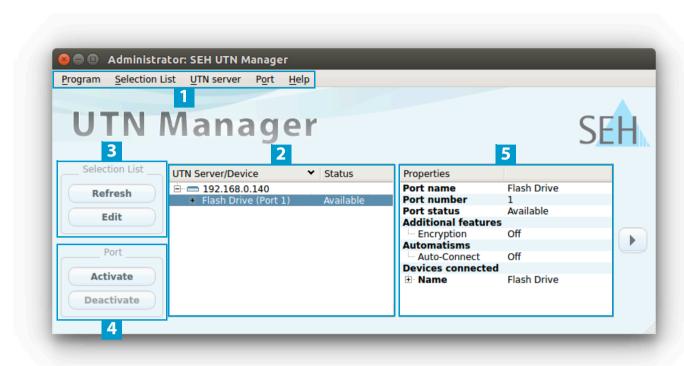


Abbildung 2: SEH UTN Manager

Menu bar

1

•	mena sai	/ Wallable Hiera Reins
2	Selection List	Shows the selected INU servers and the connected USB devices.
3	Buttons for editing the selection list	Opens the dialog for searching INU servers in the network and for selecting the desired devices \Rightarrow \blacksquare 42.
4	Buttons for managing the port connection	Establishes a connection to the USB device connected to the USB port (\Rightarrow \implies 44) or interrupts the connection (\Rightarrow \implies 45).
5	Display area for the proper- ties	Shows information on the selected INU server or USB device \Rightarrow \blacksquare 49.

Available menu items

Detailed information on how to use the SEH UTN Manager can be found in the $\Rightarrow \Box$ 'SEH UTN Manager Online Help'. To start the online help, go to the SEH UTN Manager menu bar and select **Help** – **Online Help**.



Important:

Some SEH UTN Manager features might not be displayed or are displayed as inactive. This depends on

- the type and location of the selection list
- the user's rights and the group memberships on the client
- · the client operating system
- the settings of the product-specific security mechanisms
- the status of the INU server and respective USB port

More details can be found in chapter 'SEH UTN Manager – Feature Overview' ⇒

105.

Versions

The SEH UTN Manager is available in two versions:

- Complete Version:
- Minimal version (without graphical user interface): Usage only via command line ('utnm' ⇒ 152).



Important:The complete version is recommended for general use.
The minimal version is to be used by experts only!

In both versions the 'SEH UTN Service' (Daemon) works in the background and is automatically active after the system start.

Additionally, the following user groups are distinguished:

- users with administrative rights (administrator)
- users without administrative rights (standard user)



Important:

Some features can only be configured by administrators. More details can be found in chapter 'SEH UTN Manager – Feature Overview' \Rightarrow 105.

Installation

In order to use the SEH UTN Manager, the program must be installed on a computer with a Linux operating system. The SEH UTN Manager installation file can be found on the SEH Computertechnik GmbH website:

https://www.seh-technology.com/us/services/downloads.html



The following installation packages are available for Linux systems (64-bit):

- *.deb (for 64-bit Debian-based systems)
- *.rpm (for 64 bit Red Hat-based systems)



A successful installation cannot be guaranteed due to the multitude of Linux vari-

The installation must be carried out on your own.

SEH Computertechnik GmbH provides installation support upon request for a fee

The installation was successfully tested in the following 64-bit systems:

- Debian: Debian10, Ubuntu 20.0.4
- Red Hat: Red Hat Enterprise Linux 8, Oracle 8, CentOS 8, openSUSE Leap 15.1

Installation requirements

- ✓ deb: Linux kernel 2.6.32 or later, glibc 2.15 or later, DKMS (Dynamic Kernel Module Support)
- ✓ rpm: Linux kernel 2.6.32 or later, glibc 2.12 or later, DKMS (Dynamic Kernel Module Support)

There are four installation packages:

- 1) driver
- 2) service (SEH UTN service/daemon)
- 3) clitool (command line interface tool 'utnm')
- 4) manager (graphical user interface)

The number of installed packages determines the version of the SEH UTN Manager:

package 1)-3): minimal version

package 1)-4): complete version



Important:

Install the packages in the order given above to comply with their dependencies.

The installation of the files depends on the distribution. For more information, refer to the documentation of your operating system.



Important:

Installation must only be carried out by experienced users.

Some installation examples are given below.



Important:

Knowledge Base articles with further installation information for Linux (e.g. installation of DKMS and the UEFI Secure Boot problem) are available at the SEH Computertechnik GmbH website:

https://www.seh-technology.com/services/knowledgebase.html



<u>Installing the SEH UTN Manager in Ubuntu 16.04.x LTS (64-Bit) via Software Management</u>

- ✓ Linux kernel 2.6.32 or later
- ✓ glibc 2.15 or later
- ✓ OpenSSL 1.0.1 or later
- ✓ DKMS (Dynamic Kernel Module Support) is installed on the client.
- ✓ The user used can gain root privileges via the command sudo.
- 1. Start installation package no. 1.

The **Ubuntu Software** appears.

2. Click Install.

A password prompt appears.

- 3. Authenticate yourself with your password. The package will be installed on your client.
- 4. Repeat steps 1 through 3 with the remaining packages.
- 5. Add all users that are to administrate the SEH UTN Manager on the client to the user group 'utnusers'. To do this, open a **Terminal** and enter the command:

```
sudo usermod -aG utnusers <user name>
```

- 6. Logout and login again so that the group changes take effect.
- ☐ The SEH UTN Manager is installed on your client. Check the installation by starting the SEH UTN Manager (☐ 17) and activating a connection to the USB port including the connected USB device. All information on this can be found in chapter 'Working with the SEH UTN Manager' ☐ 41.

<u>Installing the SEH UTN Manager in Ubuntu 20.0.4.x LTS (64-Bit) via Software Management</u>

- ✓ Linux kernel 2.6.32 or later
- ✓ alibc 2.15 or later
- ✓ OpenSSL 1.0.1 or later
- ✓ DKMS (Dynamic Kernel Module Support) is installed on the client.
- ✓ The user used can gain root privileges via the command sudo.
- 1. Open a Terminal.
- 2. Install the headers for your kernel:

```
sudo apt-get install linux-headers-`uname -r`
```

3. Verify, that the version numbers of kernel and headers match exactly:

Kernel: uname -r

Header: sudo apt list --installed | grep linux-headers



WARNING

The version numbers must be identical. Otherwise, the SEH UTN Manager packages cannot be installed correctly.

If kernel and headers do not match, you must create a match on your own.

4. Change to the directory containing the SEH UTN Manager packages:

cd <dirctory>

5. Install the desired SEH UTN Manager packages:

```
sudo dpkg -i <full package name>
```

6. Add all users that are to administrate the SEH UTN Manager on the client to the user group 'utnusers'. To do this, open a **Terminal** and enter the command:

```
sudo usermod -aG utnusers <user name>
```

- 7. Logout and login again so that the group changes take effect.
- → The SEH UTN Manager is installed on your client. Check the installation by starting the SEH UTN Manager (⇒ 17) and activating a connection to the USB port including the connected USB device. All information on this can be found in chapter 'Working with the SEH UTN Manager' ⇒ 41.

Installing the SEH UTN Manager in Ubuntu 20.0.4.x LTS (64-Bit) via Terminal

- ✓ Linux kernel 2.6.32 or later
- ✓ glibc 2.15 or later
- ✓ OpenSSL 1.0.1 or later
- ✓ DKMS (Dynamic Kernel Module Support) is installed on the client.
- ✓ The user used can gain root privileges via the command sudo.
- 1. Open a Terminal.
- 2. Install the headers for your kernel:

```
sudo yum install kernel-devel-`uname -r`
```

3. Verify, that the version numbers of kernel and headers match exactly:

Kernel: uname -r

Header: sudo yum list | grep kernel-headers



WARNING

The version numbers must be identical. Otherwise, the SEH UTN Manager packages cannot be installed.

If kernel and headers do not match, you must create a match on your own.

4. Change to the directory containing the SEH UTN Manager packages:

cd <dirctory>

5. Install the desired SEH UTN Manager packages:

sudo yum install <full package name>

6. Add all users that are to administrate the SEH UTN Manager on the client to the user group 'utnusers'. To do this, open a **Terminal** and enter the command:

```
sudo usermod -aG utnusers <user name>
```

- 7. Logout and login again so that the group changes take effect.
- → The SEH UTN Manager is installed on your client. Check the installation by starting the SEH UTN Manager (⇒ 17) and activating a connection to the USB port including the connected USB device. All information on this can be found in chapter 'Working with the SEH UTN Manager' ⇒ 41.

Program Start

To start the SEH UTN Manager, go to the launcher and call 'UTN Manager' via Dash (search) or go to **Terminal** an run the command utnmanager.

Update

You can check for program updated manually and automatically. More information can be found in the $\Rightarrow \Box$ 'SEH UTN Manager Online Help'.

INU User Manual Linux Administration Methods

2.3 Administration via Email

You can administrate the INU server via email and thus from any computer Internet access (remote access):

- · Get INU server status
- Set INU server parameters
- · INU server update

To do so, you write commands into the email message header ⇒Table 1 18.

Table 1: Commands and comment:

Commands	Option	Description
<command/>	get status	You get the INU server status page.
	get parameters	You get the INU server parameter list.
	set parameters	Sends one or more parameters to the INU server which will then be adopted by the INU server.
		Write the parameters and their values into the email message body: <pre><pre>cyalue></pre></pre>
		The syntax and values can be found in the parameter lists \Rightarrow \blacksquare 85.
	update utn	Carries out an automatic update using the software that is attached to the mail.
	help	You get a page with information on remote maintenance.
[<comment>]</comment>		Freely definable text for descriptions.

The following applies to the instructions:

- · not case-sensitive
- one or more space characters are allowed
- · max. length is 128 byte
- only the ASCII format can be read.

In addition, a TAN is needed to execute updates or parameter changes. To begin with, you have to get a status page via email (⇒Table 1 18) because it contains the TAN. You enter the received TAN into the email message body. A space character must follow.

- ✓ A DNS server is configured on the INU server ⇒ \(\bigle 25. \)
- ✓ In order to receive emails, the INU server must be set up as user with its own email address on a POP3 server.
- ✓ POP3 and SMTP parameters have been configured on the INU server ⇒

 28.
- 1. Open an email program.
- 2. Write a new email:
 - As recipient enter the INU server address.
 - Into the subject line enter an instruction. cmd: <command> [<comment>]

 Commands and comment: ⇒Table 1 18.
 - Into the email message body enter a TAN, if applicable.
- 3. Send the email.
- → The INU server receives the email and carries out the instruction.

Examples

You want to get the INU server parameter list:

To: INUserver@company.com
Subject: cmd: get parameters

You want to set the 'configuration' parameter:

To: INUserver@company.com
Subject: cmd: set parameters

Email message body: TAN = nUn47ir79Ajs7QKE

sys descr = <Your description>

3 Network Settings

To optimally embed your INU server into your network, you can configure the following settings:

- How to Configure IPv6 Parameters ⇒ 23

- How to Configure Bonjour ⇒ 🖺 27
- How to Configure Email (POP3 and SMTP) ⇒ 128
- How to Use the INU Server in VLAN Environments ⇒ 🖹 30

3.1 How to Configure IPv4 Parameters

In the hardware installation (\Rightarrow [L] 'Hardware Installation Guide') the INU server is connected to the network. The INU server then checks if it gets IP address dynamically via the boot protocols BOOTP (Bootstrap Protocol) or DHCP (Dynamic Host Configuration Protocol). If this is not the case, the INU server assigns itself an IP address via Zeroconf from the address range which is reserved for Zeroconf (169.254.0.0/16).



Important:

If the INU server is connected to an IPv6 network, it will automatically receive an additional IPv6 address ⇒ 123.

The IPv4 address assigned to the INUs erver can be found via the software tool 'SEH UTN Manager'. This step usually is carried out during the initial set up ($\Rightarrow \Box$) 'Quick Installation Guide').

To optimally embed the INU server into a TCP/IP network, you can configure different IPv4 parameters and/or manually assign a static IP address to it.

- Determining the IPv4 Address via SEH UTN Manager and Configuring IPv4 Parameters ⇒ ■22

Configuring IPv4 Parameters via the INU Control Center

- 1. Start the INU Control Center.
- Select NETWORK IPv4.
- 3. Configure the IPv4 parameters; ⇒Table 2 \(\bigsiz 22.
- 4. Click Save & Restart to confirm.
- → The settings will be saved.

Table 2: IPv4 parameters

Parameters	Description
DHCP	Enables or disables the protocols DHCP, BOOTP, and ARP/PING.
BOOTP ARP/PING	The IP address assignment via DHCP and BOOTP is automatic if one of these protocols is implemented in your network.
	You can use the commands ARP and PING to change an IP address which was assigned via Zeroconf. The implementation depends on your system; read the documentation of your operating system.
	We recommend disabling these options once an IP address has been assigned to the INU server.
IP address	IP address of the INU server.
Subnet mask	Subnet mask of the INU server.
	Subnet masks are used to logically partition big networks into subnetworks. If you are using the INU server in a subnetwork, it requires the subnet mask of the subnetwork.
Gateway	IP address of the network's standard gateway which the INU server uses.
	With a gateway, you can address IP addresses from other networks.

Configuring IPv4 Parameters via SEH UTN Manager

- ✓ The SEH UTN Manager (complete version) is installed on the client \Rightarrow \(\bigsim 11.
- ✓ The INU server is shown in the selection list \Rightarrow \triangleq 42.
- 1. Start the SEH UTN Manager.
- 2. In the selection list, select the INU server.
- In the menu bar, select UTN Server-Set IP Address.
 The Set IP Address dialog appears.
- 4. Enter the relevant TCP/IP parameters.
- 5. Click OK.
- → The settings will be saved.

Determining the IPv4 Address via SEH UTN Manager and Configuring IPv4 Parameters

The SEH UTN Manager searches the network for connected INU servers.

- ✓ The SEH UTN Manager (complete version) is installed on the client \Rightarrow \(\bigsim 11.
- 1. Start the SEH UTN Manager.
- Confirm the note dialog Your Selection List seems to be empty with Yes.
 If no note dialog is available and the main dialog appears, select Selection List-Edit in the menu bar.
 The Edit Selection List dialog appears.
- 3. In the network list, select the INU server.



If you are using several INU servers, you can identify a specific device by its default name ($\Rightarrow B81$) or the connected USB devices.

- 4. In the shortcut menu, select **Set IP Address**.
 - The **Set IP Address** dialog appears.
- 5. Enter the relevant TCP/IP parameters.
- 6. Click OK.
- → The settings will be saved.

3.2 How to Configure IPv6 Parameters

IPv6 (Internet Protocol Version 6) is the successor of the still predominantly used IPv4 (Internet Protocol Version 4). IPv6 offers the same basic functions but has many advantages such as the increased address space of 2^{128} (IPv4) IP addresses and auto configuration.



Important:

IPv6 address notation differs from IPv4: An IPv6 address consists of 128 bits. The normal format of an IPv6 address is eight fields. Each field contains four hexadecimal digits representing 16 bits.

Example: 2001:db8:4:0:2c0:ebff:fe0f:3b6b

As a URL in a Web browser, an IPv6 address must be enclosed in square brackets. This prevents port numbers from being mistakenly regarded as part of an IPv6 address.

Example: http://[2001:db8:4:0:2c0:ebff:fe0f:3b6b]:443

The URL will only be accepted by browsers that support IPv6.

You can embed the INU server into an IPv6 network.



WARNING

UTN (⇒ 🖹 2) and the corresponding SEH UTN Manager only work in IPv4 networks. The SEH Product Manager also only works in IPv4 networks.

In IPv6-only networks only the INU Control Center (\Rightarrow \blacksquare 9) can be accessed to administrate the INU server.

The INU server will automatically receive one or more IPv6 addresses in addition to its IPv4 address. To optimally embed the INU into your network, you can configure IPv6 parameters.

- 1. Start the INU Control Center.
- Select NETWORK IPv6.
- 3. Configure the IPv6 parameters; ⇒Table 3 \(\bigsi24.
- 4. Click Save & Restart to confirm.
- → The settings will be saved.

Table 3: IPv6 parameters

Parameters	Description
IPv6	Enables/disables the IPv6 functionality of the INU server.
Automatic configuration	Enables/disables the automatic assignment of the IPv6 address to the INU server.
IPv6 address	Defines an IPv6 unicast address in the format n:n:n:n:n:n:n:n which is manually assigned to the INU server.
	 Every 'n' represents the hexadecimal value of one of the eight 16 bit elements of the address.
	 Leading zeros can be omitted.
	 An IPv6 address may be entered or displayed using a shortened version when successive fields contain all zeros (0). In this case, two colons (::) are used.
Router	Manually defines a static router to which the INU server sends its requests.
Prefix length	Defines the length of the subnet prefix for the IPv6 address. The value 64 is preset.
	Address ranges (e.g. your network) are specified with prefixes. To do this, the prefix length (number of bits used) is added to the IPv6 address as a decimal number and the decimal number is preceded by '/'.

3.3 How to Configure the DNS

DNS is a service to translate domain names into IP addresses and vice versa. Enable DNS so that you can enter host names instead of IP addresses when you define servers.

Example: Time server configuration (⇒ ■33) with ntp.server.de instead of 10.168.0.140.



Important:

If your network in configured accordingly, the INU server receives the DNS settings automatically via DHCP. A DNS server assigned in such a manner always takes precedence over manual settings.

- ✓ Your network has a DNS server.
- 1. Start the INU Control Center.
- 2. Select **NETWORK DNS**.
- 3. Configure the DNS parameters; ⇒Table 4 \(\bigsize 25.
- 4. To confirm, click Save.

Table 4: The settings will be saved.DNS parameters

Parameters	Description
DNS	Enables/disables the name resolution via a DNS server.
Primary DNS server	Defines the IP address of the primary DNS server.
Secondary DNS server	Defines the IP address of the secondary DNS server.
	The secondary DNS server is used if the first one is not available.
Domain name (suffix)	Defines the domain name of an existing DNS server.

3.4 How to Configure SNMP

SNMP (Simple Network Management Protocol) is protocol for configuring and monitoring network elements. The protocol controls communication between the monitored devices and the monitoring station (SNMP management tool). Information can be read and changed.

SNMP exists in 3 versions, the INU supports version 1 and 2.

SNMPv1

SNMPv1 is the first and most simple SNMP version. A disadvantage is the insecure access control which is the community: a community groups monitoring station and monitored devices. This makes their administration easier. There are two types of communities, read-only and read/write. For both the community name is also the password used between the monitoring station and the monitored devices. As it is transmitted as clear text, it does not offer sufficient protection.

SNMPv3

SNMPv3 is the newest SNMP version. It contains enhancements and a new security concept which includes, amongst other thins, encryption and authentication. Therefore, a SNMP user with name and password must be created in the monitoring station. This user must then be specified in the INU server.



Important:

The user accounts are also used to access the INU Control Center and thus are to be defined under **SECURITY** - **Device access** 'How to Protect Access to the INU Control Center (User Accounts)' \Rightarrow \triangleq 62.

- ✓ SNMPv3 users are created in the monitoring station. (Only for SNMPv3.)
- ✓ The SNMPv3 users from the monitoring station are specified on the INU server ⇒ 162. (Only for SNMPv3.)
- 1. Start the INU Control Center.
- 2. Select **NETWORK SNMP**.
- 3. Configure the SNMP parameters; ⇒ Table 5 \(\bigsize 26. \)
- 4. To confirm, click **Save**.

Table 5: The settings will be saved. SNMP Parameters

Parameters	Description
SNMPv1	Enables/disables SNMPv1.
Read-only	Enables/disables the write protection for the community.
Community	SNMP community name Enter the name as it is defined in the monitoring station.
	Important: The default name is 'public'. This name is commonly used for read/write communities. We recommend to change it as soon as possible to increase security.
SNMPv3	Enables/disables SNMPv3.
Hash	Defines the hash algorithm.
Access rights	Defines the access rights of the SNMP user.
Encryption	Defines the encryption method.

3.5 How to Configure Bonjour

Bonjour is a technology which automatically detects devices and services in TCP/IP networks.

The INU server uses Bonjour to

- · verify IP addresses
- · announce and find network services
- match host names and IP addresses
- 1. Start the INU Control Center.
- 2. Select NETWORK Bonjour.
- 3. Configure the Bonjour parameters; ⇒ Table 6 \(\bigsize 27. \)
- 4. To confirm, click **Save**.
- \rightarrow The settings will be saved.

Table 6: Bonjour parameters

Parameters	Description
Bonjour	Enables/disables Bonjour.
Bonjour name	Defines the Bonjour name of the INU server.
	The INU server uses this name to announce its Bonjour services. If no Bonjour name is entered, a default name will be used (device name@ICxxxxxxx).

3.6 How to Configure Email (POP3 and SMTP)

The INU server can be administered via email (\Rightarrow 18) and offers a notification service (\Rightarrow 38) which sends you status and error messages via email. To use these features, the email protocols 'POP3' and 'SMTP' must be set up on the INU server.

A client, e.g. the INU server, uses POP3 (Post Office Protocol Version 3) to fetch emails from a mail server. POP3 must be set up on the INU server so that it can be administered via email.

SMTP (Simple Mail Transfer Protocol) is used to send and forward emails. The INU server needs SMTP for the administration via email and the notification service.

Configuring POP3

- ✓ An email user account for the INU server is set up on the POP3 server.
- 1. Start the INU Control Center.
- 2. Select NETWORK Email.
- 3. Configure the POP3 parameters; ⇒Table 7 🗎 28.
- 4. To confirm, click Save.
- \rightarrow The settings will be saved.

Table 7: POP3 parameters

The state of the s		
Description		
Enables/disables the POP3 functionality.		
Defines the POP3 server via its IP address or host name.		
A host name can only be used if a DNS server was configured beforehand.		
Defines the port which the INU server uses to receive emails.		
The default port number for POP3 is 110. The default port number for SSL/TLS (parameter 'POP3 – Security' ⇒ 28) is 995. If required, read the documentation of your POP3 server.		
Defines the authentication method to be used:		
 APOP: encrypts the password when logging on to the POP3 server. 		
• SSL/TLS: encrypts the entire communication with the POP3 server. The encryption strength is defined via the encryption protocol and level ⇒ ■60.		
Defines the time interval (in minutes) which with the POP3 server is checked for emails.		
Defines the maximum email size (in Kbyte) to be accepted by the INU server.		
(0 = unlimited)		
Defines the user name used by the INU server to log on to the POP3 server.		
Defines the user password used by the INU server to log on to the POP3 server.		

Configuring SMTP

- ✓ An email user account for the INU server is set up on the SMTP server.
- 1. Start the INU Control Center.
- 2. Select **NETWORK Email**.
- 3. Configure the SMTP parameters; ⇒Table 8 №29.
- 4. To confirm, click **Save**.
- \rightarrow The settings will be saved.

Table 8: SMTP Parameters

Parameters	Description
SMTP - Server name	Defines the SMTP server via the IP address or the host name.
	A host name can only be used if a DNS server was configured beforehand.
SMTP – Server port	Defines the port which the INU server and SMTP server use to communicate. The default port number for SMTP is 25. For SSL/TLS (parameter 'SMTP − SSL/TLS' ⇒ 129), SMTP servers use by default port 587 (STARTSSL/STARTTLS) or the old port 465 (SMTPS). If required, read the documentation of your SMTP server.
SMTP – SSL/TLS	Enables/disables SSL/TLS.
	SSL/TLS encrypts the communication from the INU to the SMTP server. The encryption strength is defined via the encryption protocol and level \Rightarrow \blacksquare 60.
SMTP – Sender name	Defines the email address used by the INU server to send emails.
	Very often the name of the sender and the email account user name are identical.
SMTP – Login	Enables/disables SNMP authentication. To send emails, the INU sends its user name and password to the SMTP server to authenticate itself. Enter user name (parameter 'SMTP – User name' \Rightarrow \implies 29) and password (parameter 'SMTP – Password' \Rightarrow \implies 29).
	Some SMTP servers require SMTP authentication to prevent fraudulent use (spam).
SMTP – User name	Defines the user name used by the INU server to log on to the SMTP server.
SMTP – Password	Defines the password used by the INU server to log on to the SMTP server.
SMTP – Security (S/MIME)	Enables/disables the email security standard S/MIME (Secure/Multipurpose Internet Mail Extensions). S/MIME is used to sign ('SMTP – Signing emails' ⇒ ■29) or encrypt ('SMTP – Full encryption' ⇒ ■29) emails.Enable the desired features (if desired with 'SMTP – Attach public key' ⇒ ■29).
SMTP – Signing emails	Enables the signing of emails. The recipient can use the signature to check the sender's identity. This proves, that the email has not been altered.
	An S/MIME certificate is required for the signing of emails ⇒ 🖺 67.
SMTP – Full encryption	Enables the encryption of emails. Only the intended recipient can open and read the encrypted email.
	An S/MIME certificate is required for the encryption ⇒
SMTP – Attach public key	Sends the public key together with the email. Many email clients require the key to display the email.

3.7 How to Use the INU Server in VLAN Environments

The INU server supports VLAN (Virtual Local Area Network) according to 802.10.

A VLAN divides a physical network into logical subnetworks. Each subnetwork is its own broadcast domain, so data packets cannot be exchanged between subnetworks. VLANs are used to structure networks and, above all, to secure them.

Each USB device can be assigned to a VLAN. To transfer VLAN data via the USB ports, you must first enter the VLANs on the INU server. After this, the USB ports used for forwarding data must be linked to the specified VLANs.



The access to USB devices can be regulated particularly well with VLAN: a defined group of network users may use certain USB devices.

Inform yourself on how to implement VLAN in your environment and then set up the INU server for it.

Define a IPv4 Management VLAN

- 1. Start the INU Control Center.
- 2. Select NETWORK IPv4 VLAN.
- 3. Configure the IPv4 VLAN parameters; ⇒Table 9 🖺 30.
- 4. To confirm, click Save.
- 5. The settings will be saved.

Table 9: IPv4 management VLAN parameters

· · · · · · · · · · · · · · · · · · ·		
Parameters	Description	
IPv4 management VLAN	Enables/disables the forwarding of IPv4 management VLAN data.	
	If this option is enabled, SNMP is only available in the IPv4 management VLAN.	
VLAN ID	ID for the identification of the IPv4 management VLAN (0-4096).	
IP address	IP address of the INU server ⇒ 🖺 21.	
Subnet mask	Subnet mask of the INU server ⇒ \(\bigsig 21.	
Gateway	IP address of the network's standard gateway which the INU server uses \Rightarrow \blacksquare 21.	
	With a gateway, you can address IP addresses from other networks.	
Access from any VLAN	Enables/disables the administrative access (web) to the INU server via IPv4 client VLANs.	
	If this option is enabled, the INU server can be administrated via all VLANs.	
Access via LAN (untagged)	Enables/disables the administrative access to the INU server via IPv4 packets without tag.	
	If this option is disabled, the INU server can only be administrated via VLANs.	

Define a IPv4 Client VLAN

- 1. Start the INU Control Center.
- Select NETWORK IPv4 VLAN.
- 3. Configure the IPv4 VLAN parameters; ⇒Table 10 \(\bigsize 31. \)
- 4. To confirm, click **Save**.
- → The settings will be saved.

Table 10: IPv4 client VLAN parameters

Parameters	Description
VLAN	Enables/disables the forwarding of IPv4 client VLAN data.
IP address	IP address of the INU server within the IPv4 client VLAN.
Subnet mask	Subnet mask of the INU server within the IPv4 client VLAN.
Gateway	Gateway address of the IPv4 client VLAN.
VLAN ID	ID for the identification of the IPv4 client VLAN (0–4096).



Use **Auto-fill** to automatically fill **VLAN**, **IP address** and **Subnetmask** with the values from line 1. **VLAN ID** will automatically be counted up by '1'.

Allocating a IPv4 Client VLAN to a USB Port

- 1. Start the INU Control Center.
- 2. Select **SECURITY USB** port access.
- 3. Allocate a VLAN to the USB port via the **Allocate VLAN** list.
- 4. To confirm, click **Save**.
- \hookrightarrow The settings will be saved.

INU User Manual Linux Device Settings

4 Device Settings

- How to Assign a Description ⇒ 134
- How to Disable a USB Port ⇒ 🖺 36
- How to Get Messages ⇒ 38

4.1 How to Configure the Device Time

The device time of the INU server can be set via an SNTP time server (Simple Network Time Protocol) in the network. A time server synchronizes the time of devices within a network.

Today's primary time standard 'UTC' (Universal Time Coordinated) is used. The time zone compensates for location.



Important:

If your network in configured accordingly, the INU server receives the time server settings automatically via DHCP. A time server assigned in such a manner always takes precedence over a manually set time server.

- ✓ The network has a time server.
- 1. Start the INU Control Center.
- 2. Select **DEVICE Date/Time**.
- 3. Tick **Date/Time**.
- 4. Into the **Time server** box, enter the IP address or the host name of the time server. (The host name can only be used if a DNS server was configured beforehand $\Rightarrow 25$.)
- 5. From the **Time zone** list, select the code for your local time zone.
- 6. To confirm, click Save.
- → The settings will be saved.

4.2 How to Assign a Description

You can assign freely definable descriptions to the INU server. This gives you a better overview of the devices in the network.



You can also assign names to USB ports to distinguish them \Rightarrow 135.

- 1. Start the INU Control Center.
- 2. Select **DEVICE Description**.
- 3. Enter freely definable names for **Host name**, **Description**, and **Contact person**.
- 4. To confirm, click **Save**.
- \rightarrow The settings will be saved.

Table 11: Description

Parameters	Description
Host name	Device name as alternative to IP address. With a name you can identify the INU server more easily in the network, e.g. if you are using several INU servers.
	Is displayed in the INU Control Center and SEH UTN Manager.
Description	Device description, e.g. location or department.
	Is displayed in the INU Control Center and SEH UTN Manager.
Contact person	Contact person, e.g. device administrator.
	Is displayed in the INU Control Center.

4.3 How to Assign a Name to a USB Port

By default, the names of the connected USB devices are displayed on the USB ports in the INU Control Center and SEH UTN Manager. These names are specified by the device manufacturers and might be ambiguous or inaccurate.

That is why you can assign freely definable names to the USB ports, e.g. the name of a corresponding software. This gives you a better overview of the USB devices available in the network.

- 1. Start the INU Control Center.
- 2. Select **Device USB port**.
- 3. Enter the preferred name into the **Port name** field.
- 4. To confirm, click **Save**.
- \rightarrow The settings will be saved.

4.4 How to Disable a USB Port

By default all USB ports are active. You can deactivate (and re-activate) the USB port by interrupting respectively re-establishing the power supply.

Deactivate

- unused USB ports to ensure that unwanted USB devices cannot be connected to the network. (Deactivated USB ports cannot be seen in the SEH UTN Manager.)
- a USB port and re-activate it to restart the connected USB device if it is in an undefinable condition. (The USB device does not need to be removed and reconnected manually.)
- 1. Start the INU Control Center.
- 2. Select **Device USB port**.
- 3. Tick/clear the option in front of the **USB port**.
- 4. To confirm, click **Save**.
- → The USB port is disabled/enabled.

4.5 How to Configure the UTN (SSL) Port

A shared port is used for the data transfer between the INU server (including connected USB devices) and the client. It depends on the connection type:

- <u>unencrypted</u> USB connection: UTN port (default = 9200)



WARNING

The UTN port respectively UTN SSL port must not be blocked by security measures (firewall).

You can change the port number, e.g. if the port number is already used for another application in your network. The change is made on the INU server and is relayed to the SEH UTN Manager installed on the clients via SNMPv1.

- 1. Start the INU Control Center.
- 2. Select **Device UTN port**.
- 3. Enter the port number into the **UTN port** or **UTN SSL port** box.
- 4. To confirm, click **Save**.
- → The settings will be saved.

4.6 How to Get Messages

The INU server can send you different messages:

• Status email: Periodically sent email containing the status of the INU server and of the connected USB devices.

- Event notifications via email or SNMP trap:
 - USB device is connected to the INUserver / disconnected from the INU server
 - USB port (i.e. connection to the connected USB device) is activated/deactivated
 - INU server restart

Configuring the sending of status emails

The status email can be sent to up to two recipients.

- ✓ DNS is set up \Rightarrow \triangleq 25.
- 1. Start the INU Control Center.
- Select DEVICE Notification.
- 3. Enter the recipient into the **Email address** box.
- 4. Tick the desired recipient(s) in the **Status email** area.
- 5. Define the interval.
- 6. To confirm, click Save.
- → The settings will be saved.

Configuring event notifications via email

The event emails can be sent to up to two recipients.

- ✓ SMTP is set up \Rightarrow \(\bigsim 28.
- 1. Start the INU Control Center.
- 2. Select **DEVICE Notification**.
- 3. Enter the recipient into the **Email address** box.
- 4. Tick the options with the desired message types.
- 5. To confirm, click **Save**.
- → The settings will be saved.

Configuring event notifications via SNMP traps

The event SNMP traps can be sent to up to two recipients.

- 1. Start the INU Control Center.
- 2. Select **DEVICE Notification**.
- 3. In the **SNMP traps** area, define the recipients via the IP address and the community.
- 4. Tick the options with the desired message types.
- 5. To confirm, click **Save**.
- \rightarrow The settings will be saved.

4.7 How to Use the Relay

A device can be connected to the Change Over (CO) relay which is integrated into the INU server. The relay can

- be fixed in a position of your choice:
 You switch the relay to the desired position (open or closed). The relay stays in the selected position until you switch it manually again.
- · display a status:

By default, the relay is in open position. As soon as one chosen device status occurs, the relay switches to closed position. As soon as the status changes back, the relay automatically returns to open position.

- USB device connected (any or on a certain port)
- USB device disconnected (any or on a certain port)
- USB device activated (any or on a certain port)
- USB device deactivated (any or a certain port)
- interrupted network connection
- network connection established

· show events:

The relay switches to closed position as soon as one of the chosen events occurs. After that, the relay will not switch automatically anymore; you first have to manually clear the event / reset the relay.

- USB device connected (any or on a certain port)
- USB device disconnected (any or on a certain port)
- USB device activated (any or on a certain port)
- USB device deactivated (any or a certain port)
- SD card connected
- SD card disconnected
- SC card cannot be used

- interrupted network connection
- network connection established
- INU server restart
- interrupted power supply
- power supply established



The relay can also be switched with a SNMP management tool and the SEH private MIB (download at the website $\Rightarrow \triangle 4$). Switching via SNMP is not described here and must be implemented self-dependently.

The relay position and events respectively status which changed it, are displayed in the INU Control Center: go to **Device** – **Relay** and the table **Relay status**.

Use case examples

Fixed position: This is a simple way to switch the relay and therefore the connected device through remote access (HTTP).

Example: The INU server is installed in a production environment. The relay is switched as required by an technician in the control center. Scenarios include a simple connection/disconnection (e.g. diagnosis tool) or an emergency shutdown (e.g. if a sensor warns about overheating).

Displaying a status: The status display is especially useful in production environments.

Example: The quality is checked regularly in a manufacturing process. To do this, a USB analysis device is connected to the INU server and automatically activated via Auto-Connect (\Rightarrow \implies 47). The activation triggers the relay and a connected light bulb switches on to signal the ongoing check. The employees in the manufacturing environment know about it. As soon as the check is completed and the data transferred over the network to the client with the analysis software, the connection to the USB device is deactivated and it is removed from the INU server. The relay switches and the light bulb goes out. The employees know that the quality check is completed.

Showing events: The event display is most suitable for error warnings as a manual reset of the relay is required. Example: An interrupted network connection is indicated visually through a red lamp or acoustically with an audio alert. As the reset is to be done manually, the error is displayed permanently by the the changed relay position. That still is the case even if the error is removed (maybe of its own volition), e.g. if the network connection is reestablished after a sever error. This error history can give you valuable information on basic problems in your en-

vironment. As soon as the technician has analyzed and removed the error, the relay is returned to its default position so that the next error (e.g. an interrupted power supply) is indicated as well.

Fix the Relay in a Position (Respectively Switch It Manually)

- 1. Start the INU Control Center.
- 2. Select **DEVICE Relay**.
- 3. Tick **Fixed position**.
- 4. From the list, select **Open** or **Closed**.
- 5. To confirm, click **Save**.
- → The relay stays in the selected position.

Have the Relay Show a Status

- 1. Start the INU Control Center.
- 2. Select **DEVICE Relay**.
- 3. Tick **Show status**.
- 4. From the lists, select a desired status. Only one status can be selected.
- 5. To confirm, click **Save**.
- → The settings will be saved.

Have the Relay Show an Event

- 1. Start the INU Control Center.
- 2. Select **DEVICE Relay**.
- Tick Show event.
- 4. From the list, select the desired events. Multiple selection is possible.
- 5. To confirm, click **Save**.
- → The settings will be saved.

Set Relay to Default Position

- ✓ 'Show event' is activated \Rightarrow \(\bigsigma 40.
- 1. Start the INU Control Center.
- 2. Select **DEVICE Relay**.
- 3. In the table Relay status, click Clear all events / reset relay.
- → The relay is reset.

5 Working with the SEH UTN Manager

The 'SEH UTN Manager' is a software tool developed by SEH Computertechnik GmbH. The SEH UTN Manager is used to establish and manage connections to the USB devices which are connected to the INU servers.

- How to Find Status Information on USB Ports and USB Devices

 □49
- How to Use the SEH UTN Manager without Graphical User Interface (utnm) ⇒ 162

5.1 How to Find INU Servers/USB Devices in the Network

The software tool SEH UTN Manager is used to establish and manage connections to the USB devices connected to the INU servers.

After the SEH UTN Manager is started, the network has to be scanned for connected INU servers. The network range to be scanned is freely definable; the search can be effected via multicast and/or in definable IP ranges. The default setting is multicast search in the local network segment.

All INU servers found and their connected USB devices are displayed in the 'network list'. To use the USB devices connected to the INU server, you have to add the INU server to the 'selection list'.

You can also directly add an INU server to the selection list. To do this, you need to know its IP address.

Defining Search Parameters

- ✓ The SEH UTN Manager (complete version) is installed on the client ⇒ 11.
- 1. Start the SEH UTN Manager.
- 2. In the menu bar, select **Program-Options**. The **Options** dialog appears.
- Select the Network Scan tab.
- 4. Tick IP Range Search and define one or more network ranges.
- Click **OK**.
- → The settings will be saved.

Scanning the Network

- ✓ The SEH UTN Manager (complete version) is installed on the client \Rightarrow 11.
- 1. Start the SEH UTN Manager.
- 2. In the menu bar, select **Selection List Edit**.

The **Edit Selection List** dialog appears.

- 3. Click Scan.
- 4. The network is scanned. The INU servers and USB devices found are displayed in the network list.

Adding the INU Server to the Selection List

- ✓ The SEH UTN Manager (complete version) is installed on the client \Rightarrow \(\bigsim 11.
- ✓ The INU server was found via the network scan and is displayed in the network list.
- 1. Start the SEH UTN Manager.
- 2. In the menu bar, select **Selection List Edit**.

The **Edit Selection List** dialog appears.

- 3. In the network list, select the INU server to be used.
- 4. Click Add.

(Repeat steps 2 and 3, if necessary.)

- 5. Click OK.
- → The INU servers and the connected USB devices are shown in the selection list.

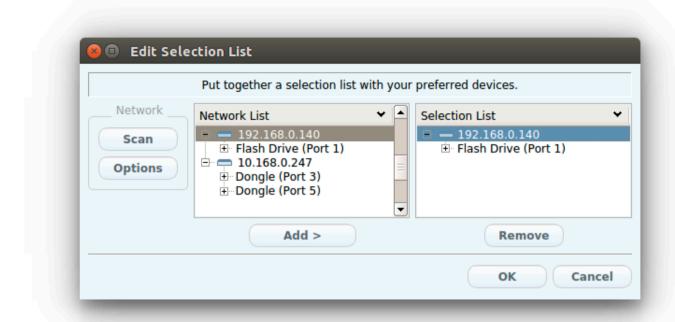


Figure 5: SEH UTN Manager – Edit Selection List

Adding a INU Server via IP Address

- ✓ The SEH UTN Manager (complete version) is installed on the client \Rightarrow 11.
- ✓ You know the IP address of the INU server.
- 1. Start the SEH UTN Manager.
- Select UTN server Add.
 The Add server dialog appears.
- 3. In the **Host name or IP address** box, enter the IP address of the INU server.
- 4. If you changed the UTN port or UTN SSL port (□ □37), define the respective port numbers in the **UTN-Port** and **UTN-SSL-Port** box.
- 5. Click OK.
- → The INU server and the connected USB devices is shown in the selection list.

5.2 How to Establish a Connection to a USB Device

To connect a USB device to the client, a point-to-point-connection is established between the client and the USB port of the INU server to which the USB device is connected. The USB device can then be used as if it were directly connected to the client.



Important:

Special case of compound USB devices

When connecting certain USB devices to a USB port of the INU server, the selection list displays several USB devices on this port. These are compound USB devices. They consist of a hub and one or more USB devices that are all integrated into a single housing.

If the connection is established to a port with a connected compound USB device, all USB devices shown will be connected to the user's client. In this case, each integrated USB device occupies a virtual USB port of the INU server. The INU server is limited in its number of USB ports: 10. If the limit is reached, no further USB devices can be used on this INU server.

- ✓ All provisions (driver installation, etc.) necessary to operate the USB device locally (i.e. connected directly to the client) should have been met on the client. Ideally, the USB device has been connected and operated on the client locally according to the instructions of the manufacturer.
- ✓ The USB port is <u>not</u> connected to another client.
- 1. Start the SEH UTN Manager.
- 2. Select the port from the selection list.
- 3. From the menu bar, select **Port Activate**.
- → The connection between the USB device and client is established.

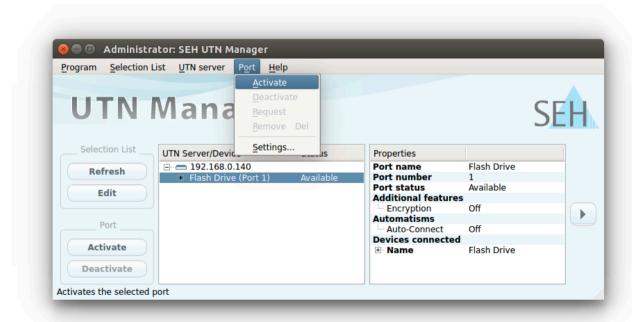


Figure 6: SEH UTN Manager – USB port activation

5.3 How to Cut the Connection between the USB Device and the Client

If a USB device is connected to a client, the connection is of a point-to-point type. As long as the connection is established, other users cannot connect the USB device to their client and thus cannot use it. For this reason, you have to cut the connection once you do not use the USB device any longer.

To cut the connection between USB device and client, you deactivate the connection between the client and the USB port of the INU server to which the USB device is connected.

Cutting the Device Connection via the SEH UTN Manager

- ✓ The SEH UTN Manager (complete version) is installed on the client \Rightarrow 11.
- ✓ The USB port is shown in the selection list \Rightarrow \triangleq 42.
- 1. Start the SEH UTN Manager.
- 2. Select the port from the selection list.
- 3. Select **Port Deactivate** from the menu bar.
- → The connection will be deactivated.

Cutting the Device Connection via the INU Control Center

- 1. Start the INU Control Center.
- 2. Select START.
- 3. Choose the active connection from the **Attached devices** list and click the <u></u> icon.
- 4. Confirm the security query.
- → The connection will be deactivated.

5.4 How to Request an Occupied USB Device

If a USB device is connected to a client, the connection is of a point-to-point type. As long as the connection is established, other users cannot connect the USB device to their client and thus cannot use it.

If you want to use an occupied USB device, you can request it. The other user will receive a release request in form of a pop up. If the user follows your request and releases the USB device by deactivating the connection to the USB device, the connection between the USB device and your client will automatically be activated.

- ✓ The SEH UTN Manager (complete version) is installed on the client ⇒ 🖹 11.
- ✓ The SEH UTN Manager (complete version) is installed on the client of the user who uses the USB device ⇒ 🖹 11.
- ✓ The SEH UTN Manager (complete version) is running with graphical user interface on both clients.
- ✓ The USB port is shown in the selection list \Rightarrow \triangleq 42.
- 1. Select the port from the selection list.
- 2. Select **Port Request** from the menu bar.
- → The release request will be sent.

5.5 How to Automate USB Device Connections and Program Starts

Connections to USB ports of the INU server and the connected USB devices can be automated. Simple to complex processes can be implemented.



This chapter describes features of the SEH UTN Manager with which automatisms are set up. Users who have expert knowledge in scripting should use the command line tool 'utnm' $\Rightarrow \$52$.

Automatic Connection If a USB Device Is Connected (Auto-Connect)

Auto-Connect automatically establishes a connection to a USB port and the connected USB device as soon as a USB device is connected to the USB port. Auto-Connect must be activated for each USB port and works for all USB devices which are connected to the USB port.

- ✓ The SEH UTN Manager (complete version) is installed on the client ⇒ 🖺 11.
- ✓ The USB port is shown in the selection list \Rightarrow \(\bigle 42.
- ✓ You are logged on to the client as administrator.
- 1. Start the SEH UTN Manager.
- 2. Select the UTN server from the selection list.
- 3. From the menu bar, select **UTN server Activate Auto-Connect**. The dialog **Activate Auto-Connect** appears.
- 4. Tick the option for the desired USB ports.
- 5. Click OK.
- → The setting will be saved. The connection to the USB port and the connected USB device is automatically and immediately activated. If you disconnect the USB device and reconnect it, the connection is again automatically established.



Important:

If you manually deactivate an established USB port connection that was activated by Auto-Connect, the Auto-Connect setting will be deactivated as well. If you want to use Auto-Connect again, you will have to configure it anew later on.

Automatic Deactivation of the Connection after a Time Defined (Auto-Disconnect)

Auto-Disconnect deactivates the connection to a USB port and the connected USB device after a previously defined time. 2 minutes before time runs out, the user will receive a notification and is asked to deactivate their connection in order to prevent data loss and error states. Optionally, a one-off prolongation of the connection by the duration of the defined time can be activated. In this case, the user can choose to prolong the connection or decline it when the notification pops up.

Auto-Disconnect allows a large number of network participants to access a small number of devices and avoids idle times.



You can be notified if a connection is automatically disconnected and the port thus is free. For this purpose, set up a notification if the USB port is available $\Rightarrow 249$.

- ✓ The SEH UTN Manager (complete version) is installed on the client ⇒ 🖺 11.
- ✓ The INU server is displayed in the 'Automatic Device Disconnect' area ⇒ 142.
- ✓ You are logged on to the client as administrator.
- 1. Start the SEH UTN Manager.

- 2. Select the SEH UTN server in the selection list.
- 3. In the SEH UTN Server menu, select the command "Activate Auto Disconnect". The Activate **Auto Disconnect** dialog appears.
- 4. Activate the option for the desired USB ports.
- 5. Define the desired time period (10-9999 minutes).
- 6. Activate the **Extension** option if required.
- 7. Select the **OK** button.
- ☐ The setting is saved

5.6 How to Find Status Information on USB Ports and USB Devices

You can check the status of USB ports and USB devices at any given time. You can also configure automatic messages. You can use automatic messages to be notified when a USB port becomes available or to receive information about the connection duration.



Important:

Automatic messages might not appear.

Messages depend on the system's window manager. Due to the multitude of Linux varieties (and window managers) notification via message might not be supported.

- Displaying Status Information ⇒ 149

Displaying Status Information

- ✓ The SEH UTN Manager (complete version) is installed on the client ⇒ 🖹 11.
- ✓ The USB port is shown in the selection list \Rightarrow □42.
- 1. Start the SEH UTN Manager.
- 2. Select the USB port from the selection list.
- → The status information is displayed in the **Properties** area.

Notification If a USB Port Becomes Available

You will receive a message once a network participant deactivates the connection to a USB port and the connected USB device.

- ✓ The SEH UTN Manager (complete version) is installed on the client ⇒ 🖹 11.
- ✓ The USB port is shown in the selection list \Rightarrow \triangleq 42.
- 1. In the selection list, select the port.
- 2. In the menu bar, select **Port Settings**.
 - The **Port Settings** dialog appears.
- 3. Tick the option under Messages.
- 4. Click OK.
- → The setting will be saved.

Message about the Duration of a Connection

You will receive a message if one of your connections to a USB port and the connected USB device exceeds a defined time period.


- ✓ The SEH UTN Manager (complete version) is installed on the client ⇒ 🖺 11.
- In the menu bar, select Program-Options.
 The Options dialog appears.
- 2. Select the **Program** tab.
- 3. In the **Messages** area, tick the option.
- 4. Define the desired duration.
- 5. Click OK.
- → The setting will be saved.

5.7 How to Use the Selection List and Manage User Access Rights with It

By default, all client users use the global selection list in the SEH UTN Manager. However, you can set a user selection list for the client users. This list can be compiled by the users themselves. Alternatively, you as client administrator restrict user rights and provide a list with which only the INU servers you define can be used.

Table 12: Differences in global and user selection list


Global Selection List

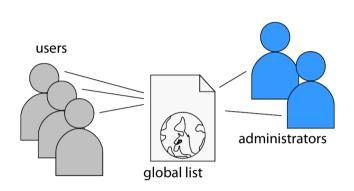

- All users of a client use the same selection list.
- The users can access all devices listed in the selection list.
 (Provided that no security mechanisms have been specified via the INU Control Center.)
- List is stored at: /etc

The selection list can be edited by administrators.

User Selection List

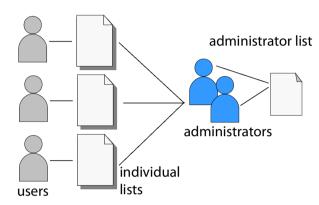

- Each user has their own selection list.
 All administrators have the same selection list.
- The users can access all devices listed in the selection list.
 (Provided that no security mechanisms have been
- List ('ini'-file) is stored at:

\$HOME/.config/SEH Computertechnik GmbH/SEH UTN Manager.ini

specified via the INU Control Center.)

(\$HOME is an environment variable for the user folder in Linux; the path for the current user can be determined with using command line: echo \$HOME

Example Ubuntu 20.0.4.0:

echo \$HOME returns /Usershome/User name

+

.config/SEH Computertechnik GmbH/SEH UTN Manager.ini

Complete path to the ini file:

/Usershome/User name/.config/SEH Computertechnik GmbH/SEH UTN Manager.ini)

 The selection list can be edited by administrators or by users with write access to the ini-file.
 Users with read-only access to the ini-file cannot edit the selection list and have limited access to SEH UTN Managers functions.



Which functions (selection list editing etc.) can be used in the SEH UTN Manager depends on the selection list type (global/user) and user account type on the client (administrator/user; user with/without write access to ini-file). For a detailed breakdown see 'SEH UTN Manager − Feature Overview' ⇒ 105.

Setting Up the Global Selection List for All Users

The global selection list is used by default.

- ✓ The SEH UTN Manager (complete version) is installed on the client ⇒ 🖺 11.
- ✓ You are logged on to the system as administrator.
- 1. Start the SEH UTN Manager.
- 2. Compose the selection list \Rightarrow \mathbb{B} 42.
- 3. In the menu bar, select **Program-Options**. The **Options** dialog appears.
- 4. Select the tab Selection List.
- 5. Tick Global selection list.
- 6. Click OK.
- → The setting will be saved. All users of a client use the same selection list.

Providing User Selection Lists

- ✓ The SEH UTN Manager (complete version) is installed on the client ⇒ 🖹 11.
- ✓ You are logged on to the system as administrator.
- 1. Start the SEH UTN Manager.
- 2. In the menu bar, select **Program-Options**. The **Options** dialog appears.
- 3. Select the tab **Selection List**.
- 4. Tick User selection list.
- 5. Click OK.

Optional: With the following steps you provide a predefined selection list.

- 6. Create a selection list with the desired devices ⇒ \(\bigsigma 42. \)
- 7. In the menu bar, select **Selection List–Export**.
 - The **Export to** dialog appears.
- 8. Save the file 'SEH UTN Manager.ini' to the user directories: \$HOME/.config/SEH Computertechnik GmbH/SEH UTN Manager.ini (⇒Table 12 🗎 50)
- → The setting will be saved. Each user uses their individual (predefined) selection list. The administrators share one selection list.

Restrict Write Access to the 'SEH UTN Manager.ini'-file

User selection lists can be set up and edited by the users themselves.

In order to restrict users to just the INU servers you want them to have access to, you can provide a list to users. To do so, you as administrator store a predefined list for the user (⇒ 151) and limit the user to read-only access to the 'SEH UTN Manager.ini'-file. By limiting the user to read-only access, all SEH UTN Manager functions concerning the selection list are disabled for the user.

Use the usual methods of your operating system to turn the ini-files into read-only files. For more information, read the documentation of your operating system.

5.8 How to Use the SEH UTN Manager without Graphical User Interface (utnm)

The SEH UTN Manager is available in two versions ⇒ 11. It can be used without graphical user interface in the minimal version. To do so, the tool 'utnm' is utilized to use UTN features via the console of the operating system:

- directly, by entering commands in a certain syntax and executing them
- via scripts which contain commands in a certain syntax that will be executed automatically and step by step by the command line interpreter



Use scripts to automate frequently recurring command sequences such as port activations.



The execution of scripts can be automated as well, e.g. by means of login scripts.

- Return ⇒ **1**54

Syntax

utnm -c "command string" [-<command>]

The executable file 'utnm' can be found in/usr/bin/.

Commands

Rules for commands:

- Underlined elements are to be replaced by the appropriate values (e.g. INU server = IP address or host name of a INU server)
- elements in square brackets are optional.
- not case-sensitive
- only the ASCII format can be read.

--help

Command	Description
-c "command string"	Runs a command. The command is specified in greater detail by the command string. Command strings:
or	 activate <u>server</u> <u>port number</u> Activates the connection to a USB port and the connected USB device.
command "command string"	 activate <u>server</u> <u>vendor ID</u> (VID) <u>product ID</u> (PID) Activates the connection to a USB port and the first free connected USB device with the defined IDs, if several identical USB devices are connected to the INU server.
	 deactivate <u>server</u> <u>port number</u> Deactivates the connection to a USB port and the connected USB device.
	 set autoconnect=true false <u>server</u> <u>port number</u> Enables/disables Auto-Connect (⇒ <u>B</u>47) for the USB port.
	• set portkey='port key' server port number Stores a UBS port key (⇒ 164) locally on the system. This way, the USB port key is always automatically sent and must not be specified each time with the command -k USB port key respectivelykey USB port key (see below). (To remove the USB port key use the command string set portkey= server port number) Important: The command only sets the key permanently to make the USB device available.
	The USB port key configuration is done via the INU Control Center ⇒
	 find Searches for all INU servers in the network segment and shows the INU servers found with IP address, MAC address, model and software version.
	 getlist <u>server</u> Shows an overview of the USB devices connected to the INU server (including port number, vendor ID, product ID, vendor name, product name, device class, and status).
	 state <u>server port number</u> Displays the status of the USB device connected to the USB port.
-h or	Shows the help page.

Command	Description
-k <u>USB port key</u>	Specifies a USB port key ⇒ 🖺 64.
or	Important:
key <u>USB port key</u>	The command only enters the key to make the USB device available.
	Use the command -c "command string" respectively command "command string" to permanently store a USB port key on the system so that it is sent automatically each time (see above).
	The USB port key configuration is done via the INU Control Center $\Rightarrow \triangle 4$.
-mr	Separates the output of the command string getlist with tabulators
or	and the output of find with commas.
machine readable	
-nw	Suppresses warning messages.
or	
no-warnings	
-0	Shows the output in the command line.
or	
output	
-p port number	Uses an alternative UTN port.
or	Use this command if you have changed the UTN port number (\Rightarrow \blacksquare 37).
port <u>port number</u>	Communication
-q	Suppresses the output.
or	
quiet	Uses an alternative LITN port with CCL/TLC encryption
-sp <u>port number</u> or	Uses an alternative UTN port with SSL/TLS encryption.
ssl-port port number	Use this command if you have changed the UTN SSL port number (
-t seconds	Specifies a timeout for the command strings activate and deacti-
or	vate.
timeout seconds	
-v	Shows version information about utnm.
or	S. O. S. T. C. STOTT HILD THE GOOD COUNTY
version	
/	

Return

After a command is executed, a return indicates success or failure of the process. The returned information is a status combined with a return value (return code). If the output is suppressed (' $--quiet' \Rightarrow \$54$), only the value is returned.

The return can be used to determine how the process proceeds, e.g. in a script.

Return Value	Description
0	The command was executed successfully.
20	The USB device connected to the USB port could not be plugged in.
21	The USB device connected to the USB port could not be plugged out.
22	The USB device connected to the USB port could not be ejected.
23	The USB device connected to the USB port is already plugged in.
24	The connection to the USB port and the connected USB device has already been deactivated or there is no device connected to the USB port.
25	The USB port including the connected USB device is connected to another user.
26	There is no device connected to the USB port or the USB port key (\Rightarrow \implies 64) is missing respectively wrong.
29	UTN Action (\Rightarrow \blacksquare 47) with 'Use the first free device': There is no USB device with the defined VID and PID connected to the USB port.
30	The isochronous mode is not supported.
31	UTN driver error. Please contact the SEH Computertechnik GmbH support \Rightarrow \blacksquare 5.
40	No network connection to the INU server.
41	An encrypted connection (SSL/TLS) to the INU server cannot be established.
42	The connection to the UTN service cannot be established.
43	The DNS resolution failed.
44	Insufficient rights (administrative rights required).
47	This feature is not supported.
200	General error (with error code).

Using utnm via Console

- ✓ The SEH UTN Manager is installed on the client \Rightarrow \blacksquare 11.
- ✓ You know the INU server's IP address or host name.
- 1. Open a **Console**.
- 2. Enter the sequence of commands; see 'Syntax' ⇒ \(\bigsig \) \(\big \) \(\big
- 3. Confirm your entry.
- → The sequence of commands will be run.

Example: Activating a USB device on port 3 of the INU server with the IP address 10.168.1.167

utnm -c "activate 10.168.1.167 3"

Creating a utnm Script

- ✓ The SEH UTN Manager is installed on the client \Rightarrow \blacksquare 11.
- ✓ You know the INU server's IP address or host name.
- ✓ You know how to create and use scripts in your operating system. If needed, refer to the documentation of your operating system.
- 1. Open a text editor.
- 2. Enter the sequence of commands; see 'Syntax' \Rightarrow \(\bigsigma 52, 'Commands' \Rightarrow \(\bigsigma 52, and 'Return' \Rightarrow \(\bigsigma 54.
- 3. Save the file as executable script on your client.
- → The script is saved and can be used.

6 Security

The INU server can be protected with various security mechanisms. These mechanisms secure the INU server itself as well as the connected USB devices. In addition, you can integrate the INU into the protection mechanisms implemented in your network.

- How to Define the Encryption Strength for SSL/TLS Connections

 □60
- How to Protect Access to the INU Control Center (User Accounts)

 □62
- How to Block Ports of the INU Server (TCP Port Access Control)

 □63



Important:

Protect the access to the INU Control Center with user accounts so that security related settings cannot be tampered with by unauthorized persons.



You can also use SNMP and VLAN for security:

6.1 How to Encrypt the USB Connection

To secure the USB connections, you encrypt the data transfer between the clients and the USB devices connected to the INU server. The encryption has to be activated individually for each connection, i.e. for each USB port.



Important:

Only payload will be encrypted. Control and log data will be transmitted without encryption.

For encryption the protocols SSL (Secure Sockets Layer) and its successor TLS (Transport Layer Security) are used. The encryption strength is defined via the encryption protocol and level \Rightarrow \triangleq 60.



WARNING

The SEH UTN Manager does not support the encryption level **Low**. If you set up **Low** in combination with an encrypted USB connection, a connection cannot be established.

Use an encryption level as high as possible.

If connections are encrypted, client and INU server communicate via the UTN SSL port. By default, that is port 9443. If the port is already used in your network, e.g. for another application, you can change the port number ⇒

■37.

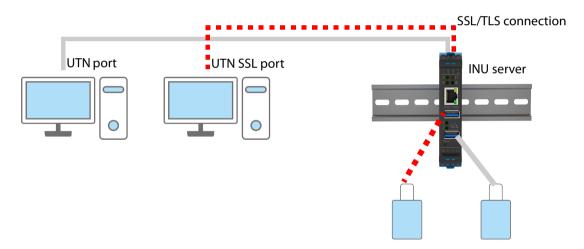


Figure 7: INU Server – SSL/TLS connection in the network

- 1. Start the INU Control Center.
- 2. Select **SECURITY Encryption**.
- 3. Enable the encryption for the USB port.
- 4. To confirm, click **Save**.
- → The data transfer between the clients and the USB device will be encrypted.



The encrypted connection will be displayed client-side in the SEH UTN Manager under **Properties**.



Figure 8:SEH UTN Manager – encryption

6.2 How to Encrypt the Connection to the INU Control Center

You can protect the connection to the INU Control Center by encrypting it with the protocol SSL (Secure Sockets Layer) and its successor TLS (Transport Layer Security).

- HTTP: unencrypted connection
- HTTPS: encrypted connection
 The encryption strength is defined via the encryption protocol and level ⇒ ■60. When an encrypted connection is to be established, the client asks for a certificate via a browser (⇒ ■67). This certificate must be accepted by the browser; read the documentation of your browser software.



WARNING

Current browsers do not support low security settings. With them a connection cannot be established.

Do \underline{not} use the following combination: Encryption protocol **HTTPS** and encryption level Low.

- 1. Start the INU Control Center.
- 2. Select SECURITY Device access.
- 3. In the Connection area, tick HTTP/HTTPS or HTTPS only.
- 4. To confirm, click **Save**.
- → The setting will be saved.

6.3 How to Define the Encryption Strength for SSL/TLS Connections

Some connections to and from the INU server can be encrypted with the protocol SSL (Secure Sockets Layer) and its successor TLS (Transport Layer Security):

- Email: POP3 (⇒ 28)
- Email: SMTP (⇒ 28)
- Data transfer between the clients and the INU server (and the connected USB devices): USB connection (⇒

 ■60)

The encryption strength and thus the safety of the connection is defined via the encryption protocol and level. You can choose both.

Each encryption level is a collection of what is called cipher suites. A cipher suite in turn is a standardized sequence of four cryptographic algorithms that are used to establish a secure connection. Based on their encryption strength they are grouped to encryption levels. Which cipher suites are supported by the INU server, i.e. are part of an encryption level, depends on the chosen encryption protocol. You can choose between two encryption levels:

- Any: The encryption is automatically negotiated by both communicating parties. The strongest encryption supported by both parties will always be chosen.
- Low: Only cipher suites with a low encryption are used. (Fast data transfer)
- Medium
- High: Only cipher suites with an strong encryption are used. (Slow data transfer)

When a secure connection is established, the protocol to be used and a list of supported cipher suites are sent to the communication partner. A cipher suite is agreed upon that will be used later on. The strongest cipher suite that is supported by both parties will be used by default.



WARNING

If the communication partner of the INU server does not support the protocol selected and/or if there is no cipher suite that is supported by both parties, the SSL/TLS connection will not be established.

If problems occur, select different settings or reset the parameters of the INU server \Rightarrow $\blacksquare 80$.



If you want the INU server and its communication partner to automatically negotiate the settings, set both options to **Any**. With these settings, the chances that a secure connection can be established are the highest.

- 1. Start the INU Control Center.
- 2. Select SECURITY SSL connections.
- 3. In the **Encryption protocol** area, select the desired protocol.



WARNING

Current browsers do not support **SSL**. If you use an up-to-date browser and set the combination **SSL** and **HTTPS only** for accessing the INU Control Center ($\Rightarrow \implies 59$), a connection cannot be established.

Use TLS (and not SSL).

4. In the **Encryption level** area, select the desired level.



WARNING

Current browsers do not support cipher suites from the **Low** level. If you use an up-to-date browser and set the combination **Low** and **HTTPS only** for accessing the INU Control Center (\Rightarrow \implies 59), a connection cannot be established.

Use an encryption level as high as possible.



WARNING

The SEH UTN Manager does not support the encryption level **Low**. If you set up **Low** in combination with an encrypted USB connection (⇒ 🖺 57), a connection cannot be established.

Use an encryption level as high as possible.

- 5. To confirm, click Save.
- → The setting will be saved.



Detailed information on the individual SSL/TLS connections (e.g. supported cipher suites) can be found on the details page **SSL connection status – Details**.

6.4 How to Protect Access to the INU Control Center (User Accounts)

By default, everyone who can find the INU in the network can access its INU Control Center. To protect the INU from unwanted configuration changes, you can set up two user accounts:

- Administrator: Complete access to the INU Control Center. The user can see all pages and change settings.
- Read-only user: Very restricted access to the INU Control Center. The user can only see the 'START' page.

If you have set up user accounts, a login screen is displayed when the INU Control Center is started. You can choose between two login screens:

- List of users: User names are displayed. Only the password has to be entered.
- Name and password dialog: Neutral login screen in which user name and password have to be entered. (better protection)

A user account allows for multiple logins, i.e. the account can be used by a single user or by a group of users. Up to 16 users can be logged in at the same time.



Important:

The user accounts for INU Control Center access are also used for SNMP \Rightarrow \blacksquare 26. Consider this when setting up user accounts.

For stronger security, you can use a session timeout. If there is no activity within a defined timeout, the user will automatically be logged out.

- Start the INU Control Center.
- 2. Select SECURITY Device access.
- 3. Define the two user accounts. To do this, in the area **User accounts** enter a **User name** and **Password** respectively.



You can show the typing if you want to make sure that there are no typing errors in the password.

- 4. Tick Restrict Control Center access.
- 5. Choose the login screen type: **list of users** or **name and password**.
- 6. Tick **Session timeout** and into the **Session duration box** enter the time in Minutes after which the timeout is to be effective.
- 7. To confirm, click **Save**.
- → The settings will be saved.

6.5 How to Block Ports of the INU Server (TCP Port Access Control)

You can restrict access to the INU server by blocking ports with the 'TCP port access control'. If a port is blocked, the protocols respectively services using this port cannot establish a connection with the INU server. Thus attackers have less room for attack.

The security level defines which port types are blocked:

- UTN access (blocks UTN ports)
- TCP access (blocks TCP ports: HTTP/HTTPS/UTN)
- All ports (blocks IP ports)

You have to define exceptions so that your desired network elements, e.g. clients or DNS servers, can establish a connection with the INU server.



The 'test mode' is active by default so that you can test your settings without locking yourself out. Your settings will be active until the INU is restarted, afterwards access is no longer restricted.

After you have successfully tested your settings, you have to deactivate the test mode so that access control is permanent.

- 1. Start the INU Control Center.
- 2. Select **SECURITY TCP port access**.
- 3. Tick Port access control.
- 4. In the **Security level** area, select the desired protection
- 5. In the Exceptions area, define the network elements that are to have access to the INU server. To do this, enter the IP or MAC (hardware) addresses and tick the options.



- MAC addresses are not delivered through routers!
 The use of wildcards (*) allows you to define subnetworks.
- 6. Make sure that the **Test mode** is enabled.
- 7. Click Save & Restart to confirm.

The settings will be saved.

The port access control is activated until the device is restarted.

8. Check the port access and if the INU Control Center can be reached.



Important:

If the INU Control Center cannot be reached, restart the INU server \Rightarrow 16.76.

- 9. Deactivate the **Test mode**.
- 10. Click Save & Restart to confirm.
- \rightarrow The settings will be saved.

6.6 How to Control Access to USB Devices

You can restrict the access to the USB ports and the connected USB devices:

• USB port key control A key is defined for the USB port. Neither the USB port nor the connected USB device are shown in the SEH UTN Manager, i.e. the USB device cannot be used. Only if the key for the USB port is entered in the SEH UTN Manager, the USB port and the connected USB device appear.

• USB port device assignment: A certain USB device is assigned to a USB port. This is achieved by linking the USB port and USB device through the vendor ID (short VID) and product ID (short PID) of the USB device. The combination of VID and PID is specific to a certain USB device model which means that only USB devices of this specific model can be used on the USB port. This way you can assure, that (security) settings cannot be circumvented by connecting USB devices to other ports.



Power off unused ports to increase security $\Rightarrow 136$.

Setting Up USB Port Keys

A key for a USB port is defined in the INU Control Center.

- 1. Start the INU Control Center.
- 2. Select **SECURITY USB** port access.
- 3. For the desired USB port, go to the **Method** list and select **Port key control**.
- 4. Click Generate key or enter a freely definable key (max. 64 ASCII characters) into the Key box.
- 5. To confirm, click Save.
- → The settings will be saved. Access to the USB device is protected.



To deactivate the feature, go to the **Method** list and select ---.

Entering a USB Port Key (Unlocking a USB Device)

To gain access to a USB device that is protected with the USB port key control, the corresponding key must be entered in the SEH UTN Manager on the client.

- 1. Start the SEH UTN Manager.
- 2. In the selection list, select the INU server.
- 3. From the menu bar, select **UTN server Set USB Port Keys** .
 - The **Set USB Port Keys** dialog appears.
- 4. Enter the key for the relevant USB port.
- 5. Click OK.
- → Access is granted. The USB port and the connected USB device are shown in the selection list and can be used.

Setting up USB Port Device Assignment

- 1. Start the INU Control Center.
- 2. Select **SECURITY USB** port access.
- 3. For the desired USB port, go to the **Method** list and select **Device assignment**.
- 4. Click Reallocate device.
 - The **USB device** box shows the VID and PID of the USB device.
- 5. To confirm, click **Save**.
- → The settings will be saved. Only the assigned USB device model can be operated on the USB port.



To deactivate the feature, go to the **Method** list and select ---.

6.7 How to Block USB Device Types

USB devices are grouped into classes according to their function. For example, input devices such as keyboards belong to the group 'Human Interface Device' (HID).

USB devices may present themselves as HID class USB devices while they are actually used for abuse (known as 'BadUSB').

In order to protect the INU server, you can block input devices of the HID class.

- 1. Start the INU Control Center.
- 2. Select **SECURITY Device access**.
- 3. Tick/clear **Disable input devices (HID class)** in the **USB devices** area.
- 4. To confirm, click **Save**.
- → The setting will be saved.

6.8 How to Use Certificates

The INU server has its own certificate management. Digital certificates are data sets, which confirm the identity of a person, object, or organization. In TCP/IP networks they are used to encrypt data and to authenticate communication partners.

The INU needs a certificate for:

The following certificates can be used in the INU server:

- 1 self-signed certificate
 Certificate generated by the INU server and signed by the INU server itself. The certificate confirms the INU server's identity.
- 1 client certificate, i.e. 1 requested certificate or 1 PKCS#12 certificate
 The client certificate confirms the identity of the INU server with the help of an additional trustworthy authority which is the certification authority (short CA).
 - Requested certificate: As first step, a certificate request is generated on the INU server and then the request is sent to a certification authority. In the second step, the certification authority creates a certificate based on the request for the INU server and signs it.
 - PKCS#12 certificate Exchange format for certificates. You have a certification authority generate a certificate which is stored in password-protected PKCS#12 format for the INU server. Then you transport the PKCS#12 file to the INU server and install it (and thus the certificate in it).
- 1 S/MIME certificate
 - The INU server uses the S/MIME Certificate to sign and encrypt emails which is sends. The corresponding private key (PKCS#12 format) has to be installed as certificate of it's own in the email program (Mozilla Thunderbird etc.) so that emails can be verified and, if necessary, decrypted.
- 1–32 CA certificates, also known as root CA certificates.
 Certificates which are issued for a certification authority and confirm its identity. They are used for verifying certificates that have been issued by the respective certification authority. In case of the INU server these are the certificates of communication partners to verify their identity (chain of trust). Thus multi-level public key infrastructures (PKIs) are supported.



Important:

Upon delivery, a default certificate is stored in the INU server. This certificate is issued by SEH Computertechnik GmbH for each device specifically.

Having a Look at Certificates

- ✓ A certificate is installed on the INU server.
- 1. Start the INU Control Center.
- 2. Select SECURITY Certificates.
- 3. Select the certificate via the icon **Q**.
- → The certificate is displayed.

Creating a Self-Signed Certificate



Important:

- 1. Start the INU Control Center.
- 2. Select SECURITY Certificates.
- 3. Click Self-signed certificate.
- 4. Enter the relevant parameters; ⇒ Table 13 🗎 68.
- 5. Click Create/Install.
- → The certificate will be created and installed. This may take a few minutes.

Table 13: Parameters for the Creation of Certificates

Parameters	Description
Common name	Freely definable certificate name. (max. 64 characters)
	Use the IP address or host name of the INU server, so that you can clearly match device and certificate.
Email address	Email address of the person responsible for the INU server.
	(max. 40 characters; optional)
Organization name	Name of the company which uses the INU server.
	(max. 64 characters)
Organizational unit	Name of a department or subsection in the company.
	(max. 64 characters; optional)
Location	Location of the company.
	(max. 64 characters)
State name	State where the company is based.
	(max. 64 characters)
Domain component	Allows you to enter additional attributes.
	(Optional entry)
SAN (multi-domain)	Allows you to enter Subject Alternative Names (SAN). Is used to enter additional host names (e.g. domains).
	(Optional entry, max. 255 characters)
Country	Country where the company is based. Enter the two-digit country code according to ISO 3166.
	Examples: $DE = Germany$, $GB = Great Britain$, $US = USA$

Parameters	Description
Issued on	Date from which on the certificate is valid.
Expires on	Date from which on the certificate becomes invalid.
RSA key length	Defines the length of the RSA key used: • 512 bit (fast encryption and decryption)
	• 768 bit
	 1024 bit (standard encryption and decryption)
	• 2048 bit
	 4096 bit (slow encryption and decryption)

Request and Install Certificate (Requested Certificate)

A certificate that has been issued by a certification authority for the INU server can be used in the INU server.

To do this, your first create a certificate request and then send it to the certification authority. Based on the request, the certification authority then creates a certificate specifically for the INU server. You install this certificate in the INU server.



Important:

You can only install a requested certificate that has been issued based on the certificate request created on the INU server.

If the files do not match, you have to request a new certificate which is based on the current certificate request. If you want to start over, you must delete the certificate request ⇒

371.

- 1. Start the INU Control Center.
- 2. Select **SECURITY Certificates**.
- 3. Click Certificate request.
- 5. Click Create a request.

The certificate request will be created. This may take a few minutes.

- 6. Select **Upload** and save the requests in a text file.
- 7. Click OK.
- 8. Send the text file as certificate request to a certification authority. The certification authority creates the certificate and gives it to you.



Important:

The certificate must be in 'base64' format.

- 9. Click Requested certificate.
- 10. Enter the password into the **Password** box.
- 11. Click Install.
- → The requested certificate is installed in the INU server.

Installing a PKCS#12 Certificate



Important:

If a PKCS#12 certificate has already been installed in the INU server, you must first delete the certificate $\Rightarrow \blacksquare 71$.

- ✓ The certificate has 'base64' format.
- 1. Start the INU Control Center.
- Select SECURITY Certificates.
- 3. Click **PKCS#12 certificate**.
- 4. Specify the PKCS#12 certificate in the **Certificate file** box.
- 5. Enter the password.
- 6. Click Install.
- → The PKCS#12 certificate will be installed in the INU server.

Installing an S/MIME Certificate



Important:

If an S/MIME certificate has already been installed in the INU server, you must first delete the certificate \Rightarrow \blacksquare 71.

- ✓ The certificate has 'pem' format.
- 1. Start the INU Control Center.
- 2. Select SECURITY Certificates.
- 3. Click **S/MIME certificate**.
- 4. Specify the S/MIME certificate in the **Certificate file** box.
- 5. Click Install.
- → The S/MIME certificate is installed in the INU server.

Installing a CA Certificate

- ✓ The certificate has 'base64' format.
- 1. Start the INU Control Center.
- 2. Select **SECURITY Certificates**.
- 3. Click **CA certificate**.
- 4. Specify the CA certificate in the **Certificate file** box.
- 5. Click Install.
- → The CA certificate is installed in the INU server.

Deleting Certificates



WARNING

To establish an encrypted (HTTPS ⇒ 159) connection to the INU Control Center, a certificate (self-signed/CA/PKCS#12) is required. If you delete the corresponding certificate, the INU Control Center can no longer be reached.

In this case restart the INU server \Rightarrow \blacksquare 76. The INU server then generates a new selfsigned certificate with which a secured connection can be established.

- ✓ A certificate is installed on the INU server.
- 1. Start the INU Control Center.
- 2. Select SECURITY Certificates.
- Select the certificate to be deleted via the icon Q.
 The certificate is displayed.
- 4. Click **Delete**.
- → The certificate is deleted.

6.9 How to Configure Network Authentication (IEEE 802.1X)

Authentication is the proof and verification of an identity. With it your network is protected from abuse, because only authorized devices have access.

The INU supports authentication according to the IEEE 802.1X standard which is based on EAP (Extensible Authentication Protocol).

If you use authentication according to IEEE 802.1X in your network, the INU server can participate:

- Configuring PEAP ⇒ 1 73

Configuring EAP-MD5

EAP-MD5 (Message Digest #5) is a user-based authentication via a RADIUS server. First, you have to create a user (user name and password) on the RADIUS server for the INU server. Afterwards you set up EAP-MD5 on the INU server.

- ✓ A user account for the INU server is set up on the RADIUS server.
- Start the INU Control Center.
- Select SECURITY Authentication.
- 3. From the Authentication method list, select MD5.
- 4. Enter the user name and the password of the user account that is set up for the INU server on the RADIUS server.
- Click Save & Restart to confirm.
- → The settings will be saved.

Configuring EAP-TLS

EAP-TLS (Transport Layer Security) is a mutual, certificate based authentication via a RADIUS server. In this method, INU server and RADIUS server exchange certificates through an encrypted TLS connection.

Both RADIUS and INU server require a valid, digital certificate signed by a CA. This requires a PKI (Public Key Infrastructure).



WARNING

Follow the instructions below in the given order. If you do not follow the order, the INU server might not be reachable in the network.

In this case, reset the parameters of the INU server \Rightarrow \blacksquare 80.

- 2. Create a certificate using the certificate request and the authentication server.

- 5. Start the INU Control Center.
- 6. Select SECURITY Authentication.
- 7. Select **TLS** from the **Authentication method** list.
- 8. From the list **EAP root certificate**, select the root CA certificate.
- 9. Click Save & Restart to confirm.
- → The settings will be saved.

Configuring EAP-TTLS

In EAP-TTLS (Tunneled Transport Layer Security), a TLS-protected tunnel is used for exchanging secrets. The method consists of two phases:

- 1. Outer authentication: An encrypted TLS (Transport Layer Security) tunnel is created between INU server and RADIUS server. To do this, the RADIUS server authenticates itself to the INU server using a certificate that was signed by a CA.
- 2. Inner authentication: In the tunnel the authentication (via CHAP, PAP, MS-CHAP, or MS-CHAPv2) takes place.
- ✓ A user account for the INU server is set up on the RADIUS server.
- ✓ For increased security during connection establishment (optional): The root CA certificate of the certification authority that has issued the certificate of the authentication server (RADIUS) is installed in the INU server ⇒

 10.10
- 1. Start the INU Control Center.
- Select SECURITY Authentication.
- 3. Select TTLS from the Authentication method list.
- 4. Enter the user name and the password of the user account that is set up for the INU server on the RADIUS server.
- 5. Select the settings which secure the communication in the TLS channel.
- 6. Increase the security during connection establishment (optional): From the list **EAP root certificate**, select the root CA certificate.
- Click Save & Restart to confirm.
- → The settings will be saved.

Configuring PEAP

With PEAP (Protected Extensible Authentication Protocol), an encrypted TLS (Transport Layer Security) tunnel is established between the INU server and the RADIUS server. To do this, the RADIUS server authenticates itself to the INU server using a certificate that was signed by a CA. The TLS channel is then used to establish another connection that can be protected by means of additional EAP authentication methods (e.g. MSCHAPv2).

The method is very similar to EAP-TTLS (⇒ 173), but other methods are used to authenticate the INU server.

- ✓ A user account for the INU server is set up on the RADIUS server.
- ✓ For increased security during connection establishment (optional): The root CA certificate of the certification authority that has issued the certificate of the authentication server (RADIUS) is installed in the INU server ⇒

 10.1370.
- 1. Start the INU Control Center.
- 2. Select SECURITY Authentication.
- 3. Select **PEAP** from the **Authentication method** list.
- 4. Enter the user name and the password of the user account that is set up for the INU server on the RADIUS server.
- 5. Select the settings which secure the communication in the TLS channel.
- 6. Increase the security during connection establishment (optional): From the list **EAP root certificate**, select the root CA certificate.
- 7. Click Save & Restart to confirm.
- → The settings will be saved.

Configuring EAP-FAST

- ✓ A user account for the INU server is set up on the RADIUS server.
- 1. Start the INU Control Center.
- 2. Select SECURITY Authentication.
- 3. Select FAST from the Authentication method list.
- 4. Enter the user name and the password of the user account that is set up for the INU server on the RADIUS server.
- 5. Select the settings intended to secure the communication in the channel.
- 6. Click Save & Restart to confirm.
- \rightarrow The settings will be saved.

7 Maintenance

You can maintain the INU server in the following ways:

- How to Update ⇒ 🖺77
- How to Reset Parameters to their Default Values ⇒ 🖺 80

7.1 How to Restart the INU Server

After some parameter changes or after an update, the INU server restarts automatically. If the INU server is in an undefined state, you can also restart the INU server manually.

Restarting the INU Server via the INU Control Center

- 1. Start the INU Control Center.
- 2. Select MAINTENANCE Restart.
- 3. Click **Restart**.
- → The INU server restarts.

7.2 How to Update

You can update your INU server with a soft- and firmware update. New firmware/software contains new features and/or error fixes.

You can find the version number of the firmware/software installed on the INU server on the start page of the INU Control Center.

For current firmware/software files go to the SEH Computertechnik GmbH website:

https://www.seh-technology.com/us/services/downloads.html



Only the existing firmware/software is updated; settings will be preserved.



Important:

Every update file comes with a 'readme' file. Read the 'readme' file and follow its instructions.

- 1. Start the INU Control Center.
- 2. Select MAINTENANCE Update.
- 3. Specify the update file in the **Update file** box.
- 4. Click Install.
- → The update is executed. Afterwards, the INU server restarts.

7.3 How to Backup Your Configuration

All settings of the INU server (exception: passwords) are saved in the file '<Default-Name>_parameters.txt'.

You can save this parameters file as backup copy to your local client. This way you can return to a stable configuration status at any time.

You can edit the parameter values in the backed up file using a text editor. Afterwards, the edited file can be loaded onto one or more INU servers. The device(s) will then adopt the parameter values of the file.

You can find a detailed description of the parameters in the Parameter Lists \Rightarrow \(\begin{aligned}
\text{885}.\)

The INU-Server also has an automatic backup feature. It saves the parameter values, passwords and certificates installed on the INU server automatically to a connected SD card. After a parameter or certificate change, the backup will be updated automatically. To transfer the settings to another INU server, you simply insert the SD card into the other device. After a cold boot (interruption and re-establishment of the power supply), the settings will be loaded automatically.



WARNING

If the SD card is lost or stolen, your environment becomes vulnerable (certificates, passwords).

Therefore, you have to take all necessary precautions to protect the INUserver if you use the automatic backup.

See Parameter Values

- 1. Start the INU Control Center.
- 2. Select MAINTENANCE Parameter backup.
- 3. Click the icon (Q).
- → The current parameter values are displayed.

Saving the Parameter File

- 1. Start the INU Control Center.
- 2. Select MAINTENANCE Parameter backup.
- Click the icon <a>(
- 4. Save the '<default name>_parameters.txt' file to a local system using your browser.
- → The parameters file is backed up.

Loading the Parameters File onto a INU Server

- 1. Start the INU Control Center.
- Select MAINTENANCE Parameter backup.
- 3. In the Parameter file box, specify the '<default name>_parameters.txt' file.
- 4. Click Import.
- → The INU server adopts the parameter values from the file.

Automatic Backup

- ✓ An SD card is connected to the INU server.
- ✓ The SD card has the file system FAT12, FAT16 or FAT32.
- ✓ 1 MB of free space is available on the SD card.

(These requirements are fulfilled ex factory).

- 1. Start the INU Control Center.
- 2. Select MAINTENANCE SD card.
- 3. Tick Parameter backup.
- 4. Click **Save**.
- \rightarrow The settings will be saved.

7.4 How to Reset Parameters to their Default Values

You can reset the INU to its default values, e.g. if you want to install the INU server in a different network. All settings will be set to factory settings. Installed certificates will not be deleted.



Important:

The connection to the INU Control Center my be interrupted if the IP address of the INU server changes with the reset.

If required, determine the new IP address \Rightarrow \(\begin{array}{l} 21. \end{array}

You can change the settings either via remote access (INU Control Center) or via the reset button on the INU server.



If you lost the password for the INU Control Center, you can reset the INU server via the reset button. You do not need a password to do so.



WARNING

Remove the SD card from the INU server before resetting the parameters. Otherwise, the INU server will adopt the parameter values stored on it (automatic backup \Rightarrow \blacksquare 78).

Resetting Parameters via INU Control Center

- 1. Start the INU Control Center.
- 2. Select MAINTENANCE Default settings.
- Click **Default settings**.A security query appears.
- 4. Confirm the security query.
- → The parameters are reset.

Resetting Parameters via Reset Button

With the reset button you can reset the INU server's parameter values to their default settings.

- Press the reset button for 5 seconds.
 The INU server restarts.
- → The parameters are reset.

8 Appendix

The appendix contains a glossary, a troubleshooting guide and the lists of this document.

Glossary

Compound USB device

A compound USB device consists of a hub and one or more USB devices that are all integrated into a single housing. Dongles are often compound USB devices.

If a compound USB device is connected to a USB port of the INU server, all integrated USB devices will be shown in the INU Control Center and in the selection list of the SEH UTN Manager. When the port connection is activated, all displayed USB devices will be connected to the user's client. It is not possible to activate a port connection to only one of the USB devices.

Default name

Device name which is assigned by the manufacturer and cannot be changed. If you are using several identical INU servers, you can identify a certain device with it.

The default name of the INU server is made up of the two letters 'IC' and the device number. The device number consists of the last six numbers of the hardware address.


You can see the default name in the INU Control Center.

Hardware address

The hardware address (often also referred to as Ethernet address, physical address or MAC address) is the world-wide unique identifier of a network interface. If you are using several identical INU servers, you can identify a certain device with it.

The manufacturer has defines the address in the hardware of the device. It consists of 12 hexadecimal numbers. The first six numbers represent the manufacturer, while the last six numbers identify the individual device. The characters for separating the numbers depend on the platform. In Linux ':' are used.

Hardware address



Manufacturer ID Device number

You can see the hardware address on the housing or in the SEH UTN Manager.

INU Control Center

The INU Control Center is the user interface of the INU server. The INU server can be configured and monitored via the INU Control Center.

You access the INU Control Center with an Internet browser (e.g. Mozilla Firefox).

More information $\Rightarrow \blacksquare 9$.

8.1 Troubleshooting

In this chapter, a few problems are described, explained and fixed.

Problem

- INU Control Center: You Lost User Name and/or Password

 □83
- SEH UTN Manager: USB Devices Ae Not Shown

 □ ■83
- SEH UTN Manager: Features Are Not Available or Deactivated

 □84

Fix

INU Server: BIOS Mode

The INU server switches to the BIOS mode if the firmware works but the software is faulty. This may happen in the case of an incorrect software update, for example.



The LEDs indicate the BIOS mode:

- Status LED is off
- Activity LED blinks periodically



WARNING

The INU server is not operational if it is in BIOS mode.

Contact our support ⇒ 🖺 5.

INU Server: Connection Cannot Be Established

You find the INU server in the network and can reach it via TCP/IP connection. However, a connection via the SEH UTN Manager cannot be established.

Possible causes:

- A firewall or some other security software blocks communication.
 Add the UTN port respectively UTN SSL port as exception to your firewall or security software. Refer to the documentation of your firewall or security software on how to do this.
- The port numbers in the SEH UTN Manager and on the INU server are not identical: You changed the port number while SNMPv1 is deactivated, so that the change cannot be communicated to the SEH UTN Manager
 ⇒ ■26.

INU Control Center: Connection Cannot Be Established

Eliminate possible error sources. Check:

- · the cabling connections,
- the proxy settings of your browser (refer to the documentation of your browser for more information)

If you still cannot establish any connection, the following safety mechanisms might be the cause:

- Access is protected via SSL/TLS (HTTPS) ⇒ 159.



WARNING

If you reset the device, all settings are lost and the IP address might change. If required, determine the new IP address \Rightarrow \blacksquare 21.

INU Control Center: You Lost User Name and/or Password

If the access to the INU Control Center is protected but you have lost the access credentials, you can reset the INU server to its default values. After the reset you can access the INU Control Center again, as it is not protected by default.



WARNING

If you reset the device, all settings are lost and the IP address might change. If required, determine the new IP address \Rightarrow \blacksquare 21.

SEH UTN Manager: A Connection to the USB device Cannot Be Established

Possible causes:

- The driver software for the USB device is not installed on the client.
 Install the driver software for your USB device. Refer to the documentation of your USB device on how to do this.

SEH UTN Manager: USB Devices Ae Not Shown

Eliminate possible error sources: Check if the USB device is connected to the INU server.

If the USB device is still not displayed, the following issues might be the cause:

- Several compound USB devices (⇒ 🖺 81) are connected to the INU server. Each integrated USB device occupies a virtual USB port of the INU server. The number of these virtual USB ports is limited. If the limit is reached, no further USB devices can be used on this INU server (⇒ 🖺 44).
- The USB port key control is activated for the USB device
 □64.
 Only once the key for the USB port is entered in the SEH UTN Manager, the USB port and the connected USB device appear.

SEH UTN Manager: A USB Device Is Connected to the USB Port, but several USB Devices Are Displayed

Possible causes:

- A USB hub IH-304 is connected to the USB port of the INU server.

SEH UTN Manager: Features Are Not Available or Deactivated

Possible causes:

- Your client user account does not have the required administrative rights. This restricts user rights in the SEH UTN Manager as well. More details can be found in chapter 'SEH UTN Manager − Feature Overview' ⇒ 105. Start the SEH UTN Manager as administrator. Refer to the documentation of your operating system on how to do this.
- A function is not supported by the connected USB device.

8.2 Parameter Lists

The INU servers stores its configuration as parameters. You directly use parameters for:

- Administration via email ⇒ 18

The following tables list all parameters and their values so that you can use them in the actions named above.

- Table 15 'Parameter list IPv6' ⇒ ■87
- Table 17 'Parameter list SNMP' ⇒ 188

- Table 26 'Parameter list Notification'

 [□]
 [□]
 95

- Table 32 'Parameter list IPv4-VLAN' ⇒

 102
- Table 34 'Parameter list Backup' ⇒ 🖺 104
- Table 35 'Parameter list Miscellaneous' ⇒ 104

Table 14: Parameter list – IPv4

Parameters	Value	Default	Description
ip_addr [IP address]	valid IP address	169.254.0.0/ 16	IP address of the INU server.
ip_mask	valid IP address	255.255.0.0	Subnet mask of the INU server.
[Subnet mask]			Subnet masks are used to logically partition big networks into subnetworks. If you are using the INU server in a subnetwork, it requires the subnet mask of the subnetwork.
ip_gate [Gateway]	valid IP address	0.0.0.0	IP address of the network's standard gateway which the INU server uses.
,-			With a gateway, you can address IP addresses from other networks.
ip_dhcp	on/off	on	Enables/disables the DHCP protocol.
[DHCP]			If DHCP is enabled in your network, IP address assignment is automatic.
ip_bootp	on/off	on	Enables/disables the BOOTP protocol.
[BOOTP]			If BOOTP is enabled in your network, IP address assignment is automatic.
ip_auto	on/off	on	Enables/disables the ARP/PING protocol.
[ARP/PING]			You can use the commands ARP and PING to change an IP address which was assigned via Zeroconf. The implementation depends on your system; read the documentation of your operating system.



We recommend that you deactivate **DHCP**, **BOOTP** and **ARP/PING** as soon as the INU server has received its IP address.

Table 15: Parameter list – IPv6

Parameters	Value	Default	Description
ipv6 [IPv6]	on/off	on	Enables/disables the IPv6 functionality of the INU server.
ipv6_auto [Automatic configuration]	on/off	on	Enables/disables the automatic assignment of the IPv6 address to the INU server.
ipv6_addr [IPv6 address]	n:n:n:n:n:n:n	::	Defines an IPv6 unicast address in the format n:n:n:n:n:n:n which is manually assigned to the INU server.
			 Every 'n' represents the hexadecimal value of one of the eight 16 bit elements of the ad- dress.
			 Leading zeros can be omitted.
			 An IPv6 address may be entered or displayed using a shortened version when successive fields contain all zeros (0). In this case, two colons (::) are used.
ipv6_gate [Router]	n:n:n:n:n:n:n	#	Manually defines a static router to which the INU server sends its requests.
ipv6_plen [Prefix length]	0–64 [1–2 characters;	64	Defines the length of the subnet prefix for the IPv6 address. The value 64 is preset.
- J -	0-9]		Address ranges (e.g. your network) are specified with prefixes. To do this, the prefix length (number of bits used) is added to the IPv6 address as a decimal number and the decimal number is preceded by '/'.

Table 16: Parameter list – DNS

Parameters	Value	Default	Description
dns [DNS]	on/off	on	Enables/disables the name resolution via a DNS server.
dns_domain	max. 255 characters	[blank]	Defines the IP address of the primary DNS
[Domain name]	[a-z, A-Z, 0-9]		server.
dns_primary	valid IP address	0.0.0.0	Defines the IP address of the secondary DNS
[Primary DNS server]			server.
			The secondary DNS server is used if the first one is not available.
dns_secondary	valid IP address	0.0.0.0	Defines the domain name of an existing DNS
[Secondary DNS server]			server.

Table 17: Parameter list - SNMP

Parameters	Value	Default	Description
snmpv1 [SNMPv1]	on/off	on	Enables/disables SNMPv1.
snmpv1_ronly [Read-only]	on/off	off	Enables/disables the write protection for the community.
snmpv1_community [Community]	max. 64 characters [a-z, A-Z, 0-9]	public	SNMP community name Enter the name as it is defined in the monitoring station.
·			Important:



The default name is 'public'. This name is commonly used for read/write communities. We recommend to change it as soon as possible to increase security.

snmpv3 [SNMPv3]	on/off	on	Enables/disables SNMPv3.
any_hash [Hash]	md5 sha	md5	Specifies the hash algorithm for SNMP user group 1.
any_rights [Access rights]	readonly readwrite	readonly	Defines the access rights of the SNMP user group 1 = [none]
any_cipher [Encryption]	aes des		Defines the encryption method of the SNMP user group 1 = [none]
admin_hash [Hash]	md5 sha	md5	Specifies the hash algorithm for SNMP user group 2.
admin_rights [Access rights]	 readonly readwrite	readwrite	Defines the access rights of the SNMP user group 2 = [none]
admin_cipher [Encryption]	aes des		Defines the encryption method of the SNMP user group 2.



Important:

The INU server user accounts are also used as SNMP user accounts \Rightarrow \blacksquare 26. Consider this when setting up user accounts.

Table 18: Parameter list – Bonjour

Parameters	Value	Default	Description
bonjour [Bonjour]	on/off	on	Enables/disables Bonjour.
bonjour_name [Bonjour name]	max. 64 characters [a–z, A–Z, 0–9]	[Default name]	Defines the Bonjour name of the INU server. The INU server uses this name to announce its Bonjour services. If no Bonjour name is entered, a default name will be used (device name@ICxxxxxxx).

Table 19: Parameter list – POP3

Parameters	Value	Default	Description
pop3 [POP3]	on/off	off	Enables/disables the POP3 functionality.
pop3_srv [Server name]	max. 128 characters	[blank]	Defines the POP3 server via its IP address or host name.
			A host name can only be used if a DNS server was configured beforehand.
pop3_port [Server port]	1–65535 [1–5 characters; 0–	110	Defines the port which the INU server uses to receive emails.
	9]		The default port number for POP3 is 110. The default port number for SSL/TLS (parameter 'pop3_sec' ⇒
pop3_sec	0–2	0	Defines the authentication method to be used:
[Security]	[1 character; 0–2]		 APOP: encrypts the password when logging on to the POP3 server.
			 SSL/TLS: encrypts the entire communication with the POP3 server. The encryption strength is defined via the encryption proto- col and level ⇒
			0 = no security
			1 = APOP
			2 = SSL/TLS
pop3_poll [Check mail every]	1–10080 [1–5 characters; 0–9]	2	Defines the time interval (in minutes) which with the POP3 server is checked for emails.
pop3_limit	0–4096	4096	Defines the maximum email size (in Kbyte) to be
[lgnore mail exceed-	[1–4 characters;		accepted by the INU server.
ing]	0–9]		0 = unlimited
pop3_usr [User name]	max. 128 characters	[blank]	Defines the user name used by the INU server to log on to the POP3 server.
pop3_pwd [Password]	max. 128 characters	[blank]	Defines the user password used by the INU server to log on to the POP3 server.

Table 20: Parameter list – SMTP

Table 20. Farameter iis	. J.1111		
Parameters	Value	Default	Description
smtp_srv [Server name]	max. 128 characters	[blank]	Defines the SMTP server via the IP address or the host name.
			A host name can only be used if a DNS server was configured beforehand.
smtp_port [Server port]	1–65535 [1–5 characters;	25	Defines the port which the INU server and SMTP server use to communicate.
	0–9]		The default port number for SMTP is 25. For SSL/TLS (parameter 'smtp_ssl' ⇒ 🖺 90), SMTP servers use by default port 587 (STARTSSL/STARTTLS) or the old port 465 (SMTPS). If required, read the documentation of your SMTP server.
smtp_ssl	on/off	off	Enables/disables SSL/TLS.
[SSL/TLS]			SSL/TLS encrypts the communication from the INU to the SMTP server. The encryption strength is defined via the encryption protocol and level ⇒ ■60.
smtp_sender [Sender name]	max. 128 characters	[blank]	Defines the email address used by the INU server to send emails.
			Very often the name of the sender and the email account user name are identical.
smtp_auth [Login]	on/off	off	Enables/disables SNMP authentication (SMTP AUTH). To send emails, the INU sends its user name and password to the SMTP server to authenticate itself. Enter user name (parameter 'smtp_usr' ⇒ 190) and password (parameter 'smtp_pwd' ⇒ 190).
			Some SMTP servers require SMTP authentication to prevent fraudulent use (spam).
smtp_usr [User name]	max. 128 characters	[blank]	Defines the user name used by the INU server to log on to the SMTP server.
smtp_pwd [Password]	max. 128 characters	[blank]	Defines the password used by the INU server to log on to the SMTP server.
smtp_sign [Security (S/MIME)]	on/off	off	Enables/disables the email security standard S/MIME (Secure/Multipurpose Internet Mail Extensions). S/MIME is used to sign (parameter 'smtp_sign' ⇒ 🖺90) or encrypt (parameter 'smtp_encrypt' ⇒ 🖺91) emails. Enable the desired feature (if desired with 'smtp_attpkey' ⇒ 🖺90).
smtp_attpkey	on/off	on	Sends the public key together with the email.
[Attach public key]			Many email clients require the key to display the email.

Parameters	Value	Default	Description
smtp_encrypt [Full encryption] [Signing emails]	on/off	off	on = Activates the encryption of emails. Only the intended recipient can open and read the encrypted email. An S/MIME certificate is required for the encryption
			off = Activates the signing of emails. The recipient can use the signature to check the sender's identity. This proves, that the email has not been altered. An S/MIME certificate is required for the signing of emails

Table 21: Parameter list – IPv4-VLAN

Parameters	Value	Default	Description
ip4vlan_mgmt [IPv4 management	on/off	off	Enables/disables the forwarding of IPv4 management VLAN data.
VLAN]			If this option is enabled, SNMP is only available in the IPv4 management VLAN.
ip4vlan_mgmt_id [VLAN-ID]	0-4096 [1-4 characters; 0-9]	0	ID for the identification of the IPv4 management VLAN.
ip4vlan_mgmt_any [Access from any VLAN]	on/off	off	Enables/disables the administrative access (web) to the INU server via IPv4 client VLANs. If this option is enabled, the INU server can be administrated via all VLANs.
ip4vlan_mgmt_untag [Access via LAN (untagged)]	on/off	on	Enables/disables the administrative access to the INU server via IPv4 packets without tag. If this option is disabled, the INU server can only be administrated via VLANs.
ipv4vlan_on_1 ~ ipv4vlan_on_20 [VLAN]	on/off	off	Enables/disables the forwarding of IPv4 client VLAN data.
ipv4vlan_addr_1 ~ ipv4vlan_addr_20 [IP address]	valid IP address	192.168.0.0	IP address of the INU server within the IPv4 client VLAN.
ipv4vlan_mask_1 ~ ipv4vlan_mask_20 [Subnet mask]	valid IP address	255.255.255. 0	Subnet mask of the INU server within the IPv4 client VLAN.
ip4vlan_gate_1 ~ ip4vlan_gate_20 [Gateway]	valid IP address	0.0.0.0	IP gateway address in the IPv4 management VLAN. With a gateway, you can address IP addresses from other networks.
ipv4vlan_id_1 ~ ipv4vlan_id_20 [VLAN-ID]	0-4096 [1-4 characters; 0-9]	0	ID for the identification of the IPv4 client VLAN.
utn_2vlan_1 ~ utn_2vlan_20 [Allocate VLAN]	0–9 [1 character; 0–9]	0	Allocates a VLAN to the USB port. 0 = every 1 = VLAN 1 2 = VLAN 2 etc. 9 = none

Table 22: Parameter list – Date/Time

Parameters	Value	Default	Description
ntp [Date/Time]	on/off	on	Enables/disables the use of a time server (SNTP).
ntp_server [Time server]	max. 64 characters [a-z, A-Z, 0-9]	pool.ntp.org	Defines a time server via the IP address or the host name. The host name can only be used if a DNS server was configured beforehand. Important: If your network in configured accordingly, the INU server receives the time server settings automatically via DHCP. A time server assigned in such a manner always takes precedence over manual settings.
ntp_tzone [Time zone]	UTC, GMT, EST, EDT, CST, CDT, MST, MDT, PST, PDT, etc.	CET/CEST (EU)	Compensates Coordinated Universal Time (UTC) for location and national particularities (daylight saving time etc.).

Table 23: Parameter list – Description

Parameters	Value	Default	Description
sys_name [Host name]	max. 64 characters [a-z, A-Z, 0-9]	[blank]	Device name as alternative to IP address. With a name you can identify the INU server more easily in the network, e.g. if you are using several INU servers.
			Is displayed in the INU Control Center and SEH UTN Manager.
sys_descr	max. 64 characters	[blank]	Device description, e.g. location or department.
[Description]	[a–z, A–Z, 0–9]		Is displayed in the INU Control Center and SEH UTN Manager.
sys_contact	max. 64 characters	[blank]	Contact person, e.g. device administrator.
[Contact person]	[a-z, A-Z, 0-9]		Is displayed in the INU Control Center.

Table 24: Parameter list – USB port

Parameters	Value	Default	Description
utn_tag_1 ~	max. 32 characters [a-z, A-Z, 0-9]	[blank]	Freely definable name of the USB port.
utn_tag_20 [Port name]	[a 2, 11 2, 0 3]		
utn_poff_1 ~ utn_poff_20 [Port]	on/off	off	Disables/enables the power supply for the USB port (i.e. the USB device connected to the port). off = power on on = power off

Table 25: Parameter list – UTN port

Table 25. Talameter list – 6114 port				
Parameters	Value	Default	Description	
utn_port [UTN port]	•	Defines the number of the UTN port (for unencrypted connections).		
	0–9]		WARNING	
			The UTN port must not be blocked by security software (firewall).	
utn_sslport	1-9443	9443	Defines the number of the UTN SSL port (for	
[UTN SSL port]	[1–4 characters;		encrypted connections).	
	0–9]		WARNING	
			The UTN SSL port must not be blocked by security software (firewall).	

Table 26: Parameter list – Notification

Parameters	Value	Default	Description
mailto_1 mailto_2 [Email address]	valid email address [max. 64 characters]	[blank]	Email address of the recipient for notifications.
noti_stat_1 noti_stat_2 [Status email]	on/off	off	Enables/disables the periodical sending of a status email to recipient 1 or 2.
notistat_d [Interval]	al su mo tu we th fr sa	al	Defines the day (the interval) on which a status email is sent. al = daily su = Sunday mo = Monday tu = Tuesday we = Wednesday th = Thursday fr = Friday sa = Saturday
notistat_h [hh]	0–23 [1–2 characters; 0–9]	0	Specifies the time (hour) at which a status email is sent. 1 = 1. hour 2 = 2. hour 3 = 3. hour etc.
notistat_tm [mm]	0–5 [1 character; 0–5]	0	Specifies the time (minute) at which a status email is sent. 0 = 00 min 1 = 10 min 2 = 20 min 3 = 30 min 4 = 40 min 5 = 50 min
noti_dev_1 noti_dev_2 [Send email if USB devices are connected or disconnected]	on/off	off	Enables/disables the sending of emails after a USB device was connected to/removed from the INU server.
noti_act_1 noti_act_2 [Send email if USB port is activated or deacti- vated]	on/off	off	Enables/disables the sending of emails after a USB port (i.e. the connection to the connected USB device) was activated/deactivated.

Parameters	Value	Default	Description
noti_pup_1 noti_pup_2 [Send email if INU server is restarted]	on/off	off	Enables/disables the sending of emails when the INU server restarts.
noti_pwr_1 noti_pwr_2 [Send email if power supply is interrupted or established]	on/off	off	Enables/disables the sending of emails when one of the two power supplies of the INU server is interrupted or established.
noti_lnk_1 noti_lnk_2 [Send email if network connection is inter- rupted or established]	on/off	off	Enables/disables the sending of emails when one of the two network connection of the INU server is interrupted or established.
noti_sdinout_1 noti_sdinout_2 [Send email if SD card is connected or disconnected]	on/off	off	Enables/disables the sending of emails after an SD card was connected to/removed from the INU server.
noti_sdunusable_1 noti_sdunusable_2 [Send email if SD card cannot be used]	on/off	off	Enables/disables the sending of emails if the SD card is unusable.
trapto_1 trapto_2 [Address]	valid IP address	0.0.0.0	SNMP trap address of the recipient.
trapcommu_1 trapcommu_2 [Community]	max. 64 characters [a-z, A-Z, 0-9]	public	SNMP trap community of the recipient.
trapdev [Send trap if USB devices are connected or disconnected]	on/off	off	Enables/disables the sending of SNMP traps after a USB device was connected to/removed from the INU server.
trapact [Send trap if USB ports are activated or deactivated]	on/off	off	Enables/disables the sending of SNMP traps after a USB port (i.e. the connection to the connected USB device) was activated/deactivated.
trappup [Send trap if INU server is restarted]	on/off	off	Enables/disables the sending of SNMP traps when the INU server is restarted.

Parameters	Value	Default	Description
trap_pwr [Send trap if power supply is interrupted or established]	on/off	off	Enables/disables the sending of SNMP traps when one of the two power supplies of the INU server is interrupted or established.
trap_Ink [Send trap if network connection is inter- rupted or established]	on/off	off	Enables/disables the sending of SNMP traps when one of the two network connections of the INU server is interrupted or established.
trap_sdinout [Send trap if SD card is connected or discon- nected]	on/off	off	Enables/disables the sending of SNMP traps after an SD card was connected to/removed from the INU server.
trap_sdunusable [Send trap if SD card cannot be used]	on/off	off	Enables/disables the sending of SNMP traps if the SD card is unusable.

Table 27: Parameter list	– SSL/TLS connection	าร		
Parameters	Value	Default	Description	
sslmethod [Encryption protocol]	any sslv3 tls10 tls11 tls12	any	Defines the encryption protocol for SSL/TLS connections. any = at will (automatic negotiation) sslv3 = SSL 3.0 tls10 = TLS 1.0 tls11 = TLS 1.1 tls12 = TLS 1.2 WARNING Current browsers do not support low security settings. If you use S with a current browser and the s ting HTTPS only for access to the INU Control Center (□ □ 59), a conection cannot be established. Use TLS (and not SSL).	
security [Encryption level]	1–4 [1 character; 1–4]	4	Defines the encryption level for SSL/TLS connections. 1 = low 2 = medium 3 = high 4 = any (automatic negotiation) WARNING	



Current browsers do not support cipher suites from the **Low** level. If you use **Low** with a current browser and the setting **HTTPS only** for access to the INU Control Center (⇒ 159), a connection cannot be established.

Use an encryption level as high as

possible.



WARNING

The SEH UTN Manager does not support the encryption level **Low**. If you set up **Low** in combination with an encrypted USB connection, a connection cannot be established.

Use an encryption level as high as possible.

Table 28: Parameter list – INU Control Center security

Table 20. Talameter list	into control center security				
Parameters	Value	Default	Description		
http_allowed [Connection]	on/off	on	Defines the connection type (HTTP/HTTPS) to be used for connecting to the INU Control Center.		
			on = HTTP/HTTPS		
			off = HTTPS only		
			The encryption strength is defined via the encryption protocol and level \Rightarrow \blacksquare 60.		
			WARNING		
			Current browsers do not support low security settings. With them a connection cannot be established.		
			Do <u>not</u> use the following combina- tion: Encryption protocol HTTPS and encryption level Low .		
			When the connection is estab- lished, the identity of the INU		
	server i		server is verified. For that, the client asks for the		
			certificate via the browser (\$\Bigo \Bigo 67). This certificate must be assented by the browser read the		
			cate must be accepted by the browser; read the documentation of your browser software.		
sessKeys [Restrict Control Center access]	on/off	off	Enables/disables the INU Control Center user accounts. If they are enabled, a login screen is displayed when opening the INU Control Cen-		
			ter. Important:		
			Define user accounts (user names and passwords).		
admin_name [Administrator – User	max. 64 characters [a-z, A-Z, 0-9]	admin	Defines the user name for the administrator user account.		
name]	[a-2, A-2, 0-9]		Important:		
			Also is the user name of the SNMPv3 admin account ⇒ 🖺 26.		
admin_pwd	8–64 characters	administrator	Defines the password for the administrator user account.		
[Administrator – Pass-word]	[a-z, A-Z, 0-9]		Important:		
			Also is the password of the SNMPv3 admin account ⇒ \(\begin{array}{c} 26. \end{array}		
any_name [Read-only user – User	max. 64 characters [a-z, A-Z, 0-9]	anonymous	Defines the user name for the read-only user account.		
name]	[u - ∠, ハ - ∠, U - ϶]		Important:		
			Also is the user name of the SNMPv3 user account ⇒ \(\begin{array}{c} 26. \end{array}		

Parameters	Value	Default	Description		
any_pwd [Read-only user – Pass-	max. 64 characters [a-z, A-Z, 0-9]	[blank]	Defines the password for the read-only user account.		
word]			Important: Also is the password of the SNMPv3 user account		
sessKeyUList	on/off	on	Defines the type of login screen.		
[Login screen displays]			on= Shows a user list, only password must be entered		
			off= neutral login mask, user name and pass- word must be entered		
sessKeyTimer	on/off	on	Enables/disables the session timeout.		
[Session timeout]					
sessKeyTimeout [Session timeout]	120–3600 [3–4 characters; 0–9]	600	Time in seconds after which the timeout is to be effective.		

Table 29: Parameter list – TCP port access

	<u> </u>					
Parameters	Value	Default	Description			
protection [Port access control]	on/off	off	Enables/disables the blocking of selected ports and thus connections to the INU server.			
protection_level [Security level]	protec_utn protec_tcp protec_all	protec_utn	Specifies the port types to be blocked: protec_utn = UTN access (UTN ports) protec_tcp = TCP access (TCP ports: HTTP/ HTTPS/UTN) protec_all = all ports (IP ports)			
<pre>ip_filter_on_1 ~ ip_filter_on_8 [IP address]</pre>	on/off	off	Enables/disables an exception from the port locking.			
<pre>ip_filter_1 ~ ip_filter_8 [IP address]</pre>	valid IP address	[blank]	Defines networks elements that are excluded from port blocking via their IP address. Important: The use of wildcards (*) allows you to define subnetworks.			
hw_filter_on_1 ~ hw_filter_on_8 [MAC address]	on/off	off	Enables/disables an exception from the port locking.			
hw_filter_1 ~ hw_filter_8 [MAC address]	valid hardware address	00:00:00:00:0 0:00	Defines elements that are excluded from port locking using the MAC address (hardware address). Important: MAC addresses are not delivered through routers!			
protection_test [Test mode]	on/off	on	Enables/disables the test mode. WARNING The test mode is active by default.			



The test mode is active by default so that you can test your settings without locking yourself out. Your settings will be active until the INU is restarted, afterwards access is no longer restricted.

After you have successfully tested your settings, you have to deactivate the test mode so that access control is permanent.

Table 30: Parameter list – USB connection encryption

Parameters	Value	Default	Description
utn_sec_1 ~ utn_sec_20 [USB port]	on/off	off	Enables/disables the SSL/TLS encryption for the connection between USB port (i.e. USB device) and client. Important: Only payload will be encrypted. Control and log data will be transmitted without encryption.

Table 31: Parameter list – USB device type blocking

Parameters	Value	Default	Description
utn_hid [Disable input devices (HID class)]	on/off	on	Enables/disables the blocking of input devices (HID – human interface devices). on = no blocking off = blocking

Table 32: Parameter list – IPv4-VI AN

Table 32: Parameter list – IPV4-VLAN						
Parameters	Value	Default	Description			
utn_accctrt_1 ~ utn_accctrt_20 [Method]	ids key keyids		Defines the method(s) for limiting the access and use of the USB port and the connected U device. = no protection ids = device assignment key = port key control keyids = device assignment and key control			
utn_keyval_1 ~ utn_keyval_20 [Key]	max. 64 characters [a-z, A-Z, 0-9]	[blank]	Defines the key for the USB port and the connected USB device when port key control is used.			
utn_vendprodIDs_1 ~ utn_vendprodIDs_20 [USB device]			Defines the VID (Vendor ID) and PID (Product ID) of the USB device that is assigned to the USB port via the device assignment. Often VID and PID of a USB device are unknown. We recommend configuration via the INU Control Center because VID and PID will be automatically determined and entered with this method.			

Table 33: Parameter list – Authentication

_						
Parameters	Value	Default	Description			
auth_typ [Authentication method]	MD5 TLS TTLS PEAP FAST		Defines the authentication method used in your network in which the INU server is to participate. = none MD5 = EAP-MD5 TLS = EAP-TLS TTLS = EAP-TLS PEAP = PEAP FAST = EAP-FAST			
auth_name [User name]	max. 64 characters [a–z, A–Z, 0–9]	[blank]	Defines the user name with which the INU server is set up on the RADIUS server for the EAP authentication methods MD5, TTLS, PEAP, and FAST.			
auth_pwd [Password]	max. 64 characters [a–z, A–Z, 0–9]	[blank]	Defines the password with which the INU server is set up on the RADIUS server for the EAP authentication methods MD5, TTLS, PEAP, and FAST.			
auth_intern [Inner authentication]	PAP CHAP MSCHAP2 EMD5 ETLS		Defines the kind of inner authentication for the EAP authentication methods TTLS, PEAP, and FAST. = none PAP = PAP CHAP = CHAP MSCHAP2 = MS-CHAPv2 EMD5 = EAP-MD5 ETLS = EAP-TLS			
auth_extern [PEAP/EAP-FAST options]	PLABELO PLABEL PVERO PVER1 FPROV1		Defines the kind of external authentication for the EAP authentication methods TTLS, PEAP, and FAST. = none PLABEL0 = PEAPLABEL0 PLABEL1 = PEAPLABEL1 PVER0 = PEAPVER0 PVER1 = PEAPVER1 FPROV1 = FASTPROV1			
auth_ano_name [Anonymous name]	max. 64 characters [a–z, A–Z, 0–9]	[blank]	Defines the anonymous name for the unencrypted part of the EAP authentication methods TTLS, PEAP, and FAST.			
auth_wpa_addon [WPA Add on]	max. 255 characters [a–z, A–Z, 0–9]	[blank]	Defines an optional WPA expansion for the EAP authentication methods TTLS, PEAP, and FAST.			

Table 34: Parameter list – Backup

Parameters	Value	Default	Description
autoSync [Parameter backup]	on/off	on	Enables/disables the automatic backup of parameter values, passwords, and certificates to a connected SD card.

Table 35: Parameter list – Miscellaneous

Parameters	Value	Default	Description
utn_heartbeat	1–1800 [1–4 characters; 0–9]	180	WARNING This parameter can only be used after consultation with the SEH support team.
utn_poffdura_1 ~ utn_poffdura_20	0–100 [1–3 characters; 0–9]	0	WARNING This parameter can only be used after consultation with the SEH support team.
utn_prereset_1 ~ utn_prereset_20	on/off	off	WARNING This parameter can only be used after consultation with the SEH support team.

8.3 SEH UTN Manager - Feature Overview

Which features are inactive (greyed out) in the SEH UTN Manager depends on different factors:

- · Selection list mode
 - global
 - user
- Client operating system (Windows, macOS, Linux)
- · Client user account
 - administrator or group members of 'utnusers'
 - standard user or users which are not members of the group 'utnusers'
- Write access to the *.ini file (selection list)



The administrator can use these factors to provide users with individual functions.

The following table gives an overview. It shows the features that are basically available. In addition, individual features will not be displayed or will be displayed as inactive because

- the USB device connected does not support them
- · security measures have been implemented

Table 36: SEH UTN Manager – Feature Overview Linux

	Global Selection List		l	User Selection List		
	Adminis- trator	User	Adminis- trator	User (read/ write *.ini)	User (no read/ write *.ini)	
Menu						
Selection List – Edit	✓	x	✓	✓	×	
Selection List – Export	✓	x	✓	×	×	
Selection List – Refresh	✓	\checkmark	✓	✓	✓	
UTN Server – Configure	✓	\checkmark	✓	\checkmark	✓	
UTN Server – Set IP Address	✓	\checkmark	✓	✓	✓	
UTN Server – Activate Auto-Connect	✓	×	✓	×	×	
USB Server – Set USB Port Keys	✓	×	✓	✓	×	
UTN Server – Add	✓	×	✓	\checkmark	×	
UTN Server – Remove	✓	×	✓	✓	×	
UTN Server – Refresh	✓	\checkmark	✓	\checkmark	✓	
Port – Activate	✓	✓	✓	✓	✓	
Port – Deactivate	✓	\checkmark	✓	\checkmark	✓	
Port – Request	✓	\checkmark	✓	\checkmark	✓	
Port – Remove	✓	×	✓	×	×	
Port – Settings	✓	✓	✓	\checkmark	✓	

	Global Selection List		User Selection List		
	Adminis- trator	User	Adminis- trator	User (read/ write *.ini)	User (no read/ write *.ini)
Buttons					
Selection List – Refresh	✓	✓	✓	✓	✓
Selection List – Edit	✓	×	✓	✓	×
Port – Activate	✓	✓	✓	✓	✓
Port – Deactivate	✓	✓	✓	✓	✓
'Program – Options' dialog					
Network Scan – Multicast Search	✓	×	✓	×	×
Network Scan – IP Range Search	✓	×	✓	×	×
Program – Program Messages	✓	×	\checkmark	×	×
Program – Program Update	✓	×	✓	×	×
Automatisms – Auto-Disconnect	✓	×	\checkmark	×	×
Selection List – Selection List Mode	✓	×	✓	×	×
Selection List – Automatic Refresh	✓	×	✓	×	×
'Port Settings' dialog					
Messages	✓	\checkmark	✓	✓	✓

8.4 Index	Cipher suite 60
	Client certificate 67
A	Complete version 13
Administration	Compound USB device 44, 81
email 18	Configuration backup 78
INU Control Center 9 remote access 18	Connection
SEH UTN Manager 11	encryption 59
Administrator 62	INU Control Center 59
Authentication 72	Console 52
	Contact 5
Auto-Connect 47	Contact person 34
Auto-Disconnect 47	
Automatic backup 78	D
Automatic connection 47	Default certificate 67
Automatisms	Default name 81
Auto-Connect 47	Description 34
Auto-Disconnect 47 utnm 52	Device
utiiii 32	contact person 34
В	description 34
Backup 78	name 34, 81 number 81
automatic 78	time 33
BadUSB 66	Device number 81
Bonjour 27	
BOOTP (Bootstrap Protocol) 21	DHCP (Dynamic Host Configuration Protocol) 21
Brochures 4	DNS (Domain Name Service) 25
Browser 9	Documentation 4 further applicable documents 4
Button 80	mark-ups 4
_	symbols 4
C	Downloads 5
CA (certification authority) 67	
CA certificate 67	E
Certificate 67	EAP (Extensible Authentication Protocol) 72
CA 67	FAST (Flexible Authentication via Secure Tunnel-
client 67	ing) 74 MD5 (Message Digest #5) 72
create 68 default 67	PEAP (Protected Extensible Authentication Proto-
delete 71	col) 73
management 67	TLS (Transport Layer Security) 72
PKCS#12 67	TTLS (Tunneled Transport Layer Security) 73
request 69	Email 38
requested 67	administration 18
S/MIME 67	event 38
self-signed 67	notifications 38
view 68	POP3 28
Certification authority 67	SMTP 28

INU User Manual Linux

status 38	IP address		
Encryption 57	dynamic 21		
cipher suite 60	IPv4 21		
email 60	IPv6 23		
HTTP 60	static 21		
Level 60	IP ports 63		
POP3 60	IPv4		
protocol 60	gateway 22		
SMTP 60	subnet mask 22		
SSL/TLS 57	IPv6 23		
strength 60	prefix length 24		
USB connection 60	L		
web access 60	_		
Ethernet address 81	Liability 6		
Event notification 38	Licenses 4		
F	Login 62		
	Login screen 62		
Factory default settings 80	М		
File ' <default-name_parameter.txt>' 78</default-name_parameter.txt>	MAC address 81		
Firmware/software 77			
Further applicable documents 4	Maintenance 75		
G	Markups 4		
Gateway 22	Minimal version 13		
•	Monitoring 26		
Global Selection List 50	Multicast search 42		
Guarantee 6	N		
н			
Hardware address 81	Network list 42		
Hardware Installation Guide 4	Notification service 38		
HID (Human Interface Device) 66	Notifications 38		
blocking 66	0		
Host name 34, 93	Online help 4		
Name resolution 25	•		
HTTP/HTTPS 59	Open source licenses 4		
,	P		
I	Parameters 85		
IEEE 802.1X 72	backup 78		
Improper use 6	default values 80		
ini-file 50	edit 78		
write access 50	file 78		
Intended use 6	lists 85		
INU Control Center 9, 81	load 78		
controls 10	see 78		
encrypted connection 59	Password 62		
user accounts 62	lost 80		

INU User Manual Linux

Obvical address 91	ctart 17	
Physical address 81 PKCS#12 certificate 67	start 17 versions 13	
	without graphical user interface 52	
PKI (public key infrastructures) 67	SEH UTN Service 13	
Point-to-point connection 44	Selection list 42, 50	
POP3 (Post Office Protocol Version 3) 28	global 50	
Port blocking 63	user 50	
Port connection 11, 41	Self-signed certificate 67	
activate 44	Session timeout 62	
deactivate 45	Settings	
Prefix length 24	backup 78	
Product information 4, 5	transfer 78	
Protection mechanisms 56	SMTP (Simple Mail Transfer Protocol) 28	
Purpose 2	SNMP (Simple Network Management Protocol) 26	
	community 26	
₹ Quick Installation Guide 4	password 26	
Zuick installation duide 4	SNMPv1 26	
R	SNMPv3 26	
Read-only user 62	trap 38	
Release request 46	user 26	
Remote access 18	SNTP (Simple Network Time Protocol) 33	
Repairs 6	SSL (Secure Sockets Layer) 57, 59, 60	
Requested certificate 67	SSL/TLS connection 60	
Reset 80	Status email 38	
button 80	Subnet mask 22	
remote access 80	Symbols 4	
Reset button 80	System requirements 2	
Restart 76		
_	Т	
	TCP access 63	
5/MIME certificate 67	TCP port access control 63	
Safety regulations 6	exception 63	
Script 52	test mode 63	
SD card 78	Test mode 63	
automatic backup 78	Time server 33	
transfer settings 78	Time zone 33	
Security level 63	Timeout 62	
Security mechanisms 56	TLS (Transport Layer Security) 57, 59, 60	
SEH UTN Manager 11, 41	Trap 38	
complete version 13	U	
feature overview 105		
features 11	Update 77	
install 13	USB connection 37	
minimal version 13, 52 selection list 50	automate 47 automatic 47	
Selection list 50	automatic T/	

INU User Manual Linux

automatic disconnect 47	UTC 33
disconnect 45	UTN 37
encryption 37, 44, 57	UTN access 63
point-to-point 44	UTN port 37, 63
unencrypted 37	encrypt 37
USB data transfer	SSL port 37
encryption 57	unencrypted 37
USB device	UTN SSL port 57
access 64	utnm 52
automatic connection 47	commands 52
automatic disconnect 47	return value 54
automatisms 47	syntax 52
compound 44, 81	Sylitax 32
connect 41, 44	V
disconnect 45	Version number 77
find 42	Virtual USB ports 44
HID (Human Interface Device) 66	VLAN (Virtual Local Area Network) 30
notifications 49	IPv4 client VLAN 30
release 46	IPv4 management VLAN 30
request 46	USB ports 30
status information 49	222 parties
user access 50	W
USB device access 64	Warnings 6
USB port 35, 36	Website 5
access 64	_
activate 44	Z
automatic connection 47	Zeroconf 21
automatic disconnect 47	
connect 44	
deactivate 45	
device assignment 64	
disable 36	
disconnect 45	
enable 36	
encryption 57	
key control 64	
name 35	
notifications 49	
power supply 36 status information 49	
virtual 44	
User account 62	
administrator 62	
password 62	
read-only user 62	
User name 62	
User Selection List 50	