

Manufacturer & Contact

SEH Computertechnik GmbH Suedring 11 33647 Bielefeld

Germany

Phone: +49 (0)521 94226-29 Fax: +49 (0)521 94226-99 Support: +49 (0)521 94226-44

Email: info@seh.de

Web: https://www.seh-technology.com



Document

Type: User Manual

Title: myUTN User Manual macOS

Version: 4.1 | 2021-07

Legal Information

SEH Computertechnik GmbH has endeavored to ensure that the information in this documentation is correct. If you detect any inaccuracies please inform us at the address indicated above. SEH Computertechnik GmbH will not accept any liability for any error or omission. The information in this manual is subject to change without notification.

The original manual is the German version of this document and shall govern. All non-German versions of this document are translation of the original manual.

All rights are reserved. Copying, other reproduction, or translation without the prior written consent from SEH Computertechnik GmbH is prohibited.

© 2021 SEH Computertechnik GmbH

All trademarks, registered trademarks, logos and product names are property of their respective owners.

myUTN User Manual macOS

1	General Information	1
1.1	Product	2
1.2	Documentation	4
1.3	Support and Service	5
1.4	Your Safety	6
1.5	First Steps	7
2	Administration Methods	8
2.1	Administration via myUTN Control Center	9
2.2	Administration via the SEH UTN Manager	11
2.3	5	
2.4	Administration via Email	18
3	Network Settings	20
3.1	How to Configure IPv4 Parameters	21
3.2	5	
3.3	J	
3.4	3	
3.5	5	
3.6	<u> </u>	
3.7		
3.8	How to Use the UTN Server in VLAN Environments (only myUTN-80 and later)	32
4	9	
4.1	3	
4.2	3	
4.3		
4.4		
4.5		
4.6		
4.7 4.8		
5	Working with the SEH UTN Manager	
5.1		
5.2		
5.3		
5.4		
5.5		
5.6		
5.7		
5.8	, ,	
	Security	
6.1	71	
6.2	, , , , , , , , , , , , , , , , , , ,	
6.3		
6.4	· · · · · · · · · · · · · · · · · · ·	
6.5	· · · · · · · · · · · · · · · · · · ·	
6.6		
6.7	How to Block USB Device Types	

myUTN User Manual macOS

5.8 5.9	How to Use Certificates How to Configure Network Authentication (IEEE 802.1X)	
7	Maintenance	82
7.1	How to Restart the UTN Server	83
7.2	How to Update	84
7.3	How to Backup Your Configuration	85
7.4	How to Reset Parameters to their Default Values	87
8	Appendix	89
3.1	Glossary	90
3.2	Troubleshooting	91
3.3	Parameter Lists	94
3.4	SEH UTN Manager – Feature Overview	118
3.5	Index	120
ر.ر	IIIUEA	•••••

1 General Information

- Your Safety ⇒ 🖺 6
- First Steps ⇒ 🖺 7

1.1 Product

Purpose

UTN servers comprise USB Deviceservers and USB Dongleservers. As USB Deviceservers they make non-network-ready USB devices (e.g. USB hard disk drives, USB printers, etc.) and as USB Dongleservers non-network-ready USB dongles accessible via TCP/IP network. For this purpose, the USB devices respectively USB dongles will be connected to the USB ports of the UTN server. Then the UTN (UTN = USB to Network) functionality and the corresponding software tool 'SEH UTN Manager' establish a virtual USB connection between USB device respectively USB dongle and client. The USB device respectively USB dongle can be used as if it were connected locally.



Important:

The Dongleservers myUTN-80 and myUTN-800 are exclusively designed for the deployment of USB dongles.



Important:

Hereinafter USB dongles and USB devices are referred to as 'USB devices'.

System Requirements

The UTN server has been designed for the use in TCP/IP networks.

The SEH UTN Manager can be used in the following systems:

- Microsoft Windows (32/64-Bit; Windows 10 or higher, Server 2012 R2 or higher)
- macOS 10.9 or higher ¹
- Linux (Debian 10, Ubuntu 20.0.4, Red Hat Enterprise Linux 8, Oracle 8, CentOS 8, SUSE Linux Enterprise 15.1, openSUSE Leap 15.1)²
- IPv4 TCP/IP network

The SEH Product Manager can be used under the following systems:

- Microsoft Windows (32/64-Bit; Windows 10 or higher, Server 2012 R2 or higher)
- macOS 10.12.x or higher
- IPv4 TCP/IP network

This document describes the usage in macOS environments. Information about the usage in other environments can be found in the relevant system-specific User Manual. More details can be found in chapter 'Documentation' $\Rightarrow \blacksquare 4$.

^{1.} macOS 11.x (Big Sur) only limited USB device support not running on Apple Silicon (Apple M1 chip) based Macs

^{2.} A successful installation cannot be guaranteed due to the variety of Linux systems! The installation must be carried out under your own responsibility.

Combination with Associated Products

You can combine the UTN server with additional SEH Computertechnik GmbH products to ideally adapt the use of your devices to your environment!

Service^{plus}

For the Dongleservers myUTN-80 and myUTN-800 service contracts, the Service^{plus} packages, are available. The Service^{plus} package extends the manufacturer's guarantee of a Dongleserver from 36 to 60 months. In addition, you will receive quickly and easily an advance replacement device in case of a defect. Service^{plus} packages must be purchased separately.

Detailed information:

https://www.seh-technology.com/services/service-packages.html



Rack Mount Kits

For a perfect and safe storage of your Dongleserver we recommend the 'Rack Mount Kits' (RMK). With the installation kits, you can install the Dongleservers in 19" server racks.

Detailed information:

https://www.seh-technology.com/products/rack-mount-kits.html



1.2 Documentation



Please load all current documents from our Website: https://www.seh-technology.com/de/service/downloads.html

Further applicable documents

Thee UTN documentation consists of the following documents:

Quick Installation Guide Print, PDF Information on safety, technical data, instructions for

hardware installation and initial setup, and declarations

of conformity.

User Manual PDF Detailed description of the UTN server configuration and

administration. System-specific instructions for the fol-

lowing systems:

- Windows - macOS - Linux

Online help HTML Information on how to use the web interface 'myUTN

Control Center'.

(Embedded into web interface; no download.)

Product information Print, PDF Features and technical data

Brochures Print, PDF https://www.seh-technology.com

Open source licenses online https://www.seh-technology.com/services/licenses.html

Symbols and Legend

A variety of symbols and mark-ups are used within this document.



WARNING

Warning A warning contains important information that must be heeded. Non-

observance may lead to malfunctions.



Important:

Important information These notes contain crucial information for failure-free operation.

✓ Requirement Requirements that must be met before you can begin the action.

Numeration Listing

Numeration Step-by-step instructions

→ Result Outcome of a performed action

Recommendations and beneficial advice

⇒ 🖹 Reference (Within the document you can use hyperlinks.)

Bold Established terms (e.g. of buttons, menu items, or selection lists)

Courier Code (e.g. for command lines or scripts), Paths
'Proper names' Single quotation marks identify proper names

1.3 Support and Service

SEH Computertechnik GmbH offers extensive Support. If you have any questions, please contact us.



Monday through Thursday 8:00 a.m. to 4:45 p.m. Friday 8:00 a.m. to 15:15 p.m.



+49 (0)521 94226-44



support@seh.de

Customers from the United States of America (USA) and Canada please contact North American Support:



Monday - Friday

9:00 am - 5:00 pm (EST/EDT)



+1-610-933-2088



support@sehtechnology.com

All information and downloads regarding your product is available on our website:



https://www.seh-technology.com



1.4 Your Safety

Read and observe all safety regulations and warnings found in the documentation, on the device and on the packaging. This will avoid potential misuse and prevent damages to people and devices.

Intended Use

The UTN server is used in TCP/IP networks and has been designed for use in office environments. It allows network users to access non-network-ready USB devices.

Improper Use

All uses of the device that do not comply with the functionalities described in the myUTN documentation are regarded as improper uses.

Safety Regulations

Before starting the initial setup of the UTN server, read and observe the safety regulations in the 'Quick Installation Guide'. This document is enclosed in the packaging in printed form.

Warnings

Read and observe all warnings mentioned in this document. Warnings are found before any instructions known to be dangerous. They are presented as follows:



WARNING

Warning

Liability and Guarantee

SEH Computertechnik GmbH will not accept any liability for personal injuries, property damages and consequential damages resulting from the non-observance of the mentioned safety regulations and warnings. Non-observance will also result in any guarantee claims becoming void. Modifications to the Device and Repairs

It is not allowed to make modifications to the hardware and software or to try to repair the device. If your device needs to be repaired, contact our support $\Rightarrow \blacksquare 5$.

1.5 First Steps

- 1. Read and observe the security regulations in order to avoid damages to people and devices \Rightarrow \blacksquare 6.
- 2. Install the hardware. The hardware installation includes connecting the UTN server to the network, USB devices, and power grid '⇒ ☐ 'Quick Installation Guide'.
- 3. Install the software. The software installation includes installing the required software tool 'SEH UTN Manager' on your client and assigning an IP address '⇒ ☐ 'Quick Installation Guide'.
- 4. Configure the UTN server so that it is optimally embedded it into your network and sufficiently protected. All information on how to do this you will find in this document.



You can find information on the UTN documentation in chapter 'Documentation' $\Rightarrow \mathbb{B}4$.

2 Administration Methods

You can administer, configure and maintain the UTN server in a number of ways:

- Administration via the SEH UTN Manager

 □ □ 11
- Administration via the SEH Product Manager ⇒ 🖹 15
- Administration via Email ⇒ 18

2.1 Administration via myUTN Control Center

The UTN server has a user interface, the myUTN Control Center which can be opened in an Internet browser (e.g. Safari).

The UTN server can be configured, monitored and maintained via the myUTN Control Center.

Open myUTN Control Center in Browser

- ✓ The UTN server is connected to the network and the power grid.
- ✓ The UTN server has a valid IP address ⇒ \(\bigsig 21. \)
- 1. Open your browser.
- 2. Enter the IP address of the UTN server as the URL.
- → The myUTN Control Center is displayed in the browser.



Important

If the myUTN Control Center is not displayed, check if a gateway is configured (\Rightarrow \blacksquare 21) and the proxy settings of your browser.

myUTN Open Control Center via SEH UTN Manager

- ✓ The UTN server is connected to the network and the power grid.
- ✓ The UTN server has a valid IP address ⇒ 21.
- ✓ The SEH UTN Manager is installed on the client \Rightarrow \(\bigsim 11.
- 1. Start the SEH UTN Manager.
- 2. In the selection list, select the UTN server.
- 3. In the menu bar, select **UTN Server Configure**.
- → Your browser opens and the myUTN Control Center is displayed.

Opening myUTN from SEH Product Manager

The myUTN is displayed directly in the SEH Product Manager. You can also open it separately in the browser.

- ✓ The SEH Product Manager is installed on the client

 □ 15.
- 1. Start the SEH Product Manager.
- 2. In the device list, select the SEH UTN server.
 The myUTN is displayed on the right side in the integrated browser.
- 3. To access the myUTN separately in the browser, select **Launch Browser** from the **Device** menu.
- → Your browser opens and the myUTN is displayed.



Important:

If the myUTN is not displayed, check the certificate.

If the certificate chain of trust can not be verified, a security warning will appear instead of the myUTN. Review the certificate personally and add an exception rule for the certificate, if necessary. Detailed information can be found in the SEH Product Manager Online Help'.

Controls

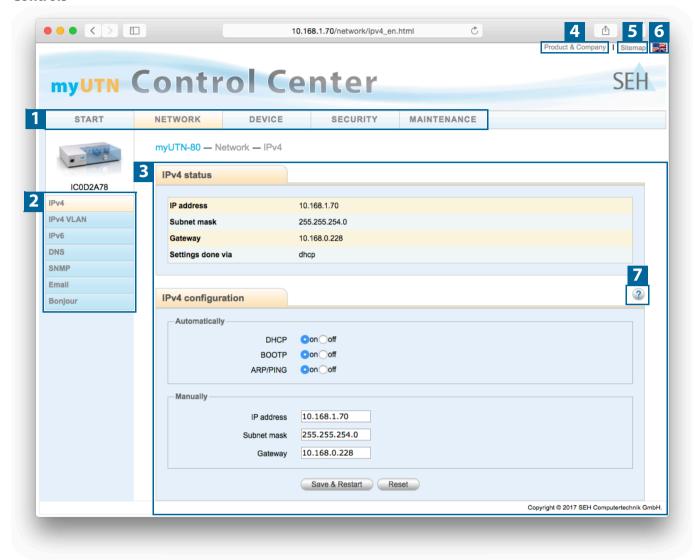


Figure 1: myUTN Control Center

1	Menu item	After selecting a menu item (simple mouse click), the available submenu items are displayed to the left.
2	Submenu items	After selecting a submenu item, the corresponding page with its content is displayed.
3	Page	Menu content
4	Product & Company	Manufacturer's contact details and additional product information.
5	Sitemap	Overview of and direct access to all pages of the myUTN Control Center.
6	Flags	Language selection
7	? icon	Online help

2.2 Administration via the SEH UTN Manager

The 'SEH UTN Manager' is a software tool developed by SEH Computertechnik GmbH. The SEH UTN Manager is used to establish and manage connections to the USB devices connected to the UTN servers.

- Installation

 □ 13

Features

The software is installed on all clients that are meant to access a USB device in the network. After the SEH UTN Manager is started, the network is scanned for connected UTN servers. All UTN servers found and their connected USB devices are displayed in the 'network list'. To use the USB devices connected to the UTN server, you have to add the UTN server to the 'selection list'. The devices shown in the selection list can be administrated and the connected USB devices can be used. Working working with the SEH UTN Manager is described in detail in the chapter 'Working with the SEH UTN Manager' ⇒

■45.



WARNING

UTN (\Rightarrow \blacksquare 2) and the corresponding SEH UTN Manager only work in IPv4 networks. In IPv6-only networks only the myUTN Control Center (\Rightarrow \blacksquare 9) can be accessed to administrate the UTN server.

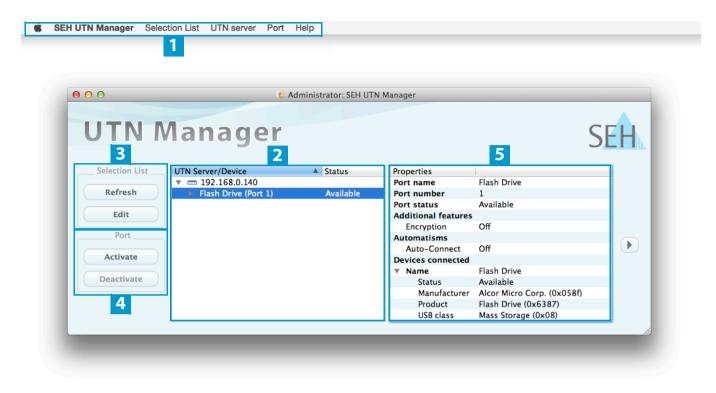


Figure 2: SEH UTN Manager

1	Menu bar	Available menu items
2	Selection List	Shows the selected UTN servers and the connected USB devices.
3	Buttons for editing the selection list	Opens the dialog for searching UTN servers in the network and for selecting the desired devices \Rightarrow \blacksquare 46.
4	Buttons for managing the port connection	Establishes a connection to the USB device connected to the USB port $(\Rightarrow \mathbb{B}48)$ or interrupts the connection $(\Rightarrow \mathbb{B}49)$.
5	Display area for the properties	Shows information on the selected UTN server or USB device \Rightarrow \blacksquare 54.

Detailed information on how to use the SEH UTN Manager can be found in the $\Rightarrow \Box$ 'SEH UTN Manager Online Help'. To start the online help, go to the SEH UTN Manager menu bar and select **Help** – **Online Help**.



Important:

Some SEH UTN Manager features might not be displayed or are displayed as inactive. This depends on

- the type and location of the selection list
- · the user's rights and the group memberships on the client
- · the client operating system
- the settings of the product-specific security mechanisms
- the status of the UTN server and respective USB port

More details can be found in chapter

Versions

The SEH UTN Manager is available in two versions:

- Complete Version: SEH UTN Manager with graphical user interface (⇒Figure 2 🖺 12) and additional features.
- Minimal version (without graphical user interface):



Important:
The complete version is recommended for general use.
The minimal version is to be used by experts only!

In both versions the 'SEH UTN Service' works in the background and is automatically active after the system start. Additionally, the following user groups are distinguished:

- users with administrative rights (administrator)
- users without administrative rights (standard user)



Some features can only be configured by administrators. More details can be found in chapter 'SEH UTN Manager – Feature Overview' ⇒ 🖺 118.

Installation

In order to use the SEH UTN Manager, the program must be installed on a computer with a macOS operating system. The SEH UTN Manager installation file can be found on the SEH Computertechnik GmbH website:

https://www.seh-technology.com/services/downloads.html



The installation file is available as '*.pkg' for macOS systems. The installation file contains both versions of the SEH UTN Manager.

- ✓ macOS 10.9 or higher
- ✓ The installation can only be carried out by users with administrative rights.
- ✓ You know the administrator password.
- 1. Start the SEH UTN Manager installation file.
- Follow the installation routine.
- → The SEH UTN Manager is installed on your client.

Program Start

You recognize the SEH UTN Manager by its icon: . The program is started with the usual methods of your operating system.

Update

You can check for program updated manually and automatically. More information can be found in the $\Rightarrow \square$ 'SEH UTN Manager Online Help'.

2.3 Administration via the SEH Product Manager

The 'SEH Product Manager' is a software tool developed by SEH Computertechnik GmbH for the administration and management of SEH Computertechnik GmbH devices on the network.

- Installation

 □ 13

Function

The software is installed on all clients from which SEH Computertechnik GmbH devices are to be administrated and managed on the network.

After starting the SEH Product Manager, the network is first scanned for connected SEH Computertechnik GmbH devices. All found devices are displayed in the 'device list'. You can select and then administer and manage the devices in the device list. If a task can be performed using the SEH Product Manager, this will be described in the corresponding chapter.



WARNING

The SEH Product Manager only works in IPv4 networks.

In pure IPv6 networks, it is only possible to access the myUTN (⇒ 🖺 10) to administer and manage SEH Computertechnik GmbH devices.



Figure 3: SEH Product Manager

1	Menu bar	Available menu items
2	Filter	Filters the displayed devices by product type.
3	Searching	Search function for searching the device list.
4	Device list	Shows the devices found on the network by SEH Computertechnik GmbH.
5	Control Center	Shows the Control Center of the device selected in the device list.

- 6 Functions for editing the device list
- Refresh: Updates the status of the devices displayed in the list.
- Search: Searches the network for more devices from SEH Computertechnik GmbH. Found devices are added to the device list.
- Delete: Removes all devices from the device list.

Detailed information on how to use the SEH Product Manager can be found in the $\Rightarrow \square$ 'SEH Product Manager Online Help'. To start the online help system, go to the SEH Product Manager menu bar and select **Help** – **Online Help**.

Installation

In order to use the SEH Product Manager, the program must be installed on a computer with a macOS operating system. The SEH Product Manager installer can be found on the SEH Computertechnik GmbH website:

https://www.seh-technology.com/services/downloads.html



The installation file is available as '*.pkg' for macOS systems.

- ✓ macOS 10.12.x or higher
- ✓ The installation can only be carried out by users with administrative rights.
- ✓ You know the administrator password.
- 1. Start the SEH Product Manager installer.
- 2. Follow the installation routine.
- → The SEH Product Manager is installed on your client.

Program Start

You can recognize the SEH Product Manager by its icon: . The program is started with the usual methods of your operating system.

The program automatically searches for SEH Computertechnik devices on the network after starting. For more information see the $\Rightarrow \Box$ 'SEH Product Manager Online Help'.

Update

You can check for program updates manually and automatically. More information can be found in the $\Rightarrow \square$ 'SEH Product Manager Online Help'.

2.4 Administration via Email

You can administrate the UTN server via email and thus from any computer Internet access (remote access):

- Get UTN server status
- Set UTN server parameters
- UTN server update

To do so, you write commands into the email message header ⇒ Table 1 18.

Table 1: Commands and comment:

Commands	Option	Description
<command/>	get status	You get the UTN server status page.
	get parameters	You get the UTN server parameter list.
	set parameters	Sends one or more parameters to the UTN server which will then be adopted by the UTN server.
		Write the parameters and their values into the email message body: <pre><pre>cyalue></pre></pre>
		The syntax and values can be found in the parameter lists \Rightarrow \blacksquare 94.
	update utn	Carries out an automatic update using the software that is attached to the mail.
	help	You get a page with information on remote maintenance.
[<comment>] Freely definable text for description</comment>		Freely definable text for descriptions.

The following applies to the instructions:

- · not case-sensitive
- one or more space characters are allowed
- · max. length is 128 byte
- only the ASCII format can be read.

In addition, a TAN is needed to execute updates or parameter changes. To begin with, you have to get a status page via email (⇒Table 1

18 because it contains the TAN. You enter the received TAN into the email message body. A space character must follow.

- ✓ A DNS server is configured on the UTN server ⇒ \(\bigle 27. \)
- ✓ In order to receive emails, the UTN server must be set up as user with its own email address on a POP3 server.
- ✓ POP3 and SMTP parameters have been configured on the UTN server ⇒ \(\begin{aligned} \alpha \) 30.
- 1. Open an email program.
- 2. Write a new email:
 - As recipient enter the UTN server address.
 - Into the subject line enter an instruction. cmd: <command> [<comment>]

 Commands and comment: ⇒Table 1 18.
 - Into the email message body enter a TAN, if applicable.
- 3. Send the email.
- → The UTN server receives the email and carries out the instruction.

Examples

You want to get the UTN server parameter list:

To: UTNserver@company.com

Subject: cmd: get parameters

You want to set the 'configuration' parameter:

To: UTNserver@company.com
Subject: cmd: set parameters

Email message body: TAN = nUn47ir79Ajs7QKE

sys descr = <Your description>

3 Network Settings

To optimally embed your UTN server into your network, you can configure the following settings:

- How to Configure IPv6 Parameters ⇒ 23

- How to Configure Bonjour ⇒ 29
- How to Configure Email (POP3 and SMTP) (only myUTN-80 and later) ⇒

 ■30
- How to Use the UTN Server in VLAN Environments (only myUTN-80 and later)

 □ □ 32

3.1 How to Configure IPv4 Parameters

In the hardware installation (\Rightarrow \Box 'Hardware Installation Guide') the UTN server is connected to the network. The UTN server then checks if it gets IP address dynamically via the boot protocols BOOTP (Bootstrap Protocol) or DHCP (Dynamic Host Configuration Protocol). If this is not the case, the INU server assigns itself an IP address via Zeroconf from the address range which is reserved for Zeroconf (169.254.0.0/16).



Important:

If the UTN server is connected to an IPv6 network, it will automatically receive an additional IPv6 address \Rightarrow 23.

The IPv4 address assigned to the UTN server can be found via the software tools 'SEH UTN Manager' and 'SEH Product Manager'. This step usually is carried out during the initial set up ($\Rightarrow \Box$) 'Quick Installation Guide').



You can also determine the IP address with Bonjour, e.g. by using the Bonjour website search in Safari.

To optimally embed the UTN server into a TCP/IP network, you can configure different IPv4 parameters and/or manually assign a static IP address to the UTN server.

- Determining the IPv4 Address via SEH UTN Manager and Configuring IPv4 Parameters ⇒ ■22

Configuring IPv4 Parameters via the myUTN Control Center

- 1. Start the myUTN Control Center.
- 2. Select NETWORK IPv4.
- 3. Configure the IPv4 parameters; ⇒Table 2 \(\bigsi21.
- 4. Click Save & Restart to confirm.
- → The settings will be saved.

Table 2: IPv4 parameters

Parameters	Description
DHCP	Enables or disables the protocols DHCP, BOOTP, and ARP/PING.
BOOTP ARP/PING	The IP address assignment via DHCP and BOOTP is automatic if one of these protocols is implemented in your network.
	You can use the commands ARP and PING to change an IP address which was assigned via Zeroconf. The implementation depends on your system; read the documentation of your operating system.
	We recommend disabling these options once an IP address has been assigned to the UTN server.
IP address	IP address of the UTN server.
Subnet mask	Subnet mask of the UTN server.
	Subnet masks are used to logically partition big networks into subnetworks. If you are using the UTN server in a subnetwork, it requires the subnet mask of the subnetwork.

Parameters	Description
Gateway	IP address of the network's standard gateway which the UTN server uses.
	With a gateway, you can address IP addresses from other networks.

Configuring IPv4 Parameters via SEH UTN Manager

- ✓ The SEH UTN Manager (complete version) is installed on the client ⇒ 🖺 11.
- ✓ The UTN server is shown in the selection list ⇒ \(\begin{aligned}
 46.
 \)
- 1. Start the SEH UTN Manager.
- 2. In the selection list, select the UTN server.
- 3. In the menu bar, select **UTN Server–Set IP Address**. The **Set IP Address** dialog appears.
- 4. Enter the relevant TCP/IP parameters.
- 5. Click OK.
- → The settings will be saved.

Determining the IPv4 Address via SEH UTN Manager and Configuring IPv4 Parameters

The SEH UTN Manager searches the network for connected INU servers.

- ✓ The SEH UTN Manager (complete version) is installed on the client \Rightarrow 11.
- 1. Start the SEH UTN Manager.
- Confirm the note dialog Your Selection List seems to be empty with Yes.
 If no note dialog is available and the main dialog appears, select Selection List-Edit in the menu bar.
 The Edit Selection List dialog appears.
- 3. In the network list, select the INU server.



- 4. In the shortcut menu, select **Set IP Address**.
 - The **Set IP Address** dialog appears.
- 5. Enter the relevant TCP/IP parameters.
- 6. Click OK.
- → The settings will be saved.

Determining the IPv4 Address using the SEH Product Manager

- ✓ The SEH Product Manager is installed on the client

 □ 15.
- 1. Start the SEH Product Manager. The device list is displayed.
- 2. Search for the UTN server in the device list. It can be identified by its product type and MAC address (which can be found on the device type plate).
- 3. Read the IP address of the UTN server from the device list.



If you select the UTN server in the device list, the myUTN will be displayed. If necessary, you can assign the IPv4 network configuration directly there $(\Rightarrow \exists 21)$.

3.2 How to Configure IPv6 Parameters

IPv6 (Internet Protocol Version 6) is the successor of the still predominantly used IPv4 (Internet Protocol Version 4). IPv6 offers the same basic functions but has many advantages such as the increased address space of 2^{128} (IPv6) instead of 2^{32} (IPv4) IP addresses and auto configuration.



Important:

IPv6 address notation differs from IPv4: An IPv6 address consists of 128 bits. The normal format of an IPv6 address is eight fields. Each field contains four hexadecimal digits representing 16 bits.

Example: 2001:db8:4:0:2c0:ebff:fe0f:3b6b

As a URL in a Web browser, an IPv6 address must be enclosed in square brackets. This prevents port numbers from being mistakenly regarded as part of an IPv6 address.

Example: http://[2001:db8:4:0:2c0:ebff:fe0f:3b6b]:443

The URL will only be accepted by browsers that support IPv6.

You can embed the UTN server into an IPv6 network.



WARNING

UTN (⇒ 🖹 2) and the corresponding SEH UTN Manager only work in IPv4 networks. The SEH Product Manager also only works in IPv4 networks.

In IPv6-only networks only the myUTN Control Center (\Rightarrow \triangleq 9) can be accessed to administrate the UTN server.

The UTN server will automatically receive one or more IPv6 addresses in addition to its IPv4 address. To optimally embed the UTN into your network, you can configure IPv6 parameters.

- 1. Start the myUTN Control Center.
- Select NETWORK IPv6.
- 3. Configure the IPv6 parameters; ⇒Table 3 \(\bigsize 23.
- 4. Click Save & Restart to confirm.
- \rightarrow The settings will be saved.

Table 3: IPv6 parameters

Parameters	Description
IPv6	Enables/disables the IPv6 functionality of the UTN server.
Automatic configuration	Enables/disables the automatic assignment of the IPv6 address to the UTN server.
IPv6 address	Defines an IPv6 unicast address in the format n:n:n:n:n:n:n:n which is manually assigned to the UTN server.
	 Every 'n' represents the hexadecimal value of one of the eight 16 bit elements of the address.
	 Leading zeros can be omitted.
	 An IPv6 address may be entered or displayed using a shortened version when successive fields contain all zeros (0). In this case, two colons (::) are used.
Router	Manually defines a static router to which the UTN server sends its requests.

Parameters	Description
Prefix length	Defines the length of the subnet prefix for the IPv6 address. The value 64 is preset.
	Address ranges (e.g. your network) are specified with prefixes. To do this, the prefix length (number of bits used) is added to the IPv6 address as a decimal number and the decimal number is preceded by '/'.

3.3 How to Configure WLAN

The 'myUTN-55' is a WLAN device (Wireless Local Area Network) and supports the following standards:

- IEEE 802.11b
- IEEE 802.11g
- IEEE 802.11n



You can view the current WLAN settings in the myUTN Control Center under **NET-WORK** – **WLAN**.

To optimally integrate the UTN server into your network, configure the WLAN parameters to match your WLAN settings (network name, encryption, etc.). For this purpose, the UTN server must already be embedded into your WLAN and be addressable. The initial setup is described in your product's $\Rightarrow \Box$ 'Quick Installation Guide'.

- ✓ You know the settings of the WLAN.
- ✓ The UTN server is within the WLAN range.



Important:

If the UTN server changes the network, it may receive a new IP configuration. If this is the case, the connection to the myUTN Control Center is interrupted.

- 1. Start the myUTN Control Center.
- 2. Select NETWORK WLAN.
- 3. Configure the WLAN parameters; ⇒ Table 4 ≜25.
- 4. Click Save & Restart to confirm.
- \rightarrow The settings will be saved.

Table 4: WLAN parameters

Parameters	Description
Mode	Defines the communication mode (network infrastructure):
	 Ad hoc: Your WLAN is a decentralized ad-hoc-network in which devices communicate directly with each other (peer-to-peer).
	 Infrastructure: Your WLAN is an infrastructure network with an access point/ router as centrals communication hub. The access point is connected to the fixed network with a cable.
Network name (SSID)	Enter your WLAN's network name, also known as SSID (Service Set Identifier).
Roaming	Enables/disables roaming (switching from one access point/router to another): If your WLAN covers a widespread area with several access points/routers (with identical settings) and the UTN server changes position, the UTN server will automatically switch to the better signal without loss of connection if roaming is activated. (Infrastructure mode only)

Parameters	Description
Channel	Enter your WLAN's channel (frequency range).
	(Ad hoc mode only)
	WARNING Only use WLAN channels authorized for your country! The UTN is an international product which supports a number of channels. Channels are statutorily regulated by national authorities. So the UTN server might support channels which are forbidden to use in your country. Inform yourself about national regulations.
Encryption method	Select the encryption method that protects your WLAN.
	Important: We recommend to use hexadecimal keys for WEP. Some access points/routers convert WEP keys in ASCII format to hexadecimal format. In this case, the ASCII key on the UTN server and the hexadecimal key on the access point/router do not match.
Use WEP key	Defines the WEP key to be used.
Key 1-4	Defines the WEP keys. Four WEP keys are available. The key type defines the max. number of characters as well as the permitted character set for the WEP keys. Important:
	If your access point supports multiple WEP keys, make sure that the key numbers on access point and UTN server are identical. Example: The ABCDE must have the number 2 on both devices (and not 1 on the access point and 2 on the UTN server).
PSK	Defines the Pre Shared Key (PSK) for Wi-Fi Protected Access (WPA).
Authentication method	Choose the authentication mechanism which is used in your WLAN. For further information see 'How to Configure Network Authentication (IEEE 802.1X)'

3.4 How to Configure the DNS

DNS is a service to translate domain names into IP addresses and vice versa. Enable DNS so that you can enter host names instead of IP addresses when you define servers.

Example: Time server configuration (⇒ ■35) with ntp.server.de instead of 10.168.0.140.



Important:

If your network in configured accordingly, the UTN server receives the DNS settings automatically via DHCP. A DNS server assigned in such a manner always takes precedence over manual settings.

- ✓ Your network has a DNS server.
- 1. Start the myUTN Control Center.
- 2. Select **NETWORK DNS**.
- 3. Configure the DNS parameters; ⇒Table 5 \(\bigsize 27.
- 4. To confirm, click Save.
- \rightarrow The settings will be saved.

Table 5: DNS parameters

Parameters	Description
DNS	Enables/disables the name resolution via a DNS server.
Primary DNS server	Defines the IP address of the primary DNS server.
Secondary DNS server	Defines the IP address of the secondary DNS server.
	The secondary DNS server is used if the first one is not available.
Domain name (suffix)	Defines the domain name of an existing DNS server.

3.5 How to Configure SNMP

SNMP (Simple Network Management Protocol) is protocol for configuring and monitoring network elements. The protocol controls communication between the monitored devices and the monitoring station (SNMP management tool). Information can be read and changed.

SNMP exists in 3 versions, the UTN supports version 1 and 2.

SNMPv1

SNMPv1 is the first and most simple SNMP version. A disadvantage is the insecure access control which is the community: a community groups monitoring station and monitored devices. This makes their administration easier. There are two types of communities, read-only and read/write. For both the community name is also the password used between the monitoring station and the monitored devices. As it is transmitted as clear text, it does not offer sufficient protection.

SNMPv3

SNMPv3 is the newest SNMP version. It contains enhancements and a new security concept which includes, amongst other thins, encryption and authentication. Therefore, a SNMP user with name and password must be created in the monitoring station. This user must then be specified in the UTN server.



Important:

The user accounts are also used to access the myUTN Control Center and thus are to be defined under **SECURITY** - **Device access** 'How to Protect Access to the myUTN Control Center (User Accounts)' ⇒ **B**69.

- ✓ SNMPv3 users are created in the monitoring station. (Only for SNMPv3.)
- ✓ The SNMPv3 users from the monitoring station are specified on the UTN server ⇒ 169. (Only for SNMPv3.)
- 1. Start the myUTN Control Center.
- 2. Select **NETWORK SNMP**.
- 3. Configure the SNMP parameters; ⇒Table 6 \(\bigsize 28. \)
- 4. To confirm, click Save.
- → The settings will be saved.

Table 6: SNMP Parameters

Parameters	Description
SNMPv1	Enables/disables SNMPv1.
Read-only	Enables/disables the write protection for the community.
Community	SNMP community name Enter the name as it is defined in the monitoring station.
	Important: The default name is 'public'. This name is commonly used for read/write communities. We recommend to change it as soon as possible to increase security.
SNMPv3	Enables/disables SNMPv3.
Hash	Defines the hash algorithm.
Access rights	Defines the access rights of the SNMP user.
Encryption	Defines the encryption method.

3.6 How to Configure Bonjour

Bonjour is a technology which automatically detects devices and services in TCP/IP networks.

The UTN server uses Bonjour to

- · verify IP addresses
- · announce and find network services
- match host names and IP addresses
- 1. Start the myUTN Control Center.
- 2. Select **NETWORK Bonjour**.
- 3. Configure the Bonjour parameters; ⇒Table 7 \(\bigsi29.
- 4. To confirm, click **Save**.
- \rightarrow The settings will be saved.

Table 7: Bonjour parameters

Parameters	Description
Bonjour	Enables/disables Bonjour.
Bonjour name	Defines the Bonjour name of the UTN server.
	The UTN server uses this name to announce its Bonjour services. If no Bonjour name is entered, a default name will be used (device name@ICxxxxxxx).

3.7 How to Configure Email (POP3 and SMTP) (only myUTN-80 and later)

The UTN server can be administered via email (\Rightarrow 18) and offers a notification service (\Rightarrow 40) which sends you status and error messages via email. To use these features, the email protocols 'POP3' and 'SMTP' must be set up on the UTN server.

A client, e.g. the UTN server, uses POP3 (Post Office Protocol Version 3) to fetch emails from a mail server. POP3 must be set up on the UTN server so that it can be administered via email.

SMTP (Simple Mail Transfer Protocol) is used to send and forward emails. The UTN server needs SMTP for the administration via email and the notification service.

Configuring POP3

- ✓ An email user account for the UTN server is set up on the POP3 server.
- 1. Start the myUTN Control Center.
- 2. Select **NETWORK Email**.
- 3. Configure the POP3 parameters; ⇒ Table 8 ≥ 30.
- 4. To confirm, click **Save**.
- \rightarrow The settings will be saved.

Table 8: POP3 parameters

·	
Parameters	Description
POP3	Enables/disables the POP3 functionality.
POP3 – Server name	Defines the POP3 server via its IP address or host name.
	A host name can only be used if a DNS server was configured beforehand.
POP3 – Server port	Defines the port which the UTN server uses to receive emails.
	The default port number for POP3 is 110. The default port number for SSL/TLS (parameter 'POP3 – Security' ⇒ 🖹 30) is 995. If required, read the documentation of your POP3 server.
POP3 – Security	Defines the authentication method to be used:
	 APOP: encrypts the password when logging on to the POP3 server.
	 SSL/TLS: encrypts the entire communication with the POP3 server. The encryption strength is defined via the encryption protocol and level □67.
POP3 – Check mail every	Defines the time interval (in minutes) which with the POP3 server is checked for emails.
POP3 – Ignore mail exceeding	Defines the maximum email size (in Kbyte) to be accepted by the UTN server.
	(0 = unlimited)
POP3 – User name	Defines the user name used by the UTN server to log on to the POP3 server.
POP3 – Password	Defines the user password used by the UTN server to log on to the POP3 server.

Configuring SMTP

- ✓ An email user account for the UTN server is set up on the SMTP server.
- 1. Start the myUTN Control Center.
- 2. Select **NETWORK Email**.
- 4. To confirm, click **Save**.
- \rightarrow The settings will be saved.

Table 9: SMTP Parameters

Tuble 3. Sivili Tulumeters	
Parameters	Description
SMTP - Server name	Defines the SMTP server via the IP address or the host name.
	A host name can only be used if a DNS server was configured beforehand.
SMTP – Server port	Defines the port which the UTN server and SMTP server use to communicate. The default port number for SMTP is 25. For SSL/TLS (parameter 'SMTP – SSL/TLS' ⇒ ■31), SMTP servers use by default port 587 (STARTSSL/STARTTLS) or the old port 465 (SMTPS). If required, read the documentation of your SMTP server.
SMTP – SSL/TLS	Enables/disables SSL/TLS.
	SSL/TLS encrypts the communication from the UTN to the SMTP server. The encryption strength is defined via the encryption protocol and level \Rightarrow \bigcirc 67.
SMTP – Sender name	Defines the email address used by the UTN server to send emails.
	Very often the name of the sender and the email account user name are identical.
SMTP – Login	Enables/disables SNMP authentication. To send emails, the UTN sends its user name and password to the SMTP server to authenticate itself. Enter user name (parameter 'SMTP – User name' \Rightarrow \implies 31) and password (parameter 'SMTP – Password' \Rightarrow \implies 31).
	Some SMTP servers require SMTP authentication to prevent fraudulent use (spam).
SMTP – User name	Defines the user name used by the UTN server to log on to the SMTP server.
SMTP – Password	Defines the password used by the UTN server to log on to the SMTP server.
SMTP – Security (S/MIME)	Enables/disables the email security standard S/MIME (Secure/Multipurpose Internet Mail Extensions). S/MIME is used to sign ('SMTP – Signing emails' ⇒ ■31) or encrypt ('SMTP – Full encryption' ⇒ ■31) emails. Enable the desired features (if desired with 'SMTP – Attach public key' ⇒ ■31).
SMTP – Signing emails	Enables the signing of emails. The recipient can use the signature to check the sender's identity. This proves, that the email has not been altered.
	An S/MIME certificate is required for the signing of emails ⇒ 🖺 74.
SMTP – Full encryption	Enables the encryption of emails. Only the intended recipient can open and read the encrypted email.
	An S/MIME certificate is required for the encryption \Rightarrow \blacksquare 74.
SMTP – Attach public key	Sends the public key together with the email.
	Many email clients require the key to display the email.

3.8 How to Use the UTN Server in VLAN Environments (only myUTN-80 and later)

The UTN server supports VLAN (Virtual Local Area Network) according to 802.1Q.

A VLAN divides a physical network into logical subnetworks. Each subnetwork is its own broadcast domain, so data packets cannot be exchanged between subnetworks. VLANs are used to structure networks and, above all, to secure them.

Each USB device can be assigned to a VLAN. To transfer VLAN data via the USB ports, you must first enter the VLANs on the UTN server. After this, the USB ports used for forwarding data must be linked to the specified VLANs.



The access to USB devices can be regulated particularly well with VLAN: a defined group of network users may use certain USB devices.

Inform yourself on how to implement VLAN in your environment and then set up the UTN server for it.

Define a IPv4 Management VLAN

- 1. Start the myUTN Control Center.
- 2. Select **NETWORK IPv4 VLAN**.
- 3. Configure the IPv4 VLAN parameters; ⇒Table 10 🖹 32.
- 4. To confirm, click **Save**.
- 5. The settings will be saved.

Table 10: IPv4 management VLAN parameters

Parameters	Description	
IPv4 management VLAN	Enables/disables the forwarding of IPv4 management VLAN data.	
	If this option is enabled, SNMP is only available in the IPv4 management VLAN.	
VLAN ID	ID for the identification of the IPv4 management VLAN (0-4096).	
IP address	IP address of the UTN server ⇒ 🖺 21.	
Subnet mask	Subnet mask of the UTN server ⇒ 🖺 21.	
Gateway	IP address of the network's standard gateway which the UTN server uses \Rightarrow \blacksquare 21.	
	With a gateway, you can address IP addresses from other networks.	
Access from any VLAN	Enables/disables the administrative access (web) to the UTN server via IPv4 client VLANs.	
	If this option is enabled, the UTN server can be administrated via all VLANs.	
Access via LAN (untagged)	Enables/disables the administrative access to the UTN server via IPv4 packets without tag.	
	If this option is disabled, the UTN server can only be administrated via VLANs.	

Define a IPv4 Client VLAN

- 1. Start the myUTN Control Center.
- 2. Select **NETWORK IPv4 VLAN**.
- 3. Configure the IPv4 VLAN parameters; ⇒Table 11 🖹 33.
- 4. To confirm, click **Save**.
- \rightarrow The settings will be saved.

Table 11: IPv4 client VLAN parameters

	·	
Parameters	Description	
VLAN	Enables/disables the forwarding of IPv4 client VLAN data.	
IP address	IP address of the UTN server within the IPv4 client VLAN.	
Subnet mask	Subnet mask of the UTN server within the IPv4 client VLAN.	
Gateway	Gateway address of the IPv4 client VLAN.	
VLAN ID	ID for the identification of the IPv4 client VLAN (0–4096).	



Use **Auto-fill** to automatically fill **VLAN**, **IP address** and **Subnetmask** with the values from line 1. **VLAN ID** will automatically be counted up by '1'.

Allocating a IPv4 Client VLAN to a USB Port

- 1. Start the myUTN Control Center.
- 2. Select **SECURITY USB port access**.
- 3. Allocate a VLAN to the USB port via the Allocate VLAN list.
- 4. To confirm, click **Save**.
- \rightarrow The settings will be saved.

4 Device Settings

- How to Disable a USB Port (only myUTN-80 and later) ⇒ 🖹 38
- How to Configure the UTN (SSL) Port ⇒

 39

4.1 How to Configure the Device Time

The device time of the UTN server can be set via an SNTP time server (Simple Network Time Protocol) in the network. A time server synchronizes the time of devices within a network.

Today's primary time standard 'UTC' (Universal Time Coordinated) is used. The time zone compensates for location.



Important:

If your network in configured accordingly, the UTN server receives the time server settings automatically via DHCP. A time server assigned in such a manner always takes precedence over a manually set time server.

- ✓ The network has a time server.
- 1. Start the myUTN Control Center.
- 2. Select **DEVICE Date/Time**.
- 3. Tick **Date/Time**.
- 4. Into the **Time server** box, enter the IP address or the host name of the time server. (The host name can only be used if a DNS server was configured beforehand $\Rightarrow 27$.)
- 5. From the **Time zone** list, select the code for your local time zone.
- 6. To confirm, click Save.
- → The settings will be saved.

4.2 How to Assign a Description

You can assign freely definable descriptions to the UTN server. This gives you a better overview of the devices in the network.



You can also assign names to USB ports to distinguish them \Rightarrow 137.

- 1. Start the myUTN Control Center.
- 2. Select **DEVICE Description**.
- 3. Enter freely definable names for **Host name**, **Description**, and **Contact person**.
- 4. To confirm, click **Save**.
- \rightarrow The settings will be saved.

Table 12: Description

Parameters	Description
Host name	Device name as alternative to IP address. With a name you can identify the UTN server more easily in the network, e.g. if you are using several UTN servers.
	Is displayed in the myUTN Control Center, SEH Product Manager and SEH UTN Manager.
Description	Device description, e.g. location or department.
	Is displayed in the myUTN Control Center, SEH Product Manager and SEH UTN Manager.
Contact person	Contact person, e.g. device administrator.
	Is displayed in the myUTN Control Center.

4.3 How to Assign a Name to a USB Port

By default, the names of the connected USB devices are displayed on the USB ports in the myUTN Control Center and SEH UTN Manager. These names are specified by the device manufacturers and might be ambiguous or inaccurate.

That is why you can assign freely definable names to the USB ports, e.g. the name of a corresponding software. This gives you a better overview of the USB devices available in the network.

- 1. Start the myUTN Control Center.
- 2. Select **Device USB port**.
- 3. Enter the preferred name into the **Port name** field.
- 4. To confirm, click **Save**.
- \rightarrow The settings will be saved.

4.4 How to Disable a USB Port (only myUTN-80 and later)

By default all USB ports are active. You can deactivate (and re-activate) the USB port by interrupting respectively re-establishing the power supply.

Deactivate

- unused USB ports to ensure that unwanted USB devices cannot be connected to the network. (Deactivated USB ports cannot be seen in the SEH UTN Manager.)
- a USB port and re-activate it to restart the connected USB device if it is in an undefinable condition. (The USB device does not need to be removed and reconnected manually.)
- 1. Start the myUTN Control Center.
- 2. Select **Device USB port**.
- 3. Tick/clear the option in front of the **USB port**.
- 4. To confirm, click Save.
- → The USB port is disabled/enabled.

4.5 How to Configure the UTN (SSL) Port

A shared port is used for the data transfer between the UTN server (including connected USB devices) and the client. It depends on the connection type:

- <u>unencrypted</u> USB connection: UTN port (default = 9200)



WARNING

The UTN port respectively UTN SSL port must not be blocked by security measures (firewall).

You can change the port number, e.g. if the port number is already used for another application in your network. The change is made on the UTN server and is relayed to the SEH UTN Manager installed on the clients via SNMPv1.

- ✓ SNMPv1 is enabled

 ⇒

 ■28.
- 1. Start the myUTN Control Center.
- 2. Select **Device UTN port**.
- 3. Enter the port number into the **UTN port** or **UTN SSL port** box.
- 4. To confirm, click **Save**.
- → The settings will be saved.

4.6 How to Get Messages (only myUTN-80 and later)

The UTN server can send you different messages:

- Status email: Periodically sent email containing the status of the UTN server and of the connected USB devices.
- Event notification via email or SNMP trap:
 - USB device is connected to the UTNserver / disconnected from the UTN server
 - USB port (i.e. connection to the connected USB device) is activated/deactivated
 - UTN server restart
 - power supply is interrupted/established (myUTN-800 only)
 - network connection is interrupted/established (myUTN-800 only)
 - SD card is inserted into the UTNserver / removed from the UTN server (myUTN-800 only)
 - SC card cannot be used (myUTN-800only)

Configuring the sending of status emails

The status email can be sent to up to two recipients.

- ✓ SMTP is set up \Rightarrow \triangleq 30.
- ✓ DNS is set up \Rightarrow \triangleq 27.
- 1. Start the myUTN Control Center.
- 2. Select **DEVICE Notification**.
- 3. Enter the recipient into the **Email address** box.
- 4. Tick the desired recipient(s) in the **Status email** area.
- 5. Define the interval.
- 6. To confirm, click Save.
- → The settings will be saved.

Configuring event notifications via email

The event emails can be sent to up to two recipients.

- ✓ SMTP is set up \Rightarrow \triangleq 30.
- ✓ DNS is set up \Rightarrow \blacksquare 27.
- 1. Start the myUTN Control Center.
- 2. Select **DEVICE Notification**.
- 3. Enter the recipient into the **Email address** box.
- 4. Tick the options with the desired message types.
- 5. To confirm, click **Save**.
- → The settings will be saved.

Configuring event notifications via SNMP traps

The event SNMP traps can be sent to up to two recipients.

- ✓ SNMPv1 or/and SNMPv3 is set up ⇒ 🖹 28.
- 1. Start the myUTN Control Center.
- 2. Select **DEVICE Notification**.
- 3. In the **SNMP traps** area, define the recipients via the IP address and the community.
- 4. Tick the options with the desired message types.
- 5. To confirm, click **Save**.
- \hookrightarrow The settings will be saved.

4.7 How to Configure Acoustic Signals (myUTN-800 only)

The myUTN-800 Dongleserver gives acoustic feedback if:

- a USB dongle is connected
- the Dongleserver restarts
- the parameters are reset

These acoustic signals cannot be turned off.

Optionally, you can configure additional acoustic feedback for the following events:

- only one power supply works
- SD card errors (read and write errors, no SD card)
- · only one network connection is established



These optional acoustic signals ideally complement the error messages in the display panel $\Rightarrow 243$.

- 1. Start the myUTN Control Center.
- 2. Select **DEVICE Notification**.
- 3. In the **Acoustic signal** area, tick the options with the desired message types.
- 4. To confirm, click Save.
- \rightarrow The settings will be saved.

4.8 How Do I Determine What is Shown in the Display? (myUTN-800 only)

The Dongleserver myUTN-800 has a display panel at its front side. The following information can be displayed:

- Identifier Freely definable name which will be displayed as default. (Default: DS)
- Error states: Optional notifications which can be displayed if these events occur:
 - only one power supply works
 - SD card errors (read and write errors, no SD card)
 - only one network connection is established

The Errors are displayed in codes.

Table 13: Error codes

Text	Description	Troubleshooting
DS (respective identi- fier)	The Dongleserver is operational.	-
RS	The Dongleserver is restarting.	-
DL	Firmware/software is loaded onto the Dongleserver. Afterwards the Dongleserver is updated.	_
E1	One of the two power supplies is not working. Which connection is not working is indicated by a glowing dot (left dot, left power supply; right dot, right power supply).	Check the cabling connections and voltage source.
E2	The SD card is formatted with an unsupported file system respectively cannot be read and be written to.	 Format the SD card in the file format FAT32, FAT16 or FAT12. Check if the SD card functions properly.
E3	The SD card is read-only.	Remove the write protection from the SD card.
E4	No SD card is available in the card reader.	Insert an SD card into the SD card reader:Type: SD or SDHCFile system: FAT32, FAT16, or FAT12
E5	One or both network connections have no link.	Check the cable connections and your network.

Configuring the Identifier



Use the identifier to identify devices if you have installed several myUTN-800 in a server rack or at the same location.

- 1. Start the myUTN Control Center.
- 2. Select **DEVICE Description**.
- 3. Enter a freely definable description into the **Identifier (display panel)** box. (Max. 2 characters; A–Z, 0–9. E+digit is not permitted because this combination is used for errors.)
- 4. To confirm, click **Save**.
- \rightarrow The settings will be saved.



Figure 4: Display panel myUTN-800

Enable Error Notifications

- 1. Start the myUTN Control Center.
- 2. Select **DEVICE Notification**.
- 3. In the **Display panel** area, tick the options with the desired message types.
- 4. To confirm, click **Save**.
- \rightarrow The settings will be saved.



The optional acoustic signals ideally complement the error messages in the display panel $\Rightarrow 21$.

5 Working with the SEH UTN Manager

The 'SEH UTN Manager' is a software tool developed by SEH Computertechnik GmbH. The SEH UTN Manager is used to establish and manage connections to the USB devices connected to the UTN servers.

- How to Cut the Connection between the USB Device and the Client

 □49

- How to Use the SEH UTN Manager without Graphical User Interface (utnm) ⇒ 158

5.1 How to Find UTN Servers/USB Devices in the Network

The software tool SEH UTN Manager is used to establish and manage connections to the USB devices connected to the UTN servers.

After the SEH UTN Manager is started, the network has to be scanned for connected UTN servers. The network range to be scanned is freely definable; the search can be effected via multicast and/or in definable IP ranges. The default setting is multicast search in the local network segment.

All UTN servers found and their connected USB devices are displayed in the 'network list'. To use the USB devices connected to the UTN server, you have to add the UTN server to the 'selection list'.

You can also directly add an UTN server to the selection list. To do this, you need to know its IP address.

Defining Search Parameters

- ✓ The SEH UTN Manager (complete version) is installed on the client ⇒ 11.
- 1. Start the SEH UTN Manager.
- 2. In the menu bar, select **SEH UTN Manager Preferences**. The **Options** dialog appears.
- Select the Network Scan tab.
- 4. Tick IP Range Search and define one or more network ranges.
- Click **OK**.
- → The settings will be saved.

Scanning the Network

- ✓ The SEH UTN Manager (complete version) is installed on the client \Rightarrow 11.
- 1. Start the SEH UTN Manager.
- 2. In the menu bar, select **Selection List Edit**.

The **Edit Selection List** dialog appears.

- 3. Click Scan.
- 4. The network is scanned. The UTN servers and USB devices found are displayed in the network list.

Adding the UTN Server to the Selection List

- ✓ The SEH UTN Manager (complete version) is installed on the client \Rightarrow \(\begin{aligned}
 \text{11}.
- ✓ The UTN server was found via the network scan and is displayed in the network list.
- 1. Start the SEH UTN Manager.
- 2. In the menu bar, select Selection List Edit.

The **Edit Selection List** dialog appears.

- 3. In the network list, select the UTN server to be used.
- 4. Click Add.

(Repeat steps 2 and 3, if necessary.)

- 5. Click OK.
- → The UTN servers and the connected USB devices are shown in the selection list.

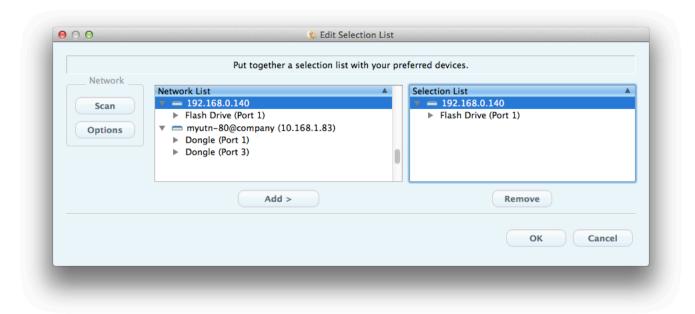


Figure 5: SEH UTN Manager – Edit Selection List

Adding a UTN Server via IP Address

- ✓ The SEH UTN Manager (complete version) is installed on the client \Rightarrow \(\bigsim 11.
- ✓ You know the IP address of the UTN server.
- 1. Start the SEH UTN Manager.
- Select UTN server Add.
 The Add server dialog appears.
- 3. In the **Host name or IP address** box, enter the IP address of the UTN server.
- 4. If you changed the UTN port or UTN SSL port (□ ■39), define the respective port numbers in the **UTN-Port** and **UTN-SSL-Port** box.
- 5. Click OK.
- → The UTN server and the connected USB devices is shown in the selection list.

5.2 How to Establish a Connection to a USB Device

To connect a USB device to the client, a point-to-point-connection is established between the client and the USB port of the UTN server to which the USB device is connected. The USB device can then be used as if it were directly connected to the client.



Important:

Special case of compound USB devices

When connecting certain USB devices to a USB port of the UTN server, the selection list displays several USB devices on this port. These are compound USB devices. They consist of a hub and one or more USB devices that are all integrated into a single housing.

If the connection is established to a port with a connected compound USB device, all USB devices shown will be connected to the user's client. In this case, each integrated USB device occupies a virtual USB port of the UTN server. The number of these virtual USB ports is limited depending on the UTN server model. If the limit is reached, no further USB devices can be used on this UTN server.

UTN server	Number of virtual USB ports
myUTN-50a	6
myUTN-55	6
myUTN-80	16
myUTN-800	40

- ✓ The SEH UTN Manager (complete version) is installed on the client
 □
 □
 11.
- ✓ All provisions (driver installation, etc.) necessary to operate the USB device locally (i.e. connected directly to the client) have been met on the client. Ideally, the USB device has been connected and operated on the client locally according to the instructions of the manufacturer.
- ✓ The USB port is not connected to another client.
- 1. Start the SEH UTN Manager.
- 2. In the selection list, select the port.
- 3. In the menu bar, select **Port Activate**.
- → The connection between the USB device and client is established.

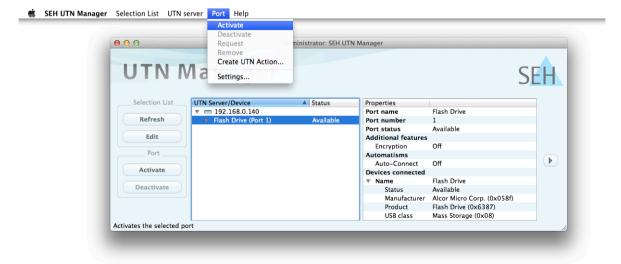


Figure 6: SEH UTN Manager – USB port activation

5.3 How to Cut the Connection between the USB Device and the Client

If a USB device is connected to a client, the connection is of a point-to-point type. As long as the connection is established, other users cannot connect the USB device to their client and thus cannot use it. For this reason, you have to cut the connection once you do not use the USB device any longer.

To cut the connection between USB device and client, you deactivate the connection between the client and the USB port of the UTN server to which the USB device is connected.

Cutting the Device Connection via the SEH UTN Manager

- ✓ The SEH UTN Manager (complete version) is installed on the client ⇒ 🖹 11.
- ✓ The USB port is shown in the selection list \Rightarrow \triangleq 46.
- 1. Start the SEH UTN Manager.
- 2. In the selection list, select the port.
- 3. Select **Port Deactivate** from the menu bar.
- → The connection will be deactivated.

Cutting the Device Connection via the myUTN Control Center

- 1. Start the myUTN Control Center.
- 2. Select START.
- 3. Choose the active connection from the **Attached devices** list and click the **a** icon.
- 4. Confirm the security query.
- → The connection will be deactivated.

5.4 How to Request an Occupied USB Device

If a USB device is connected to a client, the connection is of a point-to-point type. As long as the connection is established, other users cannot connect the USB device to their client and thus cannot use it.

If you want to use an occupied USB device, you can request it. The other user will receive a release request in form of a pop up. If the user follows your request and releases the USB device by deactivating the connection to the USB device, the connection between the USB device and your client will automatically be activated.

- ✓ The SEH UTN Manager (complete version) is installed on the client ⇒ 🖹 11.
- ✓ The SEH UTN Manager (complete version) is installed on the client of the user who uses the USB device ⇒ 🖹 11.
- ✓ The SEH UTN Manager (complete version) is executed with graphical user interface on both clients.
- ✓ The USB port is shown in the selection list \Rightarrow \triangleq 46.
- ✓ The USB port is connected to another client ⇒ 148 (but not via Auto-Connect).
- 5. In the selection list, select the port.
- 6. In the menu bar, select **Port Request**.
- → The release request will be sent.

5.5 How to Automate USB Device Connections and Program Starts

Connections to USB ports of the UTN server and the connected USB devices can be automated. Simple to complex processes can be implemented.

- Automatic Connection between a USB Device and Client When a Print Job Is Received (Print-On-Demand) ⇒

 ■52
- Creating a UTN Action: Automated Connections and Program Starts without the SEH UTN Manager Interface
 ⇒ ■52



This chapter describes features of the SEH UTN Manager with which automatisms are set up. Users who have expert knowledge in scripting should use the command line tool 'utnm' $\Rightarrow \$58$.

Automatic Connection If a USB Device Is Connected (Auto-Connect)

Auto-Connect automatically establishes a connection to a USB port and the connected USB device as soon as a USB device is connected to the USB port. Auto-Connect must be activated for each USB port and works for all USB devices which are connected to the USB port.

- ✓ The SEH UTN Manager (complete version) is installed on the client ⇒ 11.
- ✓ The USB port is shown in the selection list \Rightarrow \triangleq 46.
- ✓ You are logged on to the client as administrator.
- 1. Start the SEH UTN Manager.
- 2. Select the UTN server from the selection list.
- 3. In the menu bar, select **UTN server Activate Auto-Connect**. The dialog **Activate Auto-Connect** appears.
- 4. Tick the option for the desired USB ports.
- 5. Click OK.
- → The setting will be saved. The connection to the USB port and the connected USB device is automatically and immediately activated. If you disconnect the USB device and reconnect it, the connection is again automatically established.



Important:

If you manually deactivate an established USB port connection that was activated by Auto-Connect, the Auto-Connect setting will be deactivated as well. If you want to use Auto-Connect again, you will have to configure it anew later on.

Automatic Deactivation of the Connection after a Time Defined (Auto-Disconnect)

Auto-Disconnect deactivates the connection to a USB port and the connected USB device after a previously defined time. 2 minutes before time runs out, the user will receive a notification and is asked to deactivate their connection in order to prevent data loss and error states. Optionally, a one-off prolongation of the connection by the duration of the defined time can be activated. In this case, the user can choose to prolong the connection or decline it when the notification pops up.

Auto-Disconnect allows a large number of network participants to access a small number of devices and avoids idle times.

- ✓ The SEH UTN Manager (complete version) is installed on the client ⇒ 🖺 11.
- ✓ The UTN server is displayed in the 'Automatic Device Disconnect' area ⇒ 146.
- ✓ You are logged on to the client as administrator.

- 1. Start the SEH UTN Manager.
- 2. Select the SEH UTN server in the selection list.
- 3. In the SEH UTN Server menu, select the command "Activate Auto Disconnect".
 - The Activate **Auto Disconnect** dialog appears.
- 4. Activate the option for the desired USB ports.
- 5. Define the desired time period (10-9999 minutes).
- 6. Activate the **Extension** option if required.
- 7. Select the **OK** button.
- ☐ The setting is saved

Automatic Connection between a USB Device and Client When a Print Job Is Received (Print-On-Demand)

Print-On-Demand automatically establishes a connection between the client and the USB port to which the USB device (printer or multifunction device) is connected when a print job is received.

After completion of the print job, the connection will be automatically disabled.

- ✓ The SEH UTN Manager (complete version) is installed on the client \Rightarrow \(\bigsim 11.
- ✓ The USB port is shown in the selection list \Rightarrow \triangleq 46.
- ✓ The USB port is <u>not</u> connected to another client.
- ✓ You are logged on to the client as administrator.
- 1. Start the SEH UTN Manager.
- 2. In the selection list, select the port.
- 3. In the menu bar, select **Port Activate**.

The connection will be established. The device is installed. A printer object is created on the client.

4. In the menu bar, select **Port – Settings**.

The **Port Settings** dialog appears.

- 5. In the **Automatic device connection** area, tick **Print-On-Demand**.
- 6. Click OK.

The setting will be saved.

Select Port – Deactivate from the menu bar.

The connection will be deactivated.

→ Print-On-Demand is set up.

Creating a UTN Action: Automated Connections and Program Starts without the SEH UTN Manager Interface

UTN Actions are small files which contain a script that automates the connections to USB ports including connected USB devices. The process defined in the script runs automatically when the file is executed. Since the 'SEH UTN Service' is active in the background, the user does not have to start the SEH UTN Manager interface. I.e., UTN Actions can be used with the complete ($\Rightarrow \blacksquare 11$) and minimal version ($\Rightarrow \blacksquare 11$).

UTN Actions are for realizing simple scenarios, such as activating a connection, as well as complex procedures, such as activating a connection and starting an application with time delay. You can create the UTN action with a wizard. The wizard is only available in the complete version (⇔ 🖺 11) of the SEH UTN Manager. You can create the following UTN Actions:

- UTN Actions which activate and deactivate the device
 - The wizard will automatically create one UTN Action for the activation and one UTN Action for the deactivation of the USB port and the connected USB device. Both UTN Actions will be saved to the desktop.
- UTN Action which starts an application and activates the device
 - After the selection of an application by the user, the wizard will automatically create a UTN Action which starts an application and activates the USB port and the connected USB device. Additionally, you can define a port deactivation after the closing of the application.
- Custom UTN Action (Experts only)
 - With the help of the wizard, a custom UTN Action can be created. You can create:
 - UTN Actions for the activation and deactivation of the USB port and the connected USB device. You can define additional options.

- A script for starting the application and activating the USB port and the connected USB device. Additionally, you can define a delay for the start of the application, the deactivation of the USB port after the closing of the application and additional options. Finally, the complete UTN Action will be created automatically by the SEH UTN Manager and saved by the user.



UTN Actions are based on the command line tool 'utnm'. We recommend experts to use this tool, if they want to create very complex scripts without restraints $\Rightarrow \$58$.

- ✓ The SEH UTN Manager (complete version) is installed on the client

 □
 □
 □
 □
 □
 □

 11.
- ✓ The USB port is shown in the selection list \Rightarrow \triangleq 46.
- 1. Start the SEH UTN Manager.
- 2. Select a port from the selection list.
- In the menu bar, select Port Create UTN Action.
 The dialog Create UTN Action appears.
- 4. Follow the instructions of the wizard.
- → A UTN Action will be created. The UTN Action is run by double-clicking the file.

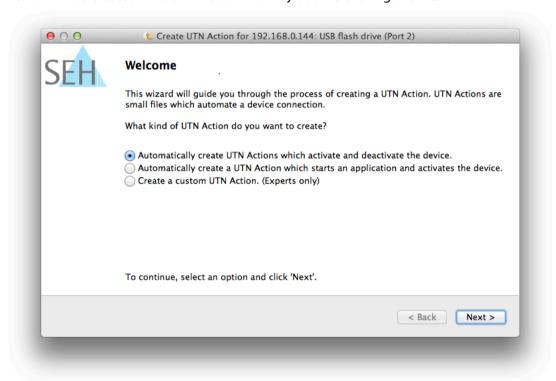


Figure 7: Create UTN Action dialog



Apps can be moved to any place and renamed after they have been saved.



(Experts only) Custom UTN Actions which activate or deactivate USB devices can be edited after their creation. To do this, edit the script within the app (path: Contents/Resources/script).



Expert mode (script): You can also edit the script after its creation using a simple text editor.

5.6 How to Find Status Information on USB Ports and USB Devices

You can check the status of USB ports and USB devices at any given time.

- ✓ The SEH UTN Manager (complete version) is installed on the client \Rightarrow 11.
- ✓ The USB port is shown in the selection list \Rightarrow \triangleq 46.
- 1. Start the SEH UTN Manager.
- 2. Select the USB port from the selection list.
- → The status information is displayed in the **Properties** area.


5.7 How to Use the Selection List and Manage User Access Rights with It

The selection list is the main element in the SEH UTN Manager and shows all embedded UTN servers. USB devices can only be used if the UTN server to which they are connected is on the list (⇒ ■46). By controlling the selection list you consequently control the user's access to UTN servers and the connected USB devices.

By default, all client users use the global selection list in the SEH UTN Manager. However, you can set a user selection list for the client users. This list can be compiled by the users themselves. Alternatively, you as client administrator restrict user rights and provide a list with which only the UTN servers you define can be used.

Table 14: Differences in global and user selection list


Global Selection List

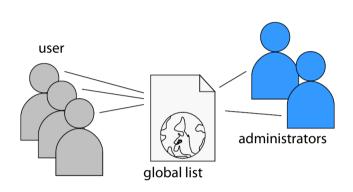

- All users of a client use the same selection list.
- The users can access all devices listed in the selection list.
 (Provided that no security mechanisms have been specified via the myUTN Control Center.)
- List is stored at: Library

The selection list can be edited by administrators.

User Selection List

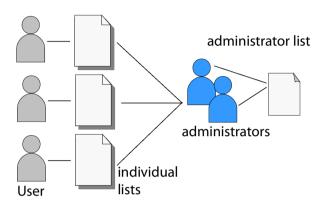

- Each user has their own selection list.
 All administrators have the same selection list.
- The users can access all devices listed in the selection list.
 (Provided that no security mechanisms have been
- List ('ini'-file) is stored at:

\$HOME/.config/SEH Computertechnik GmbH/SEH UTN Manager.ini

specified via the myUTN Control Center.)

(\$HOME is an environment variable for the user folder in macOS; the path for the current user can be determined with using command line: echo \$HOME

Example macOS 10.15.7 (Catalina):

echo θ yields /User home/User name

/.config/SEH Computertechnik GmbH/SEH
UTN Manager.ini

Complete path to the ini file:

/User home/User name/.config/SEH Computertechnik GmbH/SEH UTN Manager.ini)

 The selection list can be edited by administrators or by users with write access to the ini-file.
 Users with read-only access to the ini-file cannot edit the selection list and have limited access to SEH UTN Managers functions.



Which functions (selection list editing etc.) can be used in the SEH UTN Manager depends on the selection list type (global/user) and user account type on the client (administrator/user; user with/without write access to ini-file). For a detailed breakdown see 'SEH UTN Manager – Feature Overview' \Rightarrow 118.

Setting Up the Global Selection List for All Users

The global selection list is used by default.

- ✓ The SEH UTN Manager (complete version) is installed on the client \Rightarrow 11.
- ✓ You are logged on to the system as administrator.
- 1. Start the SEH UTN Manager.
- 2. Compose the selection list ⇒ \(\bigsig \)46.
- 3. In the menu bar, select **SEH UTN Manager–Preferences**. The **Options** dialog appears.
- 4. Select the tab Selection List.
- 5. Tick Global selection list.
- 6. Click OK.
- → The setting will be saved. All users of a client use the same selection list.

Providing User Selection Lists

- ✓ You are logged on to the system as administrator.
- 1. Start the SEH UTN Manager.
- 2. In the menu bar, select **SEH UTN Manager–Preferences**.

The **Options** dialog appears.

- 3. Select the tab **Selection List**.
- 4. Tick User selection list.
- 5. Click OK.

optional: With the following steps you provide a predefined selection list.

- 7. In the menu bar, select **Selection List–Export**.

The **Export to** dialog appears.

- 8. Save the file 'SEH UTN Manager.ini' to the user directories: \$HOME/.config/SEH Computertechnik GmbH/SEH UTN Manager.ini (⇒Table 14 🗎 55)
- → The setting will be saved. Each user uses their individual (predefined) selection list. The administrators share one selection list.

Restrict Write Access to the 'SEH UTN Manager.ini'-file

User selection lists can be set up and edited by the users themselves.

In order to restrict users to just the UTN servers you want them to have access to, you can provide a list to users. To do so, you as administrator store a predefined list for the user (\Rightarrow \implies 56) and limit the user to read-only access to the 'SEH UTN Manager.ini'-file. By limiting the user to read-only access, all SEH UTN Manager functions concerning the selection list are disabled for the user.

Use the usual methods of your operating system to turn the ini-files into read-only files. For more information, read the documentation of your operating system.

5.8 How to Use the SEH UTN Manager without Graphical User Interface (utnm)

The SEH UTN Manager is available in two versions ⇒ 11. It can be used without graphical user interface in the minimal version. To do so, the tool 'utnm' is utilized to use UTN features via the terminal of the operating system:

- directly, by entering commands in a certain syntax and executing them
- via scripts which contain commands in a certain syntax that will be executed automatically and step by step by the command line interpreter



Use scripts to automate frequently recurring command sequences such as port activations.



The execution of scripts can be automated as well, e.g. by means of login scripts.

Syntax

utnm -c "command string" [-<command>]

The executable file 'utnm' can be found in the 'SEH UTN Manager.app'. There is a symbolic link to it in /usr/bin/.

Commands

Rules for commands:

- Underlined elements are to be replaced by the appropriate values (e.g. server = IP address or host name of a UTN server)
- elements in square brackets are optional.
- · not case-sensitive
- only the ASCII format can be read.

or

--help

Command	Description
-c " <u>command string</u> "	Runs a command. The command is specified in greater detail by the command strings. Command strings:
or	 activate <u>server</u> <u>port number</u> Activates the connection to a USB port and the connected USB device
command "command string"	 activate <u>server</u> <u>vendor ID (VID)</u> <u>product ID (PID)</u> Activates the connection to a USB port and the first free connected USB device with the defined IDs, if several identical USB devices are connected to the UTN server.
	 deactivate <u>server port number</u> Deactivates the connection to a USB port and the connected USB device.
	• set autoconnect = true false <u>server</u> <u>port number</u> Enables/disables Auto-Connect (□ 151) for the USB port.
	• set portkey='port key' <u>server port number</u> Stores a USB port key (⇒ 171) locally on the system. This way, the USB port key is always automatically sent and must not be specified each time with the command -k <u>USB port key</u> respectivelykey <u>USB port key</u> (see below).
	(To remove the USB port key use the command string
	<pre>set portkey= server port number) Important:</pre>
	The command only sets the key permanently to make the USB device available.
	The USB port key configuration is done via the myUTN Control Center $\Rightarrow \blacksquare 71$.
	 find Searches for all UTN servers in the network segment and shows the UTN servers found with IP address, MAC address, model and software version.
	 getlist <u>server</u> Shows an overview of the USB devices connected to the UTN server (including port number, vendor ID, product ID, vendor name, product name, device class, and status).
	 state <u>server port number</u> Displays the status of the USB device connected to the USB port.
-h	Shows the help page.

Command	Description
-k <u>USB port key</u>	Specifies a USB port key ⇒ 🖺 71.
or	Important:
key <u>USB port key</u>	The command only enters the key to make the USB device available.
	Use the command -c "command string" respectively command "command string" to permanently store a USB port key on the system so that it is sent automatically each time (see above).
	The USB port key configuration is done via the myUTN Control Center ⇒ 171.
-mr	Separates the output of the command string getlist with tabulators
or	and the output of find with commas.
machine readable	
-nw	Suppresses warning messages.
or	
no-warnings	
-0	Shows the output in the command line.
or	
output	
-p <u>port number</u>	Uses an alternative UTN port.
or	Use this command if you have changed the UTN port number (\Rightarrow \blacksquare 39).
port <u>port number</u>	
-q	Suppresses the output.
or	
quiet	Harry and the second time LITNI and the CCL /TLC and another
-sp port number	Uses an alternative UTN port with SSL/TLS encryption.
or	Use this command if you have changed the UTN SSL port number (□ 20)
ssl-port port number	1 39).
-t <u>seconds</u> or	Specifies a timeout for the command strings activate and deactivate.
-timeout <u>seconds</u>	
-v	Shows version information about utnm.
or	
version	

Return

After a command is executed, a return indicates success or failure of the process. The returned information is a status combined with a return value (return code). If the output is suppressed (' $--quiet' \Rightarrow B60$), only the value is returned.

The return can be used to determine how the process proceeds, e.g. in a script.

Return Value	Description
0	The command was executed successfully.
20	Activation failed.
21	Deactivation failed.
23	Is already activated.
24	Is already deactivated or not available.
25	Activation failed: Another user has activated the USB port incl. device.
26	Not found: There is no device connected to the USB port or the USB port key (\Rightarrow \implies 71) is missing respectively wrong.
29	Not found: No USB device with this VID and PID connected.
30	Isochronous USB devices are not supported.
31	UTN driver error. Contact the SEH Computertechnik GmbH support \Rightarrow \blacksquare 5.
40	No network connection to the UTN server.
41	An encrypted connection to UTN server cannot be established.
42	No connection to UTN service.
43	The DNS resolution failed.
44	Insufficient rights (administrative rights required).
47	This feature is not supported.
200	Error (with error code).

Using utnm via Terminal

- ✓ The SEH UTN Manager is installed on the client ⇒ 🖹 11.
- ✓ You know the UTN server's IP address or host name.
- 1. Open a **Terminal**.
- 2. Enter the sequence of commands; see 'Syntax' \Rightarrow \$\mathbb{
- 3. Confirm your entry.
- → The sequence of commands will be run.

Example: Activating a USB device on port 3 of the UTN server with the IP address 10.168.1.167

utnm -c "activate 10.168.1.167 3"

Creating a utnm Script

- ✓ The SEH UTN Manager is installed on the client ⇒ 🖺 11.
- ✓ You know the UTN server's IP address or host name.
- ✓ You know how to create and use scripts in your operating system. If needed, refer to the documentation of your operating system.
- 1. Open a text editor.
- 3. Save the file as executable script on your client.
- → The script is saved and can be used.

6 Security

The UTN server can be protected with various security mechanisms. These mechanisms secure the UTN server itself as well as the connected USB devices. In addition, you can integrate the UTN into the protection mechanisms implemented in your network.

- How to Encrypt the USB Connection

 □64
- How to Encrypt the Connection to the myUTN Control Center

 □66

- How to Block Ports of the UTN Server (TCP Port Access Control)

 □ 10



Important:

Protect the access to the myUTN Control Center with user accounts so that security related settings cannot be tampered with by unauthorized persons.



You can also use SNMP and VLAN for security:

6.1 How to Encrypt the USB Connection

To secure the USB connections, you encrypt the data transfer between the clients and the USB devices connected to the UTN server. The encryption has to be activated individually for each connection, i.e. for each USB port.



Important:

Only payload will be encrypted. Control and log data will be transmitted without encryption.

For encryption the protocols SSL (Secure Sockets Layer) and its successor TLS (Transport Layer Security) are used. The encryption strength is defined via the encryption protocol and level \Rightarrow \bigcirc 67.



WARNING

The SEH UTN Manager does not support the encryption level **Low**. If you set up **Low** in combination with an encrypted USB connection, a connection cannot be established.

Use an encryption level as high as possible.

If connections are encrypted, client and UTN server communicate via the UTN SSL port. By default, that is port 9443. If the port is already used in your network, e.g. for another application, you can change the port number $\Rightarrow 139$.

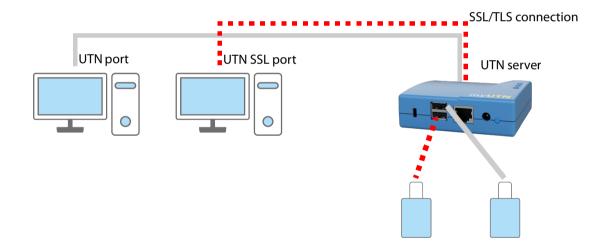


Figure 8: UTN server – SSL/TLS connection in the network

- 1. Start the myUTN Control Center.
- 2. Select **SECURITY Encryption**.
- 3. Enable the encryption for the USB port.
- 4. To confirm, click **Save**.
- → The data transfer between the clients and the USB device will be encrypted.



The encrypted connection will be displayed client-side in the SEH UTN Manager under **Properties**.

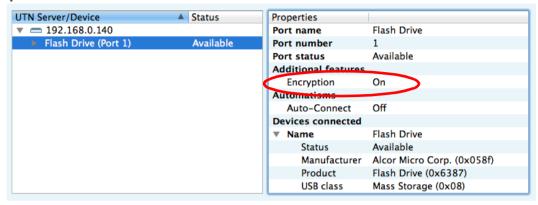


Figure 9:SEH UTN Manager – encryption

6.2 How to Encrypt the Connection to the myUTN Control Center

You can protect the connection to the myUTN Control Center by encrypting it with the protocol SSL (Secure Sockets Layer) and its successor TLS (Transport Layer Security).

- HTTP: unencrypted connection
- HTTPS: encrypted connection
 The encryption strength is defined via the encryption protocol and level ⇒ ■67. When an encrypted connection is to be established, the client asks for a certificate via a browser (⇒ ■74). This certificate must be accepted by the browser; read the documentation of your browser software.



WARNING

Current browsers do not support low security settings. With them a connection cannot be established.

Do <u>not</u> use the following combination: Encryption protocol **HTTPS** and encryption level **Low**.

- 1. Start the myUTN Control Center.
- 2. Select SECURITY Device access.
- 3. In the Connection area, tick HTTP/HTTPS or HTTPS only.
- 4. To confirm, click **Save**.
- → The setting will be saved.

6.3 How to Define the Encryption Strength for SSL/TLS Connections

Some connections to and from the UTN server can be encrypted with the protocol SSL (Secure Sockets Layer) and its successor TLS (Transport Layer Security):

- Email: POP3 (⇒ 🖺 30)
- Email: SMTP (⇒ 130)
- Data transfer between the clients and the UTN server (and the connected USB devices): USB connection (⇒

 ■67)

The encryption strength and thus the safety of the connection is defined via the encryption protocol and level. You can choose both.

Each encryption level is a collection of what is called cipher suites. A cipher suite in turn is a standardized sequence of four cryptographic algorithms that are used to establish a secure connection. Based on their encryption strength they are grouped to encryption levels. Which cipher suites are supported by the UTN server, i.e. are part of an encryption level, depends on the chosen encryption protocol. You can choose between two encryption levels:

- Any: The encryption is automatically negotiated by both communicating parties. The strongest encryption supported by both parties will always be chosen.
- Low: Only cipher suites with a low encryption are used. (Fast data transfer)
- Medium
- High: Only cipher suites with an strong encryption are used. (Slow data transfer)

When a secure connection is established, the protocol to be used and a list of supported cipher suites are sent to the communication partner. A cipher suite is agreed upon that will be used later on. The strongest cipher suite that is supported by both parties will be used by default.



WARNING

If the communication partner of the UTN server does not support the protocol selected and/or if there is no cipher suite that is supported by both parties, the SSL/TLS connection will not be established.

If problems occur, select different settings or reset the parameters of the UTN server $\Rightarrow 87$.



If you want the UTN server and its communication partner to automatically negotiate the settings, set both options to **Any**. With these settings, the chances that a secure connection can be established are the highest.

- 1. Start the myUTN Control Center.
- 2. Select SECURITY SSL connections.
- 3. In the **Encryption protocol** area, select the desired protocol.



WARNING

Current browsers do not support **SSL**. If you use an up-to-date browser and set the combination **SSL** and **HTTPS only** for accessing the myUTN Control Center (⇒

☐ 66), a connection cannot be established.

Use TLS (and not SSL).



Important:

Which protocols are supported by the UTN server depends on the product hardware and the installed firmware/software.

4. In the **Encryption level** area, select the desired level.



WARNING

Current browsers do not support cipher suites from the **Low** level. If you use an up-to-date browser and set the combination **Low** and **HTTPS only** for accessing the myUTN Control Center ($\Rightarrow \implies 66$), a connection cannot be established. Use an encryption level as high as possible.



WARNING

The SEH UTN Manager does not support the encryption level **Low**. If you set up **Low** in combination with an encrypted USB connection (\Rightarrow \implies 64), a connection cannot be established.

Use an encryption level as high as possible.

- 5. To confirm, click Save.
- → The setting will be saved.



Detailed information about the individual SSL/TLS connections (e.g. supported cipher suites) can be found on the details page **SSL connection status – Details**.

6.4 How to Protect Access to the myUTN Control Center (User Accounts)

By default, everyone who can find the UTN in the network can access its myUTN Control Center. To protect the UTN from unwanted configuration changes, you can set up two user accounts:

- Administrator: Complete access to the myUTN Control Center. The user can see all pages and change settings.
- Read-only user: Very restricted access to the myUTN Control Center. The user can only see the 'START' page.

If you have set up user accounts, a login screen is displayed when the myUTN Control Center is started. You can choose between two login screens:

- List of users: User names are displayed. Only the password has to be entered.
- Name and password dialog: Neutral login screen in which user name and password have to be entered. (better protection)

A user account allows for multiple logins, i.e. the account can be used by a single user or by a group of users. Up to 16 users can be logged in at the same time.



Important:

The user accounts for myUTN Control Center access are also used for SNMP \Rightarrow \triangleq 28. Consider this when setting up user accounts.

For stronger security, you can use a session timeout. If there is no activity within a defined timeout, the user will automatically be logged out.

- 1. Start the myUTN Control Center.
- 2. Select SECURITY Device access.
- 3. Define the two user accounts. To do this, in the area **User accounts** enter a **User name** and **Password** respectively.



You can show the typing if you want to make sure that there are no typing errors in the password.

- 4. Tick Restrict Control Center access.
- 5. Choose the login screen type: **list of users** or **name and password**.
- 6. Tick **Session timeout** and into the **Session duration box** enter the time in Minutes after which the timeout is to be effective.
- 7. To confirm, click Save.
- → The settings will be saved.

6.5 How to Block Ports of the UTN Server (TCP Port Access Control)

You can restrict access to the UTN server by blocking ports with the 'TCP port access control'. If a port is blocked, the protocols respectively services using this port cannot establish a connection with the UTN server. Thus attackers have less room for attack.

The security level defines which port types are blocked:

- UTN access (blocks UTN ports)
- TCP access (blocks TCP ports: HTTP/HTTPS/UTN)
- All ports (blocks IP ports)

You have to define exceptions so that your desired network elements, e.g. clients or DNS servers, can establish a connection with the UTN server.



The 'test mode' is active by default so that you can test your settings without locking yourself out. Your settings will be active until the UTN is restarted, afterwards access is no longer restricted.

After you have successfully tested your settings, you have to deactivate the test mode so that access control is permanent.

- 1. Start the myUTN Control Center.
- 2. Select **SECURITY TCP port access**.
- 3. Tick Port access control.
- 4. In the **Security level** area, select the desired protection
- 5. In the Exceptions area, define the network elements that are to have access to the UTN server. To do this, enter the IP or MAC (hardware) addresses and tick the options.



- MAC addresses are not delivered through routers!
 The use of wildcards (*) allows you to define subnetworks.
- 6. Make sure that the **Test mode** is enabled.
- 7. Click Save & Restart to confirm.

The settings will be saved.

The port access control is activated until the device is restarted.

8. Check the port access and if the myUTN Control Center can be reached.



Important:

If the myUTN Control Center cannot be reached, restart the UTN server \Rightarrow 83.

- 9. Deactivate the **Test mode**.
- 10. Click Save & Restart to confirm.
- → The settings will be saved.

6.6 How to Control Access to USB Devices (only myUTN-80 and later)

You can restrict the access to the USB ports and the connected USB devices:

- USB port key control A key is defined for the USB port. Neither the USB port nor the connected USB device are shown in the SEH UTN Manager, i.e. the USB device cannot be used. Only if the key for the USB port is entered in the SEH UTN Manager, the USB port and the connected USB device appear.
- USB port device assignment: A certain USB device is assigned to a USB port. This is achieved by linking the USB port and USB device through the vendor ID (short VID) and product ID (short PID) of the USB device. The combination of VID and PID is specific to a certain USB device model which means that only USB devices of this specific model can be used on the USB port. This way you can assure, that (security) settings cannot be circumvented by connecting USB devices to other ports.



Power off unused ports to increase security \Rightarrow 38.

- Entering a USB Port Key (Unlocking a USB Device)

 [□] 271
- Setting up USB Port Device Assignment ⇒ 12

Setting Up USB Port Keys

A key for a USB port is defined in the myUTN Control Center.

- 1. Start the myUTN Control Center.
- 2. Select **SECURITY USB** port access.
- 3. For the desired USB port, go to the **Method** list and select **Port key control**.
- 4. Click Generate key or enter a freely definable key (max. 64 ASCII characters) into the Key box.
- 5. To confirm, click **Save**.
- → The settings will be saved. Access to the USB device is protected.



To deactivate the feature, go to the **Method** list and select ---.

Entering a USB Port Key (Unlocking a USB Device)

To gain access to a USB device that is protected with the USB port key control, the corresponding key must be entered in the SEH UTN Manager on the client.

- 1. Start the SEH UTN Manager.
- 2. In the selection list, select the UTN server.
- 3. In the menu bar, select **UTN server Set USB Port Keys** . The **Set USB Port Keys** dialog appears.
- 4. Enter the key for the relevant USB port.
- 5. Click OK.
- → Access is granted. The USB port and the connected USB device are shown in the selection list and can be used.

Setting up USB Port Device Assignment

- 1. Start the myUTN Control Center.
- 2. Select **SECURITY USB** port access.
- 3. For the desired USB port, go to the **Method** list and select **Device assignment**.
- 4. Click Reallocate device.
 - The **USB device** box shows the VID and PID of the USB device.
- 5. To confirm, click **Save**.
- → The settings will be saved. Only the assigned USB device model can be operated on the USB port.



To deactivate the feature, go to the **Method** list and select ---.

6.7 How to Block USB Device Types

USB devices are grouped into classes according to their function. For example, input devices such as keyboards belong to the group 'Human Interface Device' (HID).

USB devices may present themselves as HID class USB devices while they are actually used for abuse (known as 'BadUSB').

In order to protect the UTN server, you can block input devices of the HID class.

- 1. Start the myUTN Control Center.
- 2. Select **SECURITY Device access**.
- 3. Tick/clear **Disable input devices (HID class)** in the **USB devices** area.
- 4. To confirm, click **Save**.
- → The setting will be saved.

6.8 How to Use Certificates

The UTN server has its own certificate management. Digital certificates are data sets, which confirm the identity of a person, object, or organization. In TCP/IP networks they are used to encrypt data and to authenticate communication partners.

The UTN needs a certificate for:

- protecting the connection between the clients and the connected USB devices

 □64

The following certificates can be used in the UTN server:

- 1 self-signed certificate
 Certificate generated by the UTN server and signed by the UTN server itself. The certificate confirms the UTN server's identity.
- 1 client certificate, i.e. 1 requested certificate or 1 PKCS#12 certificate
 The client certificate confirms the identity of the UTN server with the help of an additional trustworthy authority which is the certification authority (short CA).
 - Requested certificate: As first step, a certificate request is generated on the UTN server and then the request is sent to a certification authority. In the second step, the certification authority creates a certificate based on the request for the UTN server and signs it.
 - PKCS#12 certificate Exchange format for certificates. You have a certification authority generate a certificate which is stored in password-protected PKCS#12 format for the UTN server. Then you transport the PKCS#12 file to the UTN server and install it (and thus the certificate in it).
- 1 S/MIME certificate
 - The UTN server uses the S/MIME Certificate to sign and encrypt emails which is sends. The corresponding private key (PKCS#12 format) has to be installed as certificate of it's own in the email program (Microsoft OutlookMail etc.) so that emails can be verified and, if necessary, decrypted. (only myUTN-80 and later)
- 1–32 CA certificates, also known as root CA certificates.
 Certificates which are issued for a certification authority and confirm its identity. They are used for verifying certificates that have been issued by the respective certification authority. In case of the UTN server these are the certificates of communication partners to verify their identity (chain of trust). Thus multi-level public key infrastructures (PKIs) are supported.



Important:

Upon delivery, a default certificate is stored in the UTN server. This certificate is issued by SEH Computertechnik GmbH for each device specifically.

- Deleting Certificates ⇒ ₱78

Having a Look at Certificates

- ✓ A certificate is installed on the UTN server.
- 1. Start the myUTN Control Center.
- 2. Select SECURITY Certificates.
- 3. Select the certificate via the icon <a>\mathbb{Q}.
- → The certificate is displayed.

Creating a Self-Signed Certificate



Important:

Only one self-signed certificate can be installed on the UTN server.

To create a new certificate, you must first delete the existing certificate ⇒ 🖺 78.

- 1. Start the myUTN Control Center.
- 2. Select **SECURITY Certificates**.
- 3. Click Self-signed certificate.
- 4. Enter the relevant parameters; ⇒Table 15 ≜75.
- 5. Click Create/Install.
- → The certificate will be created and installed. This may take a few minutes.

Table 15: Parameters for the Creation of Certificates

Parameters	Description		
Common name	Freely definable certificate name. (max. 64 characters)		
	Use the IP address or host name of the UTN server, so that you can clearly match device and certificate.		
Email address	Email address of the person responsible for the UTN server. (max. 40 characters; optional)		
Organization name	Name of the company which uses the UTN server. (max. 64 characters)		
Organizational unit	Name of a department or subsection in the company. (max. 64 characters; optional)		
Location	Location of the company. (max. 64 characters)		
State name	State where the company is based. (max. 64 characters)		
Domain component	Allows you to enter additional attributes. (Optional entry)		
SAN (multi-domain)	Allows you to enter Subject Alternative Names (SAN). Is used to enter additional host names (e.g. domains).		
	(Optional entry, max. 255 characters)		
Country	Country where the company is based. Enter the two-digit country code according to ISO 3166. Examples: DE = Germany, GB = Great Britain, US = USA		

Parameters	Description
Issued on	Date from which on the certificate is valid.
Expires on	Date from which on the certificate becomes invalid.
RSA key length	 Defines the length of the RSA key used: 512 bit (fast encryption and decryption) 768 bit 1024 bit (standard encryption and decryption) 2048 bit 4096 bit (slow encryption and decryption)

Request and Install Certificate (Requested Certificate)

A certificate that has been issued by a certification authority for the UTN server can be used in the UTN server.

To do this, your first create a certificate request and then send it to the certification authority. Based on the request, the certification authority then creates a certificate specifically for the UTN server. You install this certificate in the UTN server.



Important:

You can only install a requested certificate that has been issued based on the certificate request created on the UTN server.

If the files do not match, you have to request a new certificate which is based on the current certificate request. If you want to start over, you must delete the certificate request ⇒ ■78.

- 1. Start the myUTN Control Center.
- 2. Select SECURITY Certificates.
- 3. Click Certificate request.
- 4. Enter the required parameters; ⇒Table 15 🖹 75.
- 5. Click **Create a request**.

The certificate request will be created. This may take a few minutes.

- 6. Select **Upload** and save the requests in a text file.
- 7. Click OK.
- 8. Send the text file as certificate request to a certification authority. The certification authority creates the certificate and gives it to you.



Important

The certificate must be in 'base64' format.

- 9. Click Requested certificate.
- 10. Enter the password into the **Password** box.
- 11. Click Install.
- → The requested certificate is installed in the UTN server.

Installing a PKCS#12 Certificate



Important

If a PKCS#12 certificate has already been installed in the UTN server, you must first delete the certificate \Rightarrow \blacksquare 78.

- ✓ The certificate has 'base64' format.
- 1. Start the myUTN Control Center.
- Select SECURITY Certificates.
- 3. Click **PKCS#12 certificate**.
- 4. Specify the PKCS#12 certificate in the **Certificate file** box.
- 5. Enter the password.
- 6. Click Install.
- → The PKCS#12 certificate will be installed in the UTN server.

Installing an S/MIME certificate (only myUTN-80 and later)



Important:

If an S/MIME certificate has already been installed in the UTN server, you must first delete the certificate $\Rightarrow \blacksquare 78$.

- ✓ The certificate has 'pem' format.
- 1. Start the myUTN Control Center.
- 2. Select SECURITY Certificates.
- 3. Click S/MIME certificate.
- 4. Specify the S/MIME certificate in the **Certificate file** box.
- Click Install.
- → The S/MIME certificate is installed in the UTN server.

Installing a CA Certificate

- ✓ The certificate has 'base64' format.
- 1. Start the myUTN Control Center.
- 2. Select SECURITY Certificates.
- 3. Click **CA certificate**.
- 4. Specify the CA certificate in the **Certificate file** box.
- 5. Click Install.
- → The CA certificate is installed in the UTN server.

Deleting Certificates



WARNING

To establish an encrypted (HTTPS ⇒ 166) connection to the myUTN Control Center, a certificate (self-signed/CA/PKCS#12) is required. If you delete the corresponding certificate, the myUTN Control Center can no longer be reached.

In this case restart the UTN server $\Rightarrow \blacksquare 83$. The UTN server then generates a new selfsigned certificate with which a secured connection can be established.

- ✓ A certificate is installed on the UTN server.
- 1. Start the myUTN Control Center.
- 2. Select SECURITY Certificates.
- Select the certificate to be deleted via the icon Q.
 The certificate is displayed.
- 4. Click **Delete**.
- → The certificate is deleted.

6.9 How to Configure Network Authentication (IEEE 802.1X)

Authentication is the proof and verification of an identity. With it your network is protected from abuse, because only authorized devices have access.

The UTN supports authentication according to the IEEE 802.1X standard which is based on EAP (Extensible Authentication Protocol).

If you use authentication according to IEEE 802.1X in your network, the UTN server can participate:

Configuring EAP-MD5

EAP-MD5 (Message Digest #5) is a user-based authentication via a RADIUS server. First, you have to create a user (user name and password) on the RADIUS server for the UTN server. Afterwards you set up EAP-MD5 on the UTN server.

- ✓ A user account for the UTN server is set up on the RADIUS server.
- 1. Start the myUTN Control Center.
- 2. Select SECURITY Authentication.
- 3. From the Authentication method list, select MD5.
- 4. Enter the user name and the password of the user account that is set up for the UTN server on the RADIUS server.
- 5. Click Save & Restart to confirm.
- → The settings will be saved.

Configuring EAP-TLS

EAP-TLS (Transport Layer Security) is a mutual, certificate based authentication via a RADIUS server. In this method, UTN server and RADIUS server exchange certificates through an encrypted TLS connection.

Both RADIUS and UTN server require a valid, digital certificate signed by a CA. This requires a PKI (Public Key Infrastructure).



WARNING

Follow the instructions below in the given order. If you do not follow the order, the UTN server might not be reachable in the network.

In this case, reset the parameters of the UTN serve \Rightarrow \blacksquare 87.

- 1. Create a certificate request on the UTN server \Rightarrow \blacksquare 77.
- 2. Create a certificate using the certificate request and the authentication server.
- 3. Install the requested certificate on the UTN server ⇒ ₱77.
- 4. Install the root CA certificate of the certification authority that has issued the certificate of the authentication server (RADIUS) is installed in the UTN server ⇒ 18.
- 5. Start the myUTN Control Center.
- 6. Select **SECURITY Authentication**.
- 7. Select **TLS** from the **Authentication method** list.
- 8. From the list **EAP root certificate**, select the root CA certificate.
- 9. Click Save & Restart to confirm.
- \rightarrow The settings will be saved.

Configuring EAP-TTLS

In EAP-TTLS (Tunneled Transport Layer Security), a TLS-protected tunnel is used for exchanging secrets. The method consists of two phases:

- 1. Outer authentication: An encrypted TLS (Transport Layer Security) tunnel is created between UTN server and RADIUS server. To do this, the RADIUS server authenticates itself to the UTN server using a certificate that was signed by a CA.
- 2. Inner authentication: In the tunnel the authentication (via CHAP, PAP, MS-CHAP, or MS-CHAPv2) takes place.
- ✓ A user account for the UTN server is set up on the RADIUS server.
- ✓ For increased security during connection establishment (optional): The root CA certificate of the certification authority that has issued the certificate of the authentication server (RADIUS) is installed in the UTN server \Rightarrow \blacksquare 78.
- 1. Start the myUTN Control Center.
- 2. Select **SECURITY Authentication**.
- 3. Select TTLS from the Authentication method list.
- 4. Enter the user name and the password of the user account that is set up for the UTN server on the RADIUS server.
- 5. Select the settings which secure the communication in the TLS channel.
- Increase the security during connection establishment (optional):From the list EAP root certificate, select the root CA certificate.
- 7. Click Save & Restart to confirm.
- → The settings will be saved.

Configuring PEAP

With PEAP (Protected Extensible Authentication Protocol), an encrypted TLS (Transport Layer Security) tunnel is established between the UTN server and the RADIUS server. To do this, the RADIUS server authenticates itself to the UTN server using a certificate that was signed by a CA. The TLS channel is then used to establish another connection that can be protected by means of additional EAP authentication methods (e.g. MSCHAPv2).

The method is very similar to EAP-TTLS (□ 180), but other methods are used to authenticate the UTN server.

- ✓ A user account for the UTN server is set up on the RADIUS server.
- ✓ For increased security during connection establishment (optional): The root CA certificate of the certification authority that has issued the certificate of the authentication server (RADIUS) is installed in the UTN server \Rightarrow \triangleq 78.
- 1. Start the myUTN Control Center.
- 2. Select SECURITY Authentication.
- 3. Select **PEAP** from the **Authentication method** list.
- 4. Enter the user name and the password of the user account that is set up for the UTN server on the RADIUS server.
- 5. Select the settings which secure the communication in the TLS channel.
- 6. Increase the security during connection establishment (optional): From the list **EAP root certificate**, select the root CA certificate.
- Click Save & Restart to confirm.
- → The settings will be saved.

Configuring EAP-FAST

EAP-FAST (Flexible Authentication via Secure Tunneling) is a specific EAP method developed by the company Cisco.

As with EAP-TTLS ($\Rightarrow 20$) and PEAP ($\Rightarrow 20$) a secure tunnel protects data transmission. However, the server does not authenticate itself with a certificate. Instead it uses PACs (Protected Access Credentials).

- ✓ A user account for the UTN server is set up on the RADIUS server.
- Start the UTN Control Center.
- 2. Select SECURITY Authentication.
- 3. Select FAST from the Authentication method list.
- 4. Enter the user name and the password of the user account that is set up for the UTN server on the RADIUS server.
- 5. Select the settings intended to secure the communication in the channel.
- 6. Click Save & Restart to confirm.
- → The settings will be saved.

7 Maintenance

You can maintain the UTN server in the following ways:

- How to Update ⇒ 🗎84

7.1 How to Restart the UTN Server

After some parameter changes or after an update, the UTN server restarts automatically. If the UTN server is in an undefined state, you can also restart the UTN server manually.

- Restarting the UTN Server via the myUTN Control Center

 □83
- Restarting the UTN Server from the SEH Product Manager ⇒ 🗎 83
- Restarting the UTN Server via Reset Button

 □ ■83

Restarting the UTN Server via the myUTN Control Center

- 1. Start the myUTN Control Center.
- 2. Select MAINTENANCE Restart.
- 3. Click Restart.
- → The UTN server restarts.

Restarting the UTN Server from the SEH Product Manager

You can use the SEH Product Manager to restart one or more UTN servers.

- ✓ The SEH Product Manager is installed on the client ⇒ 15.
- ✓ The device is shown in the device list \Rightarrow \blacksquare 15.
- 1. Start the SEH Product Manager.
- 2. Select the UTN server(s) in the device list.
- 3. In the menu bar, select **Device Restart**. The **Restart** dialog appears.
- 4. Click Restart.
- → The UTN servers will be restarted.

Restarting the UTN Server via Reset Button

- 1. Press the restart button of the device for a short time.
- → The UTN server restarts.

7.2 How to Update

You can update your UTN server with a soft- and firmware update. New firmware/software contains new features and/or error fixes.

You can find the version number of the firmware/software installed on the UTN server on the start page of the myUTN Control Center or in the device list in the SEH Product Manager.

For current firmware/software files go to the SEH Computertechnik GmbH website:

https://www.seh-technology.com/services/downloads.html



Only the existing firmware/software is updated; settings will be preserved.



Important:

Every update file comes with a 'readme' file. Read the 'readme' file and follow its instructions.

- 1. Start the myUTN Control Center.
- 2. Select MAINTENANCE Update.
- 3. Specify the update file in the **Update file** box.
- 4. Click Install.
- \hookrightarrow The update is executed. Afterwards, the UTN server restarts.

7.3 How to Backup Your Configuration

All settings of the UTN server (exception: passwords) are saved in the file '<Default-Name>_parameters.txt'.

You can save this parameters file as backup copy to your local client. This way you can return to a stable configuration status at any time.

You can edit the parameter values in the backed up file using a text editor. Afterwards, the edited file can be loaded onto one or more UTN servers. The device(s) will then adopt the parameter values of the file.

You can find a detailed description of the parameters in the 'Parameter Lists' ⇒ 1994.

The Dongleserver myUTN-800 also has an automatic backup feature. It saves the parameter values, passwords and certificates installed on the UTN server automatically to a connected SD card. After a parameter or certificate change, the backup will be updated automatically. To transfer the settings to another UTN server, you simply insert the SD card into the other device. After a cold boot (interruption and re-establishment of the power supply), the settings will be loaded automatically.



WARNING

If the SD card is lost or stolen, your environment becomes vulnerable (certificates, passwords).

Therefore, you have to take all necessary precautions to protect the UTNserver if you use the automatic backup.

See Parameter Values

- 1. Start the myUTN Control Center.
- 2. Select MAINTENANCE Parameter backup.
- 3. Click the icon **Q**.
- → The current parameter values are displayed.

Saving the Parameter File

- 1. Start the myUTN Control Center.
- Select MAINTENANCE Parameter backup.
- 3. Click the icon <a>[
- 4. Save the '<default name>_parameters.txt' file to a local system using your browser.
- → The parameters file is backed up.

Loading the Parameters File onto a UTN Server

- 1. Start the myUTN Control Center.
- 2. Select MAINTENANCE Parameter backup.
- 3. In the Parameter file box, specify the '<default name>_parameters.txt' file.
- 4. Click Import.
- → The UTN server adopts the parameter values from the file.

Automatic Backup (myUTN-800 only)

- ✓ An SD card is connected to the UTN server.
- ✓ The SD card has the file system FAT12, FAT16 or FAT32.
- ✓ 1 MB of free space is available on the SD card.

(These requirements are fulfilled ex factory.)

- 1. Start the myUTN Control Center.
- 2. Select MAINTENANCE SD card.
- 3. Tick Parameter backup.
- 4. Click Save.
- \rightarrow The settings will be saved.

7.4 How to Reset Parameters to their Default Values

You can reset the UTN to its default values, e.g. if you want to install the UTN server in a different network. All settings will be set to factory settings. Installed certificates will not be deleted.



Important:

The connection to the myUTN Control Center my be interrupted if the IP address of the UTN server changes with the reset.

If required, determine the new IP address \Rightarrow \(\begin{array}{c} \Begin{array}{c} \Begin{a

You can change the settings either via remote access (myUTN Control Center and SEH Product Manager) or via the reset button on the UTN server.



If you lost the password for the UTN Control Center, you can reset the UTN server via the reset button. You do not need a password to do so.



WARNING

myUTN-800: Remove the SD card from the UTN server before resetting the parameters. Otherwise, the UTN server will adopt the parameter values stored on it (automatic backup $\Rightarrow \blacksquare 85$).

- Restarting the UTN Server via Reset Button ⇒ 🗎83

Resetting Parameters via myUTN Control Center

- 1. Start the myUTN Control Center.
- Select MAINTENANCE Default settings.
- 3. Click **Default settings**.
 - A security query appears.
- 4. Confirm the security query.
- → The parameters are reset.

Resetting Parameters from the SEH Product Manager

The SEH Product Manager allows you to reset one or more UTN servers.

- ✓ The SEH Product Manager is installed on the client

 □ 15.
- ✓ The device is shown in the device list \Rightarrow 15.
- 1. Start the SEH Product Manager.
- 2. In the device list, select the UTN server.
- 3. In the menu bar, select **Device Reset**. The **Reset** dialog appears.
- 4. Click **Reset**.
- → The parameters are reset.

Resetting Parameters via Reset Button

With the reset button you can reset the UTN server's parameter values to their default settings.

1. Press the reset button for 5 seconds.

The UTN server restarts.

(The Dongleserver myUTN-800 beeps when it restarts.)

☐ The parameters are reset.

8 Appendix

The appendix contains a glossary, the troubleshooting and the lists of this document.

- Troubleshooting ⇒ 🖺 91

8.1 Glossary

Compound USB device

A compound USB device consists of a hub and one or more USB devices that are all integrated into a single housing. Dongles are often compound USB devices.

If a compound USB device is connected to a USB port of the UTN server, all integrated USB devices will be shown in the myUTN Control Center and in the selection list of the SEH UTN Manager. When the port connection is activated, all displayed USB devices will be connected to the user's client. It is not possible to activate a port connection to only one of the USB devices.

Default name

Device name which is assigned by the manufacturer and cannot be changed. If you are using several identical UTN servers, you can identify a certain device with it.

The default name of the UTN server is made up of the two letters 'IC' and the device number. The device number consists of the last six numbers of the hardware address.

You can see the default name in the myUTN Control Center or SEH Product Manager.

Hardware address

The hardware address (often also referred to as Ethernet address, physical address or MAC address) is the world-wide unique identifier of a network interface. If you are using several identical UTN servers, you can identify a certain device with it.

The manufacturer has defines the address in the hardware of the device. It consists of 12 hexadecimal numbers. The first six numbers represent the manufacturer, while the last six numbers identify the individual device. The characters for separating the numbers depend on the platform. In macOS ':' are used.

Hardware address



Manufacturer ID Device number

You can see the hardware address on the housing, in the SEH UTN Manager or in the SEH Product Manager.

myUTN Control Center

The myUTN Control Center is the user interface of the UTN server. The UTN server can be configured and monitored via the myUTN Control Center.

You access the myUTN Control Center with an Internet browser (e.g. Safari).

More information \Rightarrow \blacksquare 9.

SEH UTN Manager

The 'SEH UTN Manager' is a software tool developed by SEH Computertechnik GmbH . The SEH UTN Manager is used to establish and manage connections to the USB devices connected to the UTN servers.

More information $\Rightarrow 11$.

SEH Product Manager

The SEH Product Manager is a software tool developed by SEH Computertechnik GmbH for the administration and management of SEH Computertechnik GmbH devices. Depending on the device, various actions can be performed.

More information $\Rightarrow 15$.

8.2 Troubleshooting

In this chapter, a few problems are described, explained and fixed.

Problem

- myUTN Control Center: You Lost User Name and/or Password

 □92
- SEH UTN Manager: USB Devices Are Not Shown ⇒ 🗎 93
- SEH UTN Manager: Features Are Not Available or Deactivated

 □93

Fix

UTN Server: BIOS Mode

The UTN server switches to the BIOS mode if the firmware works but the software is faulty. This may happen in the case of an incorrect software update, for example.



The LEDs indicate the BIOS mode:

- Status LED is off
- Activity LED blinks periodically

In addition, the UTN server appears in the device list of the SEH Product Manager under the filter **none** with the info **BIOS mode**.



WARNING

The UTN server is not operational if it is in BIOS mode.

Follow the instructions below to remove the error.

To switch the UTN server from BIOS to normal mode, you have to first assign a temporary IP address to the device and then load software onto it. After the software update the UTN server switches to normal mode and will be assigned a new, permanent IP address.

- 1. Start the SEH Product Manager.
- 2. In the device list, select the UTN server. (You find the UTN-Server under the filter **none** with the info **BIOS Mode**.)
- 3. Right-click on the UTN server to open the context menu.
- 4. In the context menu, select **Set IP address**.
- 5. Assign an IP address to the UTN server by entering it in the mask and confirming with OK. The IP address will be saved.
- 6. Update the UTN server's software ⇒

 84. The software is saved in the UTN server.
- → The UTN server switches to normal mode.

UTN Server: Connection Cannot Be Established

You find the UTN server in the network and can reach it via TCP/IP connection. However, a connection via the SEH UTN Manager cannot be established.

Possible causes:

- A firewall or some other security software blocks communication.
 Add the UTN port respectively UTN SSL port as exception to your firewall or security software. Refer to the documentation of your firewall or security software on how to do this.
- The port numbers in the SEH UTN Manager and on the UTN server are not identical: You changed the port number while SNMPv1 is deactivated, so that the change cannot be communicated to the SEH UTN Manager
 ⇒ ■39.

myUTN Control Center: Connection Cannot Be Established

Eliminate possible error sources. Check:

- · the cabling connections,
- the proxy settings of your browser (refer to the documentation of your browser for more information)

If you still cannot establish any connection, the following safety mechanisms might be the cause:

- Access is protected via SSL/TLS (HTTPS) ⇒ 166.



WARNING

If you reset the device, all settings are lost and the IP address might change. If required, determine the new IP address \Rightarrow \blacksquare 21.

myUTN Control Center: You Lost User Name and/or Password

If the access to the myUTN Control Center is protected but you have lost the access credentials, you can reset the UTN server to its default values. After the reset you can access the myUTN Control Center again, as it is not protected by default.



WARNING

If you reset the device, all settings are lost and the IP address might change. If required, determine the new IP address \Rightarrow \blacksquare 21.

SEH UTN Manager: A Connection to the USB device Cannot Be Established

Possible causes:

- The driver software for the USB device is not installed on the client.
 Install the driver software for your USB device. Refer to the documentation of your USB device on how to do this.

SEH UTN Manager: USB Devices Are Not Shown

Eliminate possible error sources: Check if the USB device is connected to the UTN server.

If the USB device is still not displayed, the following issues might be the cause:

- Several compound USB devices (⇒ 190) are connected to the UTN server. Each integrated USB device occupies a virtual USB port of the UTN server. The number of these virtual USB ports is limited. If the limit is reached, no further USB devices can be used on this UTN server (⇒ 148).

SEH UTN Manager: A USB Device Is Connected to the USB Port, but several USB Devices Are Displayed

Possible causes:

- A USB hub is connected to the USB port of the UTN server.
- The connected USB device is a compound USB device (⇒ 🖺 90). It consists of a hub and one or more USB devices that are all integrated into a single housing. When the connection to the USB port is established, all displayed USB devices will be connected to the user's client and can be used.

SEH UTN Manager: Features Are Not Available or Deactivated

Possible causes:

- Your client user account does not have the required administrative rights. This restricts user rights in the SEH UTN Manager as well. More details can be found in chapter 'SEH UTN Manager − Feature Overview' ⇒ ■118. Start the SEH UTN Manager as administrator. Refer to the documentation of your operating system on how to do this.
- A function is not supported by the connected USB device (e.g. the 'Print-On-Demand' feature is not supported by a hard disk).

8.3 Parameter Lists

The UTN servers stores its configuration as parameters. You directly use parameters for:

- Administration via email ⇒ 18

The following tables list all parameters and their values so that you can use them in the actions named above.

- Table 19 'Parameter list SNMP' ⇒ 🖺 97
- Table 21 'Parameter list POP3 (only myUTN-80 and later)'

 □ □ 99

- Table 24 'Parameter list WLAN (myUTN-55 only)' ⇒ 🖺 103
- Table 25 'Parameter list Date/Time' ⇒ 105

- Table 28 'Parameter list UTN port' ⇒ 106

Table 16: Parameter list – IPv4

Parameters	Value	Default	Description
ip_addr [IP address]	valid IP address	169.254.0.0/ 16	IP address of the UTN server.
ip_mask	valid IP address	255.255.0.0	Subnet mask of the UTN server.
[Subnet mask]			Subnet masks are used to logically partition big networks into subnetworks. If you are using the UTN server in a subnetwork, it requires the subnet mask of the subnetwork.
ip_gate [Gateway]	valid IP address	0.0.0.0	IP address of the network's standard gateway which the UTN server uses.
,-			With a gateway, you can address IP addresses from other networks.
ip_dhcp	on/off	on	Enables/disables the DHCP protocol.
[DHCP]			If DHCP is enabled in your network, IP address assignment is automatic.
ip_bootp	on/off	on	Enables/disables the BOOTP protocol.
[BOOTP]			If BOOTP is enabled in your network, IP address assignment is automatic.
ip_auto	on/off	on	Enables/disables the ARP/PING protocol.
[ARP/PING]			You can use the commands ARP and PING to change an IP address which was assigned via Zeroconf. The implementation depends on your system; read the documentation of your operating system.



We recommend that you deactivate **DHCP**, **BOOTP** and **ARP/PING** as soon as the UTN server has received its IP address.

Table 17: Parameter list – IPv6

Parameters	Value	Default	Description
ipv6 [IPv6]	on/off	on	Enables/disables the IPv6 functionality of the UTN server.
ipv6_auto [Automatic configuration]	on/off	on	Enables/disables the automatic assignment of the IPv6 address to the UTN server.
ipv6_addr [IPv6 address]	n:n:n:n:n:n:n	::	Defines an IPv6 unicast address in the format n:n:n:n:n:n:n which is manually assigned to the UTN server.
			 Every 'n' represents the hexadecimal value of one of the eight 16 bit elements of the ad- dress.
			 Leading zeros can be omitted.
			 An IPv6 address may be entered or displayed using a shortened version when successive fields contain all zeros (0). In this case, two colons (::) are used.
ipv6_gate [Router]	n:n:n:n:n:n:n	::	Manually defines a static router to which the UTN server sends its requests.
ipv6_plen [Prefix length]	0–64 [1–2 characters;	64	Defines the length of the subnet prefix for the IPv6 address. The value 64 is preset.
J J	0-9]		Address ranges (e.g. your network) are specified with prefixes. To do this, the prefix length (number of bits used) is added to the IPv6 address as a decimal number and the decimal number is preceded by '/'.

Table 18: Parameter list – DNS

Parameters	Value	Default	Description
dns [DNS]	on/off	on	Enables/disables the name resolution via a DNS server.
dns_domain [Domain name]	max. 255 characters [a-z, A-Z, 0-9]	[blank]	Defines the IP address of the primary DNS server.
dns_primary [Primary DNS server]	valid IP address	0.0.0.0	Defines the IP address of the secondary DNS server.
,			The secondary DNS server is used if the first one is not available.
dns_secondary [Secondary DNS server]	valid IP address	0.0.0.0	Defines the domain name of an existing DNS server.

Table 19: Parameter list – SNMP

Parameters	Value	Default	Description
snmpv1 [SNMPv1]	on/off	on	Enables/disables SNMPv1.
snmpv1_ronly [Read-only]	on/off	off	Enables/disables the write protection for the community.
snmpv1_community [Community]	max. 64 characters [a–z, A–Z, 0–9]	public	SNMP community name Enter the name as it is defined in the monitoring station. Important: The default name is 'public'. This name is commonly used for read/write communities. We recommend to change it as soon as possible to increase security.
snmpv3 [SNMPv3]	on/off	on	Enables/disables SNMPv3.
any_hash [Hash]	md5 sha	md5	Specifies the hash algorithm for SNMP user group 1.
any_rights [Access rights]	readonly readwrite	readonly	Defines the access rights of the SNMP user group 1 = [none]
any_cipher [Encryption]	aes des		Defines the encryption method of the SNMP user group 1 = [none]
admin_hash [Hash]	md5 sha	md5	Specifies the hash algorithm for SNMP user group 2.
admin_rights [Access rights]	 readonly readwrite	readwrite	Defines the access rights of the SNMP user group 2 = [none]
admin_cipher [Encryption]	aes des		Defines the encryption method of the SNMP user group 2.



Important:
The UTN server user accounts are also used as SNMP user accounts ⇒

28. Consider this when setting up user accounts.

Table 20: Parameter list – Bonjour

Parameters	Value	Default	Description
bonjour [Bonjour]	on/off	on	Enables/disables Bonjour.
bonjour_name [Bonjour name]	max. 64 characters [a–z, A–Z, 0–9]	[Default name]	Defines the Bonjour name of the myUTN server. The myUTN server uses this name to announce its Bonjour services. If no Bonjour name is entered, a default name will be used (device name@ICxxxxxxx).

Table 21: Parameter list – POP3 (only myUTN-80 and later)

Parameters	Value	Default	Description
pop3 [POP3]	on/off	off	Enables/disables the POP3 functionality.
pop3_srv [Server name]	max. 128 characters	[blank]	Defines the POP3 server via its IP address or host name.
			A host name can only be used if a DNS server was configured beforehand.
pop3_port [Server port]	1–65535 [1–5 characters;	110	Defines the port which the UTN server uses to receive emails.
	0–9]		The default port number for POP3 is 110. The default port number for SSL/TLS (parameter 'POP3 – Security' ⇒ 🖺 30) is 995. If required, read the documentation of your POP3 server.
pop3_sec	0–2	0	Defines the authentication method to be used:
[Security]	[1 character; 0–2]		 APOP: encrypts the password when logging on to the POP3 server.
			 SSL/TLS: encrypts the entire communication with the POP3 server. The encryption strength is defined via the encryption proto- col and level ⇒
			0 = no security
			1 = APOP
			2 = SSL/TLS
pop3_poll [Check mail every]	1–10080 [1–5 characters; 0–9]	2	Defines the time interval (in minutes) which with the POP3 server is checked for emails.
pop3_limit	0–4096	4096	Defines the maximum email size (in Kbyte) to be
[Ignore mail exceed-ing]	[1–4 characters; 0–9]		accepted by the UTN server. 0 = unlimited
pop3_usr [User name]	max. 128 characters	[blank]	Defines the user name used by the UTN server to log on to the POP3 server.
pop3_pwd [Password]	max. 128 characters	[blank]	Defines the user password used by the UTN server to log on to the POP3 server.

Table 22: Parameter list – SMTP (only myUTN-80 and later)

Parameters	Value	Default	Description
smtp_srv [Server name]	max. 128 characters	[blank]	Defines the SMTP server via the IP address or the host name.
			A host name can only be used if a DNS server was configured beforehand.
smtp_port [Server port]	1–65535 [1–5 characters;	25	Defines the port which the UTN server and SMTP server use to communicate.
	0–9]		The default port number for SMTP is 25. For SSL/TLS (parameter 'SMTP – SSL/TLS' ⇒ 🖹 31), SMTP servers use by default port 587 (STARTSSL/STARTTLS) or the old port 465 (SMTPS). If required, read the documentation of your SMTP server.
smtp_ssl	on/off	off	Enables/disables SSL/TLS.
[SSL/TLS]			SSL/TLS encrypts the communication from the UTN to the SMTP server. The encryption strength is defined via the encryption protocol and level ⇒ 67.
smtp_sender [Sender name]	max. 128 characters	[blank]	Defines the email address used by the UTN server to send emails.
			Very often the name of the sender and the email account user name are identical.
smtp_auth [Login]	on/off	off	Enables/disables SNMP authentication (SMTP AUTH). To send emails, the UTN sends its user name and password to the SMTP server to authenticate itself. Enter user name (parameter 'SMTP – User name' ⇒ ■31) and password (parameter 'SMTP – Password' ⇒ ■31).
			Some SMTP servers require SMTP authentication to prevent fraudulent use (spam).
smtp_usr [User name]	max. 128 characters	[blank]	Defines the user name used by the UTN server to log on to the SMTP server.
smtp_pwd [Password]	max. 128 characters	[blank]	Defines the password used by the UTN server to log on to the SMTP server.
smtp_sign [Security (S/MIME)]	on/off	off	Enables/disables the email security standard S/MIME (Secure/Multipurpose Internet Mail Extensions). S/MIME is used to sign (parameter 'SMTP – Signing emails' ⇒ ■31) or encrypt (parameter 'SMTP – Full encryption' ⇒ ■31) emails. Enable the desired feature (if desired with 'SMTP – Attach public key' ⇒ ■31).
smtp_attpkey	on/off	on	Sends the public key together with the email.
[Attach public key]			Many email clients require the key to display the email.

Parameters	Value	Default	Description
smtp_encrypt [Full encryption] [Signing emails]	on/off	off	on = Activates the encryption of emails. Only the intended recipient can open and read the encrypted email. An S/MIME certificate is required for the encryption
			off = Activates the signing of emails. The recipient can use the signature to check the sender's identity. This proves, that the email has not been altered. An S/MIME certificate is required for the signing of emails

Table 23: Parameter list – IPv4-VLAN (only myUTN-80 and later)

Parameters	Value	Default	Description
ip4vlan_mgmt [IPv4 management	on/off	off	Enables/disables the forwarding of IPv4 management VLAN data.
VLAN]			If this option is enabled, SNMP is only available in the IPv4 management VLAN.
ip4vlan_mgmt_id [VLAN-ID]	0–4096 [1–4 characters; 0–9]	0	ID for the identification of the IPv4 management VLAN.
ip4vlan_mgmt_any [Access from any VLAN]	on/off	off	Enables/disables the administrative access (web) to the UTN server via IPv4 client VLANs. If this option is enabled, the UTN server can be administrated via all VLANs.
ip4vlan_mgmt_untag [Access via LAN (untagged)]	on/off	on	Enables/disables the administrative access to the UTN server via IPv4 packets without tag. If this option is disabled, the UTN server can only be administrated via VLANs.
ipv4vlan_on_1 ~ ipv4vlan_on_20 [VLAN]	on/off	off	Enables/disables the forwarding of IPv4 client VLAN data.
ipv4vlan_addr_1 ~ ipv4vlan_addr_20 [IP address]	valid IP address	192.168.0.0	IP address of the UTN server within the IPv4 client VLAN.
ipv4vlan_mask_1 ~ ipv4vlan_mask_20 [Subnet mask]	valid IP address	255.255.255. 0	Subnet mask of the UTN server within the IPv4 client VLAN.
ip4vlan_gate_1 ~	valid IP address	0.0.0.0	IP gateway address in the IPv4 management VLAN.
ip4vlan_gate_20 [Gateway]			With a gateway, you can address IP addresses from other networks.
ipv4vlan_id_1 ~ ipv4vlan_id_20 [VLAN-ID]	0–4096 [1–4 characters; 0–9]	0	ID for the identification of the IPv4 client VLAN.
utn_2vlan_1 ~ utn_2vlan_20 [Allocate VLAN]	0–9 [1 character; 0–9]	0	Allocates a VLAN to the USB port. 0 = every 1 = VLAN 1 2 = VLAN 2 etc. 9 = none

Table 24: Parameter list – WLAN (myUTN-55 only)

Table 24: Parameter list – WLAN (myUTN-55 only)				
Parameters	Value	Default	Description	
wifi_mode [Mode]	adhoc infra	adhoc	 Defines the communication mode (network infrastructure): Ad hoc: Your WLAN is a decentralized adhoc-network in which devices communicate directly with each other (peer-to-peer). Infrastructure: Your WLAN is an infrastructure network with an access point/router as centrals communication hub. The access point is connected to the fixed network with a cable. 	
wifi_name [Network name (SSID)]	max. 64 characters [a-z, A-Z, 0-9, _, -]	SEH	Enter your WLAN's network name, also known as SSID (Service Set Identifier).	
wifi_channel [Channel]	1–14 [1–2 characters; 0–9]	3	Enter your WLAN's channel (frequency range). (Ad hoc mode only) WARNING Only use WLAN channels authorized for your country! The UTN is an international product which supports a number of channels. Channels are statutorily regulated by national authorities. So the UTN server might support channels which are forbidden to use in your country. Inform yourself about national regulations.	
wifi_encrypt [Encryption method]	WepOpen WepShared TKIP AES TKIP2 AES2 AESTKIP AESTKIP2 AUTO		Select the encryption method that protects your WLAN = none WepOpen = WEP (Open System) WepShared = WEP (Shared Key) TKIP = WPA (TKIP) AES = WPA (AES) TKIP2 = WPA2 (TKIP) AES2 = WPA2 (AES) AESTKIP = WPA (AES/TKIP) AESTKIP2 = WPA2 (AES/TKIP) Auto = WPA (automatic)	

Parameters	Value	Default	Description
wifi_keyid [Use WEP key]	0–4 [1 character; 0–4]	0	Defines the WEP key to be used. 0 = no key 1 = key 1 2 = key 2 3 = key 3 4 = key 4
wifi_wkey1 ~	Depends on the key type.	[blank]	Defines the WEP keys. Four WEP keys are available.
wifi_wkey4 [Key 1–4]	Number of characters: 64 ASCII = 5 64 HEX = 10 128 ASCII = 13 128 HEX = 26 Character set: HEX = 0-9, a-f, A-F ASCII = 0-9, a-z, A-Z		Important: We recommend to use hexadecimal keys for WEP. Some access points/routers convert WEP keys in ASCII format to hexadecimal format. In this case, the ASCII key on the UTN server and the hexadecimal key on the access point/router do not match.
wifi_psk [PSK]	8–63 characters	[blank]	Defines the Pre Shared Key (PSK) for Wi-Fi Protected Access (WPA).
wifi_roaming [Roaming]	on/off	off	Enables/disables roaming (switching from one access point/router to another): If your WLAN covers a widespread area with several access points/routers (with identical settings) and the UTN server changes position, the UTN server will automatically switch to the better signal without loss of connection if roaming is activated. (Infrastructure mode only)

Table 25: Parameter list – Date/Time

Parameters	Value	Default	Description
ntp [Date/Time]	on/off	on	Enables/disables the use of a time server (SNTP).
ntp_server [Time server]	max. 64 characters [a–z, A–Z, 0–9]	pool.ntp.org	Defines a time server via the IP address or the host name. The host name can only be used if a DNS server was configured beforehand. Important: If your network in configured accordingly, the UTN server receives the time server settings automatically via DHCP. A time server assigned in such a manner always takes precedence over manual settings.
ntp_tzone [Time zone]	UTC, GMT, EST, EDT, CST, CDT, MST, MDT, PST, PDT, etc.	CET/CEST (EU)	Compensates Coordinated Universal Time (UTC) for location and national particularities (daylight saving time etc.).

Table 26: Parameter list – Description

Parameters	Value	Default	Description
sys_name [Host name]	max. 64 characters [a-z, A-Z, 0-9]	[blank]	Device name as alternative to IP address. With a name you can identify the UTN server more easily in the network, e.g. if you are using several UTN servers.
			Is displayed in the myUTN Control Center, SEH Product Manager and SEH UTN Manager.
sys_descr	max. 64 characters	[blank]	Device description, e.g. location or department.
[Description]	[a-z, A-Z, 0-9]		Is displayed in the myUTN Control Center, SEH Product Manager and SEH UTN Manager.
sys_contact	max. 64 characters	[blank]	Contact person, e.g. device administrator.
[Contact person]	[a-z, A-Z, 0-9]		Is displayed in the myUTN Control Center.

Table 27: Parameter list – USB port

Parameters	Value	Default	Description
utn_tag_1 ~ utn_tag_20 [Port name]	max. 32 characters [a–z, A–Z, 0–9]	[blank]	Freely definable name of the USB port.
utn_poff_1 ~ utn_poff_20 [Port]	on/off	off	Disables/enables the power supply for the USB port (i.e. the USB device connected to the port). off = power on on = power off

Table 28: Parameter list – UTN port

Parameters	Value	Default	Description
utn_port [UTN port]	1–9200 [1–4 characters; 0–9]	9200	Defines the number of the UTN port (for unencrypted connections). WARNING The UTN port must not be blocked by security software (firewall).
utn_sslport [UTN SSL port]	1–9443 [1–4 characters; 0–9]	9443	Defines the number of the UTN SSL port (for encrypted connections). WARNING The UTN SSL port must not be blocked by security software (firewall).

Table 29: Parameter list – Notification (only myUTN-80 and later)

Parameters	Value	Default	Description
mailto_1 mailto_2 [Email address]	valid email address [max. 64 characters]	[blank]	Email address of the recipient for notifications.
noti_stat_1 noti_stat_2 [Status email]	on/off	off	Enables/disables the periodical sending of a status email to recipient 1 or 2.
notistat_d [Interval]	al su mo tu we th fr sa	al	Defines the day (the interval) on which a status email is sent. al = daily su= Sunday mo= Monday tu= Tuesday we= Wednesday th= Thursday fr = Friday sa= Saturday
notistat_h [hh]	0–23 [1–2 characters; 0–9]	0	Specifies the time (hour) at which a status email is sent. 1 = 1. hour 2 = 2. hour 3 = 3. hour etc.
notistat_tm [mm]	0–5 [1 character; 0–5]	0	Specifies the time (minute) at which a status email is sent. 0 = 00 min 1 = 10 min 2 = 20 min 3 = 30 min 4 = 40 min 5 = 50 min
noti_dev_1 noti_dev_2 [Send email if USB devices are connected or disconnected]	on/off	off	Enables/disables the sending of emails after a USB device was connected to/removed from the UTN server.
noti_act_1 noti_act_2 [Send email if USB port is activated or deacti- vated]	on/off	off	Enables/disables the sending of emails after a USB port (i.e. the connection to the connected USB device) was activated/deactivated.

Parameters	Value	Default	Description
noti_pup_1 noti_pup_2 [Send email if UTN server is restarted]	on/off	off	Enables/disables the sending of emails when the UTN server restarts.
noti_pwr_1 noti_pwr_2 [Send email if power supply is interrupted or established]	on/off	off	Enables/disables the sending of emails when one of the two power supplies of the UTN server is interrupted or established. (myUTN-800 only)
noti_lnk_1 noti_lnk_2 [Send email if network connection is inter- rupted or established]	on/off	off	Enables/disables the sending of emails when one of the two network connection of the UTN server is interrupted or established. (myUTN-800 only)
noti_sdinout_1 noti_sdinout_2 [Send email if SD card is connected or disconnected]	on/off	off	Enables/disables the sending of emails after an SD card was connected to/removed from the UTN server. (myUTN-800 only)
noti_sdunusable_1 noti_sdunusable_2 [Send email if SD card cannot be used]	on/off	off	Enables/disables the sending of emails if the SD card is unusable. (myUTN-800 only)
trapto_1 trapto_2 [Address]	valid IP address	0.0.0.0	SNMP trap address of the recipient.
trapcommu_1 trapcommu_2 [Community]	max. 64 characters [a-z, A-Z, 0-9]	public	SNMP trap community of the recipient.
trapdev [Send trap if USB devices are connected or disconnected]	on/off	off	Enables/disables the sending of SNMP traps after a USB device was connected to/removed from the UTN server.
trapact [Send trap if USB ports are activated or deacti- vated]	on/off	off	Enables/disables the sending of SNMP traps after a USB port (i.e. the connection to the connected USB device) was activated/deactivated.
trappup [Send trap if UTN server is restarted]	on/off	off	Enables/disables the sending of SNMP traps when the UTN server is restarted.

Parameters	Value	Default	Description
trap_pwr [Send trap if power supply is interrupted or established]	on/off	off	Enables/disables the sending of SNMP traps when one of the two power supplies of the UTN server is interrupted or established. (myUTN-800 only)
trap_lnk [Send trap if network connection is interrupted or established]	on/off	off	Enables/disables the sending of SNMP traps when one of the two network connections of the UTN server is interrupted or established. (myUTN-800 only)
trap_sdinout [Send trap if SD card is connected or disconnected]	on/off	off	Enables/disables the sending of SNMP traps after an SD card was connected to/removed from the UTN server. (myUTN-800 only)
trap_sdunusable [Send trap if SD card cannot be used]	on/off	off	Enables/disables the sending of SNMP traps if the SD card is unusable. (myUTN-800 only)

Table 30: Parameter list – Display (myUTN-800 only)

Parameters	Value	Default	Description
dis_def [Identifier (display panel)]	1–2 characters [A–Z, 0–9; E+digit is not permitted because this combination is used for errors ⇒ 🖺 43.]	SD	Defines the name (ID) shown in the display panel on the front side of the UTN server.
dis_pwr [Display error if only one power supply pro- vides power]	on/off	on	Enables/disables the display of error in the display panel if the UTN server only is supplied by one of the two power supplies. Errors are displayed in codes
disp_sdc [Display SD card errors]	on/off	on	Enables/disables the display of error messages in the display panel if no SD card is inserted into the UTN server or if the SD card cannot be used. Errors are displayed in codes
disp_Ink [Display error if only one network connection is established]	on/off	on	Enables/disables the display of error messages in the display panel if only one of the two network connections of the UTN server is established. Errors are displayed in codes

Table 31: Parameter list – Acoustic signals (myUTN-800 only)

Parameters	Value	Default	Description
beepPwr [Only one power sup- ply provides power]	on/off	off	Enables/disables the acoustic signal that sounds if the UTN server only is supplied by one of the two power supply.
beepSDc [SD card error]	on/off	off	Enables/disables the acoustic signal that sounds if no SD card is inserted into the UTN server or if the SD card cannot be used.
beepLnk [Only one network connection is estab- lished]	on/off	off	Enables/disables the acoustic signal that sounds if only one of the two network connections of the UTN server is established.

Table 32: Parameter list – SSL/TLS connections

	Default	Description
any sslv3 tls10 tls11 tls12	any	Defines the encryption protocol for SSL/TLS connections. any = at will (automatic negotiation) sslv3 = SSL 3.0 tls10 = TLS 1.0 tls11 = TLS 1.1 tls12 = TLS 1.2 WARNING Current browsers do not support low security settings. If you use SSL with a current browser and the setting HTTPS only for access to the myUTN Control Center (□ 166), a connection cannot be established. Use TLS (and not SSL).
1–4 [1 character; 1–4]	4	Defines the encryption level for SSL/TLS connections. 1 = low 2 = medium 3 = high 4 = any (automatic negotiation) WARNING Current browsers do not support cipher suites from the Low level. If you use Low with a current browser and the setting HTTPS only for access to the myUTN Control Center (□ ■66), a connection cannot be established. Use an encryption level as high as possible. WARNING The SEH UTN Manager does not support the encryption level Low. If you set up Low in combination with an encrypted USB connection, a connection cannot be estab-
	sslv3 tls10 tls11 tls12	sslv3 tls10 tls11 tls12

Table 33: Parameter list – myUTN Control Center security

Parameters	Value	Default	Description
http_allowed [Connection]	on/off	on	Defines the connection type (HTTP/HTTPS) to be used for connecting to the myUTN Control Center.
			on = HTTP/HTTPS
			off = HTTPS only The encryption strength is defined via the
			encryption protocol and level ⇒ \(\begin{align*} \text{\$\ext{\$\text{\$\exitting{\$\text{\$\exititt{\$\text{\$\text{\$\text{\$\text{\$\exititt{\$\text{\$\exititt{\$\exititt{\$\text{\$\}\$}}}\$}}}}}}}}}}}}}}}}}}}}}}}}}}}}}}
			Current browsers do not support low security settings. With them a connection cannot be established.
			Do <u>not</u> use the following combination: Encryption protocol HTTPS and encryption level Low .
			When the connection is estab- lished, the identity of the UTN
			server is verified. For that, the client asks for the certificate via the browser (⇒
sessKeys [Restrict Control Center access]	on/off	off	Enables/disables the myUTN Control Center user accounts. If they are enabled, a login screen is displayed when opening the myUTN Control Center.
			Important: Define user accounts (user names and passwords).
admin_name [Administrator – User	max. 64 characters [a-z, A-Z, 0-9]	admin	Defines the user name for the administrator user account.
name]	[a 2,71 2,6 3]		Important: Also is the user name of the SNMPv3 admin account ⇒ 28.
admin_pwd [Administrator – Pass-	8–64 characters [a–z, A–Z, 0–9]	administrator	Defines the password for the administrator user account.
word]	,,		Important: Also is the password of the SNMPv3 admin account ⇒ 28.
any_name [Read-only user – User	max. 64 characters [a-z, A-Z, 0-9]	anonymous	Defines the user name for the read-only user account.
name]			Important: Also is the user name of the SNMPv3 user account ⇒

Parameters	Value	Default	Description
any_pwd [Read-only user – Pass- word]	max. 64 characters [a–z, A–Z, 0–9]	[blank]	Defines the password for the read-only user account. Important: Also is the password of the SNMPv3
sessKeyUList [Login screen displays]	on/off	on	user account ⇒ 128. Defines the type of login screen. on= Shows a user list, only password must be entered off= neutral login mask, user name and password must be entered
sessKeyTimer [Session timeout]	on/off	on	Enables/disables the session timeout.
sessKeyTimeout [Session timeout]	120–3600 [3–4 characters; 0–9]	600	Time in seconds after which the timeout is to be effective.

Table 34: Parameter list – TCP port access

Table 34: Parameter list – TCP port access			
Parameters	Value	Default	Description
protection [Port access control]	on/off	off	Enables/disables the blocking of selected ports and thus connections to the UTN server.
protection_level	protec_utn	protec_utn	Specifies the port types to be blocked:
[Security level]	protec_tcp		protec_utn= UTN access (UTN ports)
	protec_all		protec_tcp= TCP access (TCP ports: HTTP/ HTTPS/UTN)
			protec_all = all ports (IP ports)
<pre>ip_filter_on_1 ~ ip_filter_on_8 [IP address]</pre>	on/off	off	Enables/disables an exception from the port locking.
ip_filter_1	valid IP address	[blank]	Defines networks elements that are excluded from port blocking via their IP address.
ip_filter_8			Important:
[IP address]			The use of wildcards (*) allows you to define subnetworks.
hw_filter_on_1 ~ hw_filter_on_8 [MAC address]	on/off	off	Enables/disables an exception from the port locking.
hw_filter_1 ~ hw_filter_8	valid hardware address	00:00:00:00:0 0:00	Defines elements that are excluded from port locking using the MAC address (hardware address).
[MAC address]			Important:
[ivii le dadi ess]			MAC addresses are not delivered through routers!
protection_test [Test mode]	on/off	on	Enables/disables the test mode. WARNING
[The test mode is active by default so that you can test your settings without locking yourself out. Your settings will be active until the UTN is restarted, afterwards access is no longer restricted. After you have successfully tested your settings, you have to deactivate the test mode so that access control is permanent.

Table 35: Parameter list – USB connection encryption

Parameters	Value	Default	Description
utn_sec_1 ~ utn_sec_20 [USB port]	on/off	off	Enables/disables the SSL/TLS encryption for the connection between USB port (i.e. USB device) and client. Important: Only payload will be encrypted. Control and log data will be transmitted without encryption.

Table 36: Parameter list – USB device type blocking

Parameters	Value	Default	Description
utn_hid [Disable input devices (HID class)]	on/off	on	Enables/disables the blocking of input devices (HID – human interface devices). on = no blocking off = blocking

Table 37: Parameter list – IPv4-VLAN (only myUTN-80 and later)

Parameters	Value	Default	Description
utn_accctrt_1 ~ utn_accctrt_20 [Method]	ids key keyids		Defines the method(s) for limiting the access and use of the USB port and the connected USB device. = no protection ids = device assignment key = port key control keyids = device assignment and key control
utn_keyval_1 ~ utn_keyval_20 [Key]	max. 64 characters [a–z, A–Z, 0–9]	[blank]	Defines the key for the USB port and the connected USB device when port key control is used.
utn_vendprodlDs_1 ~ utn_vendprodlDs_20			Defines the VID (Vendor ID) and PID (Product ID) of the USB device that is assigned to the USB port via the device assignment.
[USB device]			Often VID and PID of a USB device are unknown. We recommend configuration via the myUTN Control Center because VID and PID will be automatically determined and entered with this method.

Table 38: Parameter list – Authentication

Parameters	Value	Default	Description
auth_typ [Authentication method]	 MD5 TLS TTLS PEAP FAST		Defines the authentication method used in your network in which the UTN server is to participate. = none MD5= EAP-MD5 TLS = EAP-TLS TTLS= EAP-TLS PEAP= PEAP FAST= EAP-FAST
auth_name [User name]	max. 64 characters [a–z, A–Z, 0–9]	[blank]	Defines the user name with which the UTN server is set up on the RADIUS server for the EAP authentication methods MD5, TTLS, PEAP, and FAST.
auth_pwd [Password]	max. 64 characters [a–z, A–Z, 0–9]	[blank]	Defines the password with which the UTN server is set up on the RADIUS server for the EAP authentication methods MD5, TTLS, PEAP, and FAST.
auth_intern [Inner authentication]	PAP CHAP MSCHAP2 EMD5 ETLS		Defines the kind of inner authentication for the EAP authentication methods TTLS, PEAP, and FAST. = none PAP = PAP CHAP = CHAP MSCHAP2= MS-CHAPv2 EMD5 = EAP-MD5 ETLS = EAP-TLS
auth_extern [PEAP/EAP-FAST options]	PLABELO PLABEL PVERO PVER1 FPROV1		Defines the kind of external authentication for the EAP authentication methods TTLS, PEAP, and FAST. = none PLABEL0= PEAPLABEL0 PLABEL1= PEAPLABEL1 PVER0 = PEAPVER0 PVER1 = PEAPVER1 FPROV1= FASTPROV1
auth_ano_name [Anonymous name]	max. 64 characters [a–z, A–Z, 0–9]	[blank]	Defines the anonymous name for the unencrypted part of the EAP authentication methods TTLS, PEAP, and FAST.
auth_wpa_addon [WPA Add on]	max. 255 characters [a–z, A–Z, 0–9]	[blank]	Defines an optional WPA expansion for the EAP authentication methods TTLS, PEAP, and FAST.

Table 39: Parameter list – Backup (myUTN-800 only)

Parameters	Value	Default	Description
autoSync [Parameter backup]	on/off	on	Enables/disables the automatic backup of parameter values, passwords, and certificates to a connected SD card.

Table 40: Parameter list – Miscellaneous

Parameters	Value	Default	Description
utn_heartbeat	1–1800 [1–4 characters; 0– 9]	180	WARNING This parameter can only be used after consultation with the SEH support team.
utn_poffdura_1 ~ utn_poffdura_20	0–100 [1–3 characters; 0–9]	0	WARNING This parameter can only be used after consultation with the SEH support team.
utn_prereset_1 ~ utn_prereset_20	on/off	off	WARNING This parameter can only be used after consultation with the SEH support team.

8.4 SEH UTN Manager – Feature Overview

Which features are inactive (grayed out) in the SEH UTN Manager depends on different factors:

- · Selection list mode
 - global
 - user
- Client operating system (Windows, macOS, Linux)
- Client user account
 - administrator
 - standard user
- Write access to the *.ini file (selection list)



The administrator can use these factors to provide users with individual functions.

The following table gives an overview. It shows the features that are basically available. In addition, individual features will not be displayed or will be displayed as inactive because

- the UTN server model does not support them
- the USB device connected does not support them
- · security measures have been implemented

Table 41: SEH UTN Manager – Feature overview OS X/macOS

Table 11. Self-off Manager Teatare overview 65 // Mac65						
	Global Selection List		ı	User Selection List		
	Adminis- trator	User	Adminis- trator	User (read/ write *.ini)	User (no read/ write *.ini)	
Menu						
Selection List – Edit	✓	×	✓	\checkmark	×	
Selection List – Export	✓	×	\checkmark	×	×	
Selection List – Refresh	✓	✓	✓	\checkmark	✓	
UTN Server – Configure	✓	✓	\checkmark	✓	✓	
UTN Server – Set IP Address	✓	✓	✓	✓	✓	
UTN-Server – Activate Auto-Connect	✓	×	\checkmark	×	×	
USB Server – Set USB Port Keys	✓	×	✓	\checkmark	×	
UTN Server – Add	✓	×	\checkmark	✓	×	
UTN Server – Remove	✓	×	✓	\checkmark	×	
UTN Server – Refresh	✓	✓	\checkmark	✓	✓	
Port – Activate	✓	✓	✓	\checkmark	✓	
Port – Deactivate	✓	✓	\checkmark	✓	✓	
Port – Request	✓	✓	✓	✓	✓	
Port – Remove	✓	×	\checkmark	×	×	
Port – Create UTN Action	✓	✓	✓	✓	✓	
Port – Settings	\checkmark	\checkmark	\checkmark	✓	✓	

	Global Sele	ection List	Į.	User Selection List		
	Adminis- trator	User	Adminis- trator	User (read/ write *.ini)	User (no read/ write *.ini)	
Buttons						
Selection List – Refresh	✓	✓	✓	✓	✓	
Selection List – Edit	✓	x	✓	✓	x	
Port – Activate	✓	\checkmark	✓	\checkmark	✓	
Port – Deactivate	✓	\checkmark	✓	✓	✓	
'Program – Options' dialog						
Network Scan – Multicast Search	✓	×	✓	×	×	
Network Scan – IP Range Search	✓	×	✓	×	×	
Program – Program Update	✓	×	\checkmark	×	x	
Automatisms – Program Start (Autostart)	✓	✓	✓	✓	✓	
Automatisms – Auto-Disconnect	✓	×	\checkmark	×	x	
Selection List – Selection List Mode	✓	×	✓	×	×	
Selection List – Automatic Refresh	✓	×	✓	×	x	
'Port Settings' dialog						
Automatic device connection – Print-On-Demand	√	×	✓	×	×	
Plugin mode	✓	×	✓	×	×	

8.5 Index	S/MIME 74
	self-signed 74
	view 75
A	certificate
Acoustic Signals 42	PKCS#12 74
Ad hoc mode 25, 103	Certification authority 74
Administration	Cipher Suite 67
email 18	Client certificate 74
myUTN Control Center 9	Communication mode 25, 103
remote access 18	Complete version 13
SEH UTN Manager 11	Compound USB device 48, 90
Administrator 69	Configuration backup 85
Authentication 79	Connection
Auto-Connect 51	encryption 66
Auto-Disconnect 51	myUTN Control Center 66
Automatic connection 51	Contact 5
Automatism Print-On-Demand 52	Contact person 36
Automatisms	D
Auto-Connect 51	Default certificate 74
Auto-Disconnect 51	Default name 90
UTN Action 52	Description 36
В	Device
Backup 85	contact person 36
BadUSB 73	description 36
Bonjour 29	name 36, 90
BOOTP (Bootstrap Protocol) 21	number 90 time 35
Brochures 4	Device number 90
Browser 9	
	DHCP (Dynamic Host Configuration Protocol) 21
Button 87 restart 83	Display Panel 43
restart 05	Display panel error codes 43
C	Identifier 43
CA (certification authority) 74	Display. See display panel.
CA certificate 74	
Certificate 74	DNS (Domain Name Service) 27
CA 74	Documentation 4 further applicable documents 4
client 74	mark-ups 4
create 75	symbols 4
default 74	Downloads 5
delete 78	Downloads
management 74	E
request 77 requested 74	EAP (Extensible Authentication Protocol) 79
requesteu /4	FAST (Flexible Authentication via Secure Tunn

ing) 81	Н
MD5 (Message Digest #5) 79	Hardware address 90
PEAP (Protected Extensible Authentication Protocol) 81	HID (Human Interface Device) 73 blocking 73
TLS (Transport Layer Security) 80	Host name 36, 105
TTLS (Tunneled Transport Layer Security) 80	Name resolution 27
Email 40	HTTP/HTTPS 66
Administration 18	11111/1111113 00
event 40	I
notifications 40	Identifier 43
POP3 30	IEEE 802.1X 79
SMTP 30	Improper use 6
status 40	Infrastructure mode 25, 103
Encryption 64	ini-file 55
cipher suite 67	Wwrite access 55
email 67	Intended use 6
HTTP 67 level 67	INU Control Center 90
POP3 67	
protocol 67	IP address dynamic 21
SMTP 67	IPv4 21
SSL/TLS 64	IPv6 23
strength 67	static 21
USB connection 67	IP ports 70
web access 67	IPv4
Error codes 43	gateway 22
Error states 43	subnet mask 21
Ethernet address 90	IPv4 management VLAN 32
Event notification 40	IPv6 23
F	L
Factory default settings 87	Liability 6
Feedback	Licenses 4
acoustic 42	Login 69
visual 43	Login screen 69
File ' <default-name_parameter.txt>' 85</default-name_parameter.txt>	M
Firmware/software 84	
Frequency range 26, 103	MAC address 90
Further applicable documents 4	Maintenance 82
G	Markups 4
	Minimal version 13
Gateway 22	Monitoring 28
Global selection list 55	Multicast search 46
Guarantee 6	myUTN Control Center 9 Controls 10
	encrypted connection 66

user accounts 69	Reset 87
A.I	button 87
N	remote access 87
Network list 46	reset button 87
Notification service 40	Restart 83
Notifications 40	C
0	S
Online help 4	S/MIME certificate 74
·	Safety regulations 6
Open 4	Script 52, 58
Open source licenses 4	SD card 85
P	automatic backup 85
Parameters 94	transfer settings 85
backup 85	Security level 70
default values 87	Security mechanisms 63
edit 85	SEH UTN Manager 11, 15, 45
file 85	complete version 13
lists 94	feature overview 118
load 85	features 11, 15
see 85	install 13, 16, 17
Password 69	minimal version 13
lost 87	selection list 55
Physical address 90	start 14, 17
PKCS#12 certificate 74	versions 13
PKI (public key infrastructures) 74	without graphical user interface 58
Point-to-point connection 48	SEH UTN Service 13
POP3 (Post Office Protocol Version 3) 30	Selection List 46, 55
	Selection list
Port blocking 70	global 55
Port connection 11	user 55
activate 48 deactivate 49	Self-signed certificate 74
	Session timeout 69
Print job 52	Settings
Print-On-Demand 52	backup 85
Product information 4, 5	transfer 85
Protection mechanisms 63	SMTP (Simple Mail Transfer Protocol) 30
Q	SNMP
Quick Installation Guide 4	Community 28
Quick installation duide 4	SNMP (Simple Network Management Protocol) 28
R	password 28
Read-only user 69	SNMPv1 28
Release request 50	SNMPv3 28
Remote access 18	trap 40
Repairs 6	user 28
Requested certificate 74	SNTP (Simple Network Time Protocol) 35
nequested certificate / T	

user access 55

SSID (Service Set Identifier) 25, 103	USB device access 71
SSL (Secure Sockets Layer) 64, 66, 67	USB Port 37, 38
SSL/TLS connection 67	USB port
Status email 40	access 71
Subnet mask 21	activate 48
Symbols 4	automatic connection 51
Symbols 4	automatic disconnect 51
Т	connect 48
TCP access 70	deactivate 49
TCP port access control 70	device assignment 71
exception 70	disable 38
test mode 70	disconnect 49
Terminal 58	enable 38
Test mode 70	encryption 64
Time server 35	key control 71
	name 37
Time zone 35	power supply 38
Timeout 69	status information 54
TLS (Transport Layer Security) 64, 66, 67	virtual 48
Trap 40	User account 69
U	administrator 69
	read-only user 69
Update 84	User name 69
USB connection 39	User selection list 55
automate 51	UTC 35
automatic 51 automatic disconnect 51	UTN access 70
disconnect 49	UTN Action 52
encryption 39, 48, 64	UTN port 39, 70
point-to-point 48	encrypt 39
scenarios 52	SSL port 39
unencrypted 39	unencrypted 39
USB data transfer	UTN SSL port 64
encryption 64	utnm 58
USB device	commands 58
access 71	return value 61
automatic connection 51	syntax 58
automatic disconnect 51	V
automatisms 51	V
compound 48, 90	Version number 84
connect 45, 48	Virtual USB ports 48
disconnect 49	VLAN (Virtual Local Area Network) 32
find 46	IPv4 client VLAN 33
HID (Human Interface Device) 73	IPv4 management VLAN 32
request 50	USB ports 32
status information 54	

```
W
Warnings 6
Website 5
WLAN 25
    authentication method 26
    channel 26
    encryption method 26
    mode 25
    Network name 25
    roaming 25
    SSID 25
    standards 25
```

Zeroconf 21